

FITTING INSTRUCTIONS TO BE FITTED BY A QUALIFIED TECHNICIAN



THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:

Secondary Alternator Cover Part No. EC-V4S-SF-2020-1-GBR / Secondary Clutch Cover Part No. EC-V4S-SF-2020-2-GBR Brake Lever Guard Part No. BLG-14-A160-GBR



SECONDARY ALTERNATOR COVER PART NO. EC-V4S-SF-2020-1-GBR

- 1 Remove the 4 standard bolts as shown as bolt position 1, 2, 3 & 4.
- 2 Place the secondary alternator cover against the standard alternator.
- 3 Insert the 4 supplied bolts and tighten to a maximum of 10Nm as per Manufacturer's recommendations.

DO NOT OVERTIGHTEN







Bolt 4 M6X35A2-TORX - 10Nm

Bolt 3 M6X30A2-TORX -10Nm

SECONDARY CLUTCH COVER PART NO. EC-V4S-SF-2020-2-GBR

- Remove the 4 standard bolts as shown as bolt position 1, 2, 3 & 4.
- Place the secondary clutch cover against the standard clutch.
- 3 Insert the 4 supplied bolts placing the two supplied Copper Washers on <u>Bolt 2</u> as shown in <u>Fig. 1</u>.
- 4 Tighten to a maximum of 10Nm as per Manufacturer's recommendations.
 DO NOT OVERTIGHTEN











FITTING INSTRUCTIONS TO BE FITTED BY A QUALIFIED TECHNICIAN



UNIVERSAL BRAKE LEVER GUARD WITH 14mm INSERT - 15mm PART NO. BLG-14-A160-GBR

- 1 Remove existing bar end and replacing it with supplied bar end.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.



