

EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Honda CBR1000RR-R / SP Bar Ends

Installation Instructions




Kit Contents PRN014778


- (A) 2 x Bar Ends
- (B) 2 x M6 x 50mm Caphead

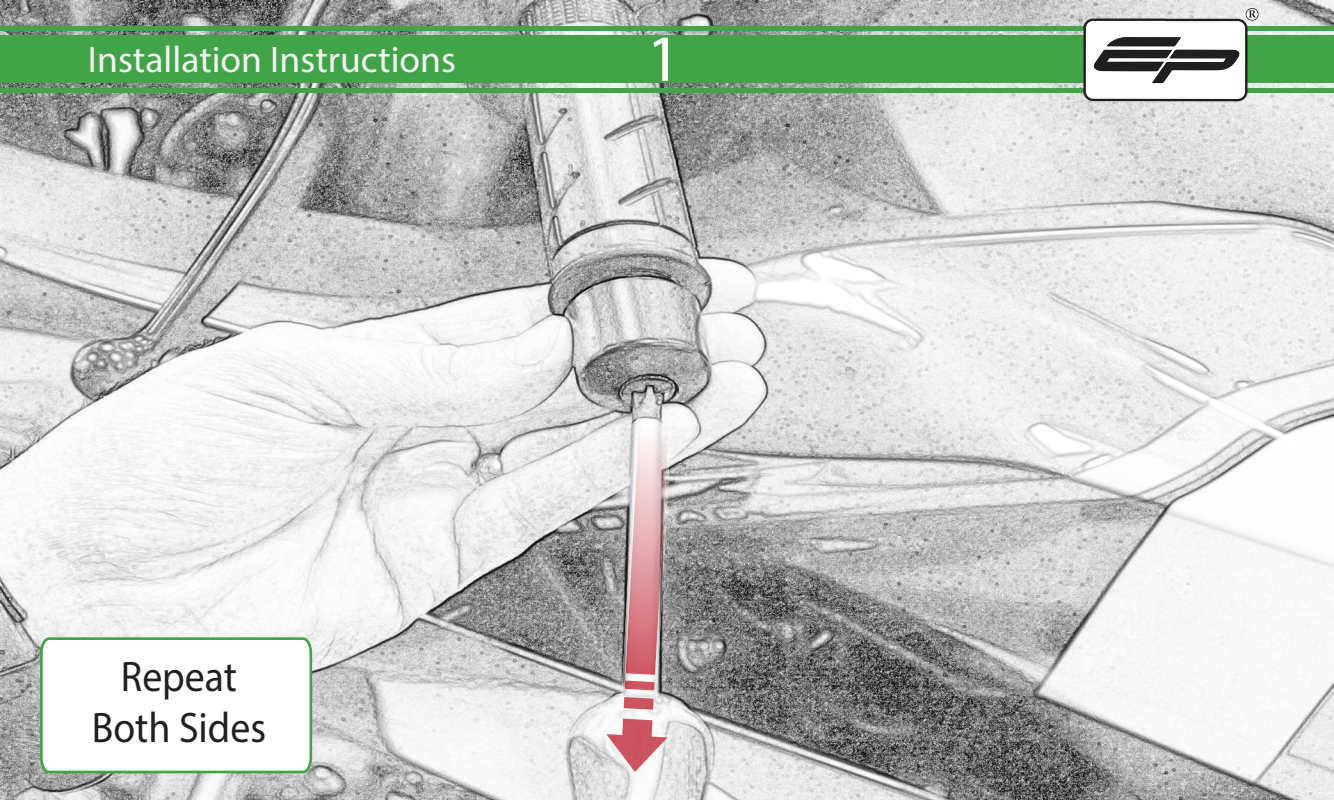


Repeat
Both Sides

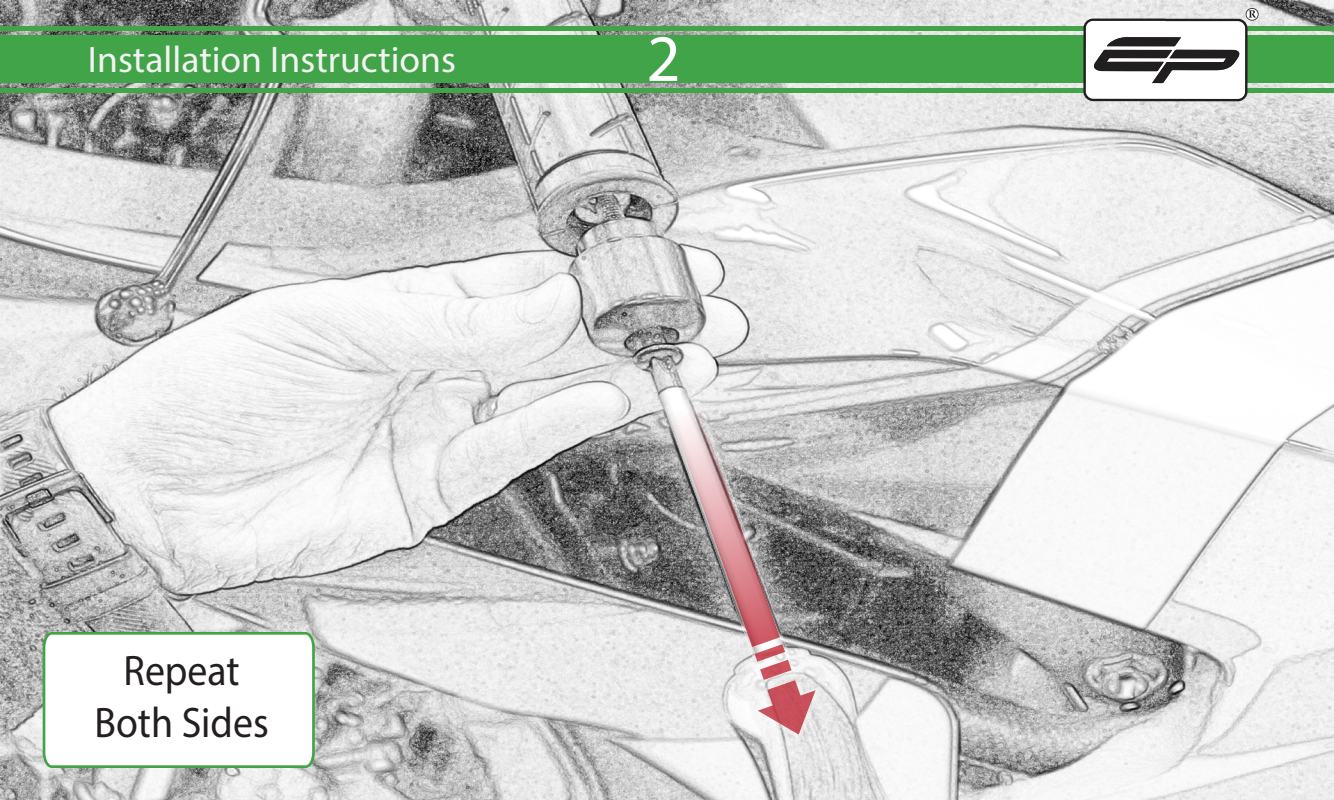

Repeat
Both Sides

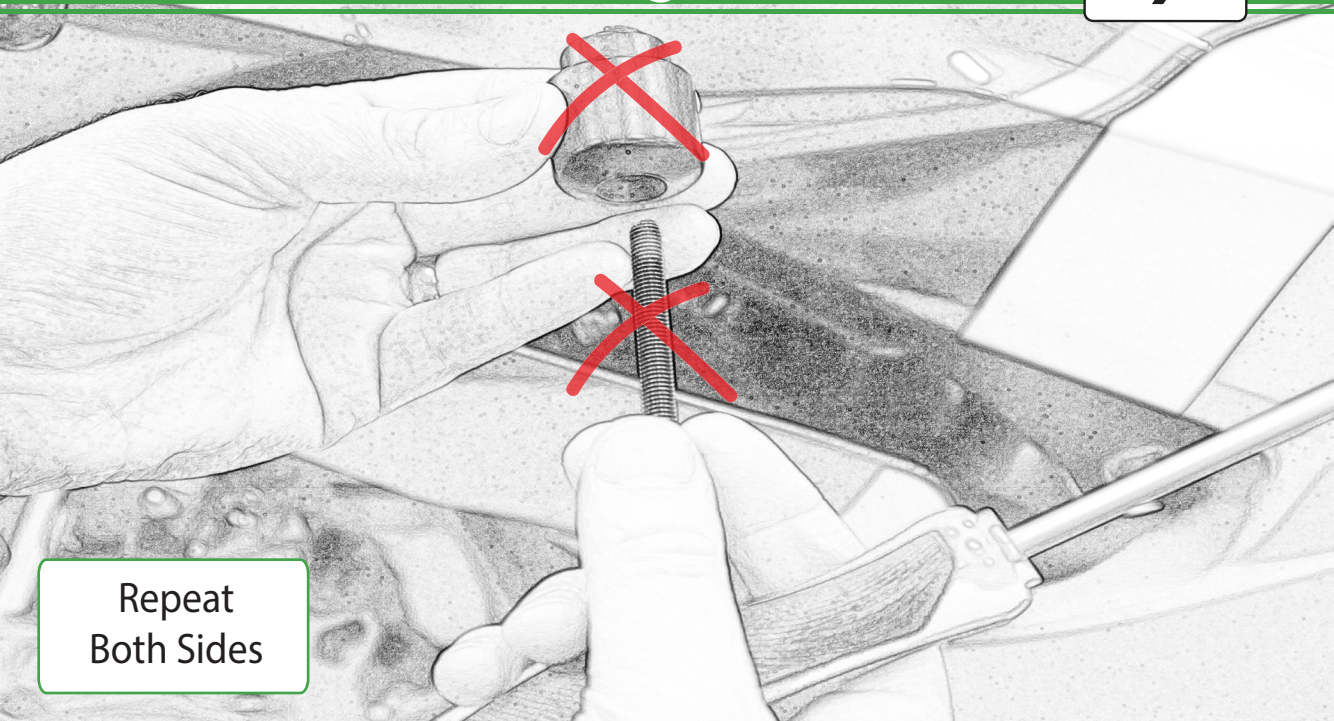

Repeat
Both Sides

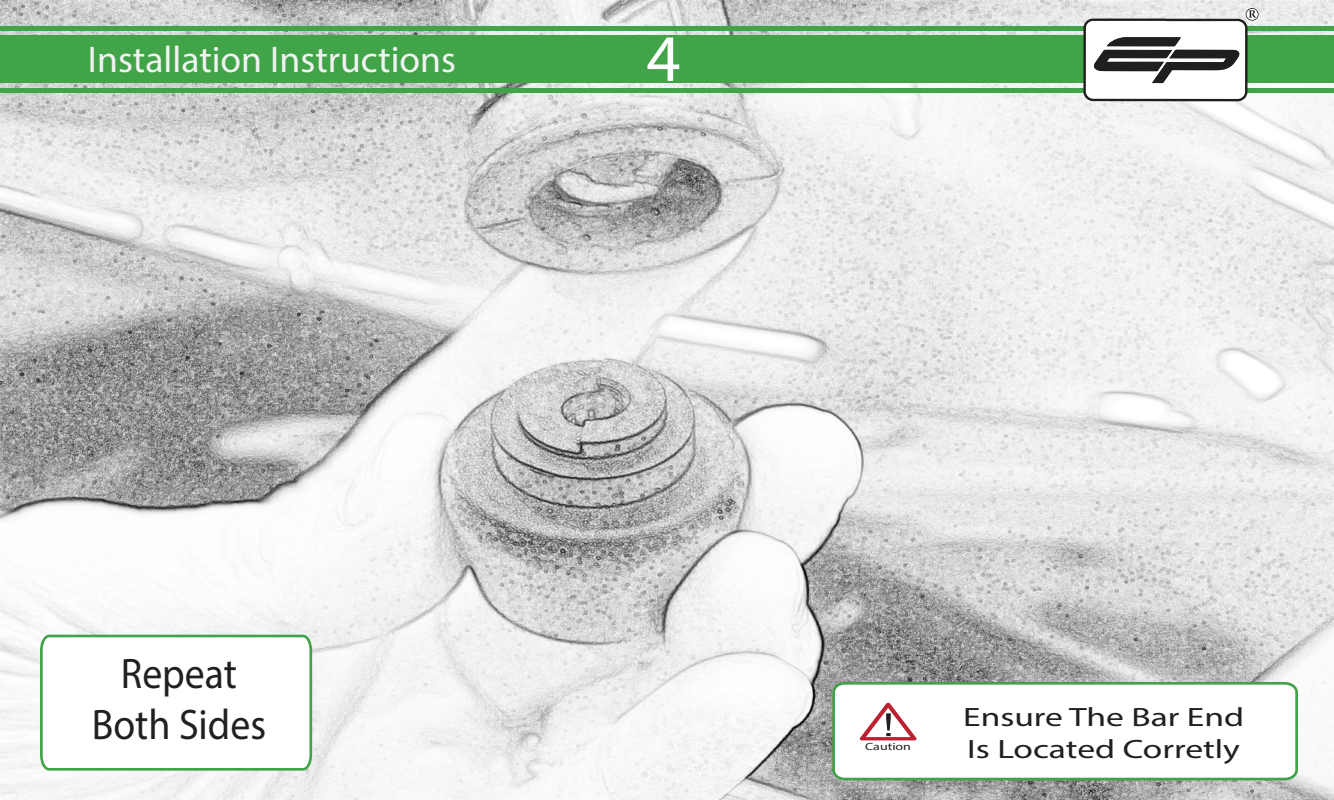


Repeat
Both Sides




Caution


Ensure The Bar End
Is Located Corretly

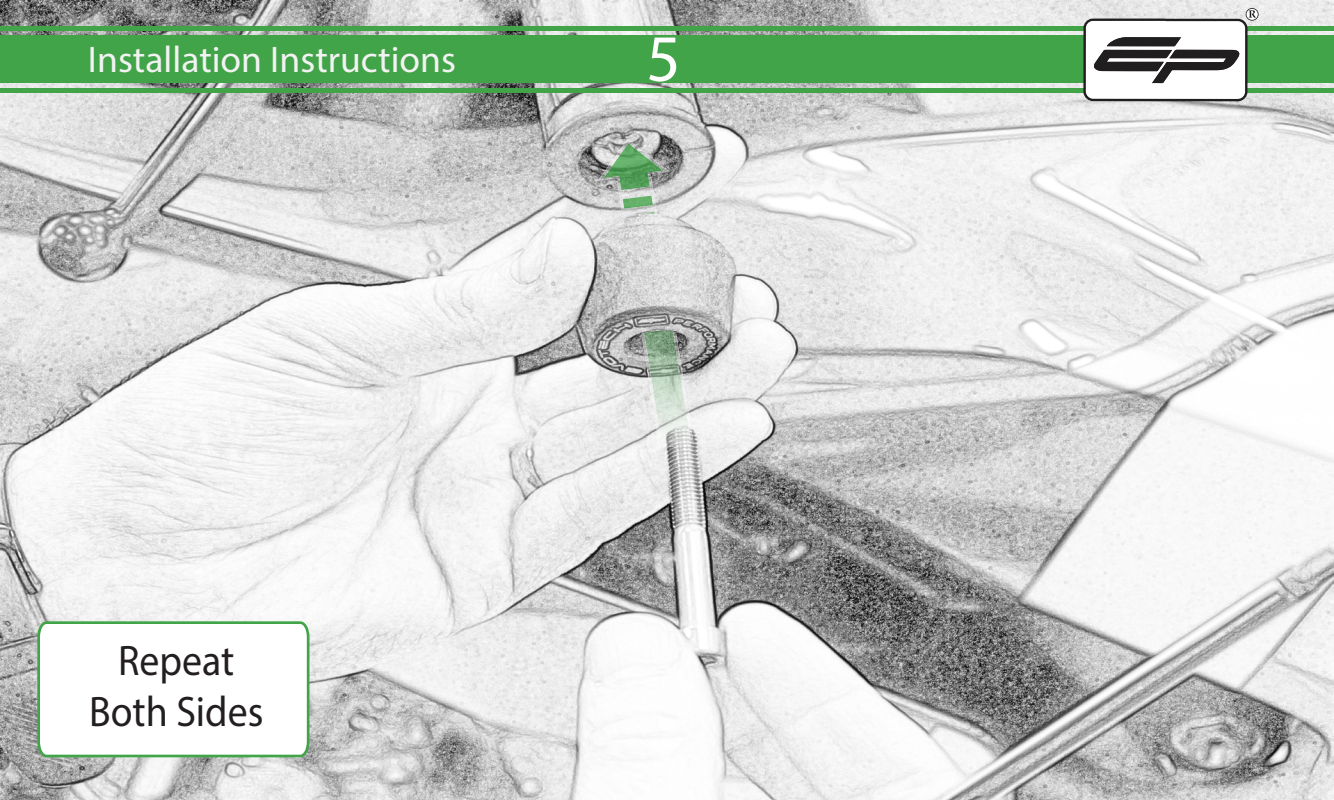

Repeat
Both Sides

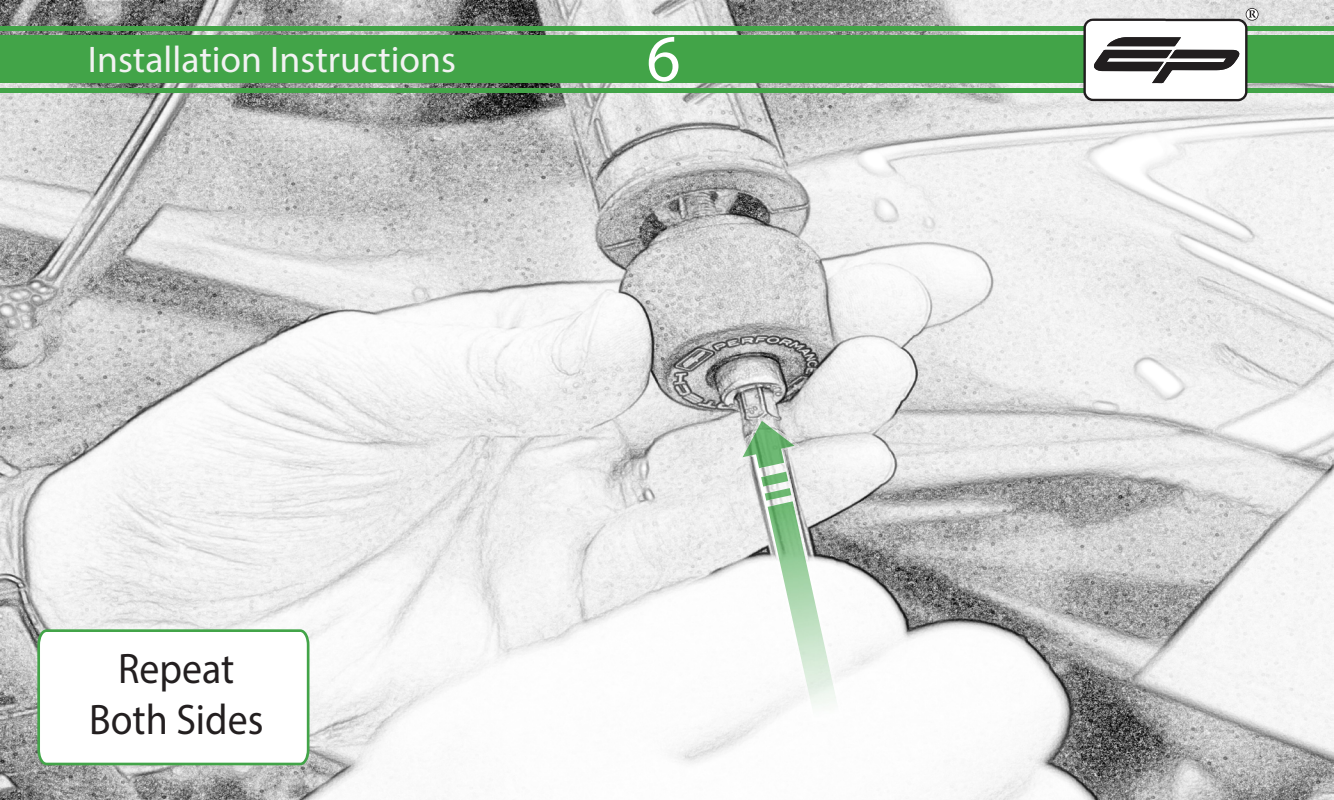

Repeat
Both Sides

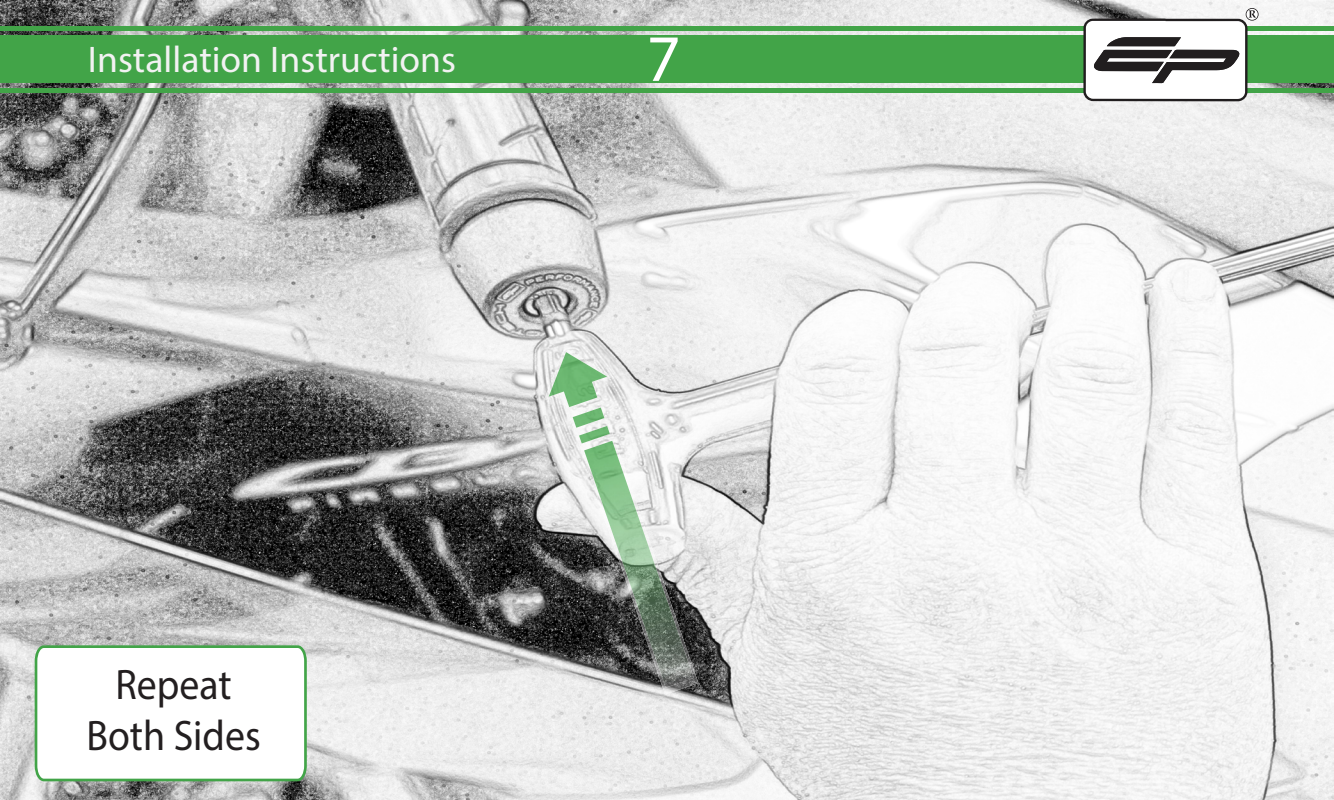

Repeat
Both Sides



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Before riding the motorcycle ensure the throttle has adequate clearance for rotation.

Plus has free play and doesn't touch our product.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com