

# POWERBRONZE

## FITTING INSTRUCTIONS

### Beak










## Kit 25

KTM 1290 SUPER ADVENTURE S 21+  
Part No.350-KT105

Qty	Description	Office Use	Item No
1	Beak	-	1
2	Spacer	34	2
2	M5x25 Flange Screw	204	3
4	M5 X 1.2 X 15OD WASHER - BLACK	307	4
2	M6x40 flange screw	#38A	5
2	SPACER - 6.3 ID x 15 OD x 10 LONG (BLACK NYLON)	#45	6
2	SPACER - 5.3 ID x 10 OD x 10 LONG (BLACK NYLON)	#101	7
4	Grommets	#135	8
1	Small Powerbronze Badge	#158	9



### Contents (Not To Scale)

				<b>REQUIRED:</b> Set of spanners Allen Keys
				
				


Prior to using this product, please refer to our Terms and Conditions on the website.

When fitting your Powerbronze product it will help you to use your motorcycle manual for disassembly and reassembly of your motorcycle. You will need a set of spanners, sockets, Allan keys & screwdrivers.


Taking a few moments to check the parts list and familiarising yourself with the kit will make fitting easier. Remember; whenever a part is fixed by using several nuts, bolts or screws they should be left loose until all are in place and then tightened

## Remove protective from beak (1).

1. Fit grommets (8) into holes on beak (1). Then fit metal spacers (2) into centre holes and nylon spacers (7) into outer holes as shown in Fig.1

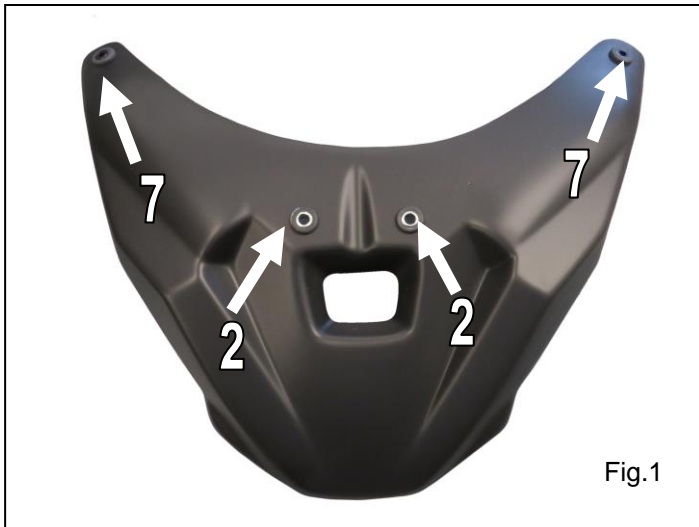



2. Remove screws as indicated in Fig.2 & 3.

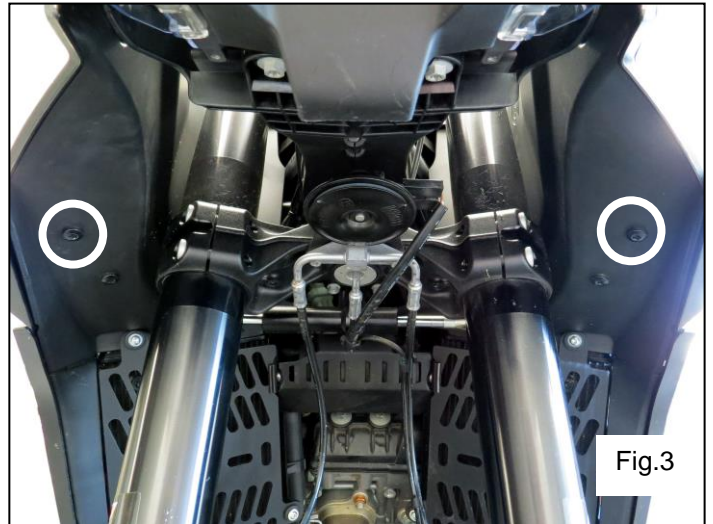

3. Position 1 M5 washer (4) behind screw head of M5x25 flange screws (3) on inside of beak in outer holes as shown in Fig.4 and then position another M5 washer (4) on threads of M5x25 screws as shown in Fig.5



5. Position 10 mm spacers (6) on top of beak and fit using M6 x 40 flange screws (5) as shown in Fig. 6 & 7

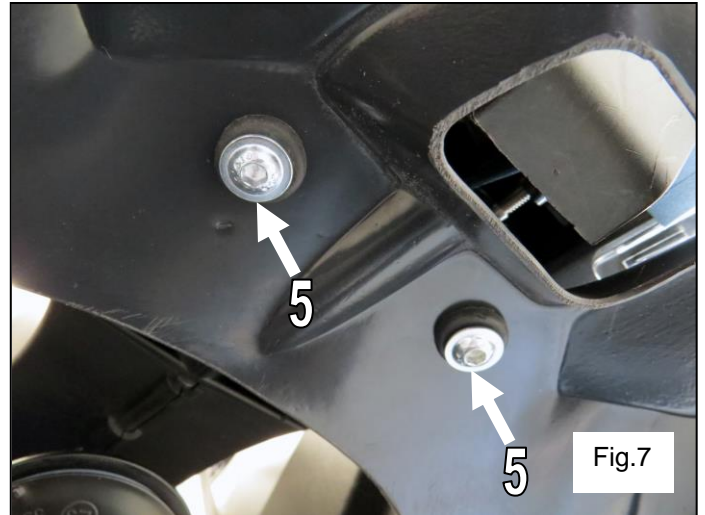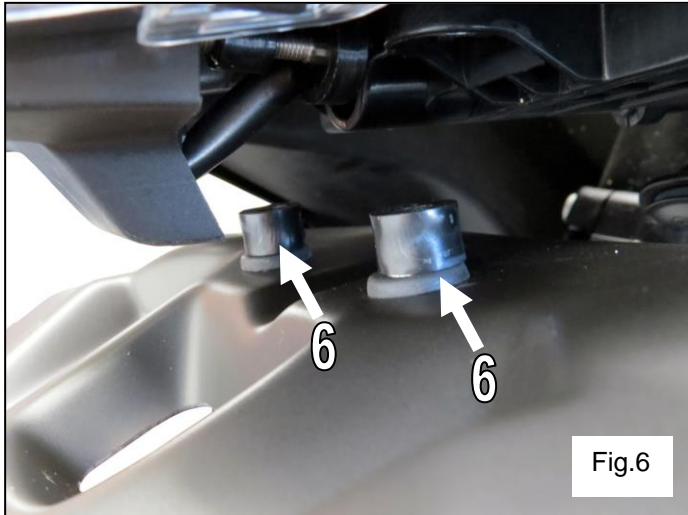

**IMPORTANT: Always check alignment of beak and mounting bolt tension periodically.**