
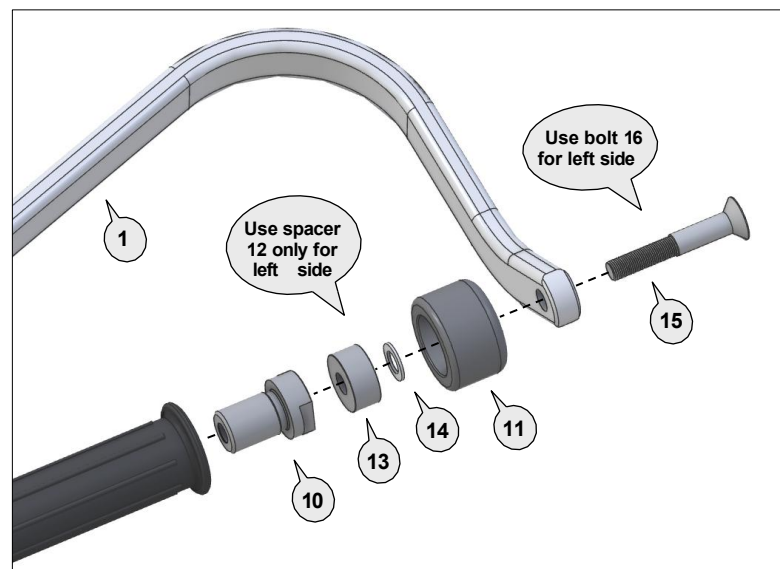


FITTING INSTRUCTIONS for...

- YAMAHA XTZ700 Tenere World Raid ('26 on)

Preparation



Remove the original handguards (if fitted) and original bar end weights.

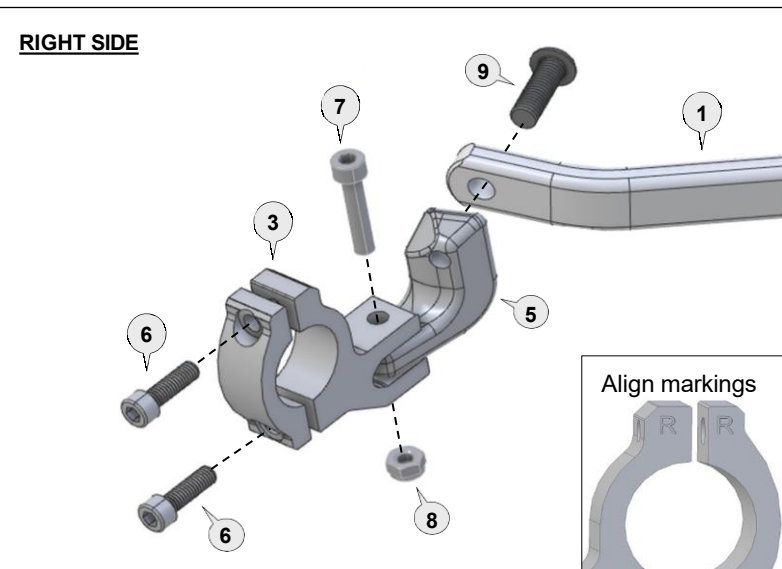

NOTE:

If heated grips are installed, may require 3mm of washers between bar-end weight and spacer, to ensure clearance between the weight and twist grip.

Bar Side View

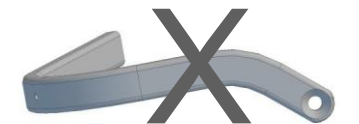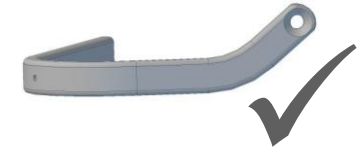

Installation for Right Side.

Repeat for Left side with applicable parts. (Use spacer (13) without a washer and bolt (16) on left side)

- Loosely assemble the clamp (3) and connector (5) to the handlebar as per diagram.
- Attach the handguard backbone (1) with applicable parts to the handlebar end then to the clamp connector (5)
- Position backbone so it is horizontal when viewed from the side. Tighten all bolts in the following order: (15), (9), (6) simultaneously (to keep an even gap) then (7).
- Additional washers are supplied if extra clearance is required on the throttle side.

Important: Use the specified torque setting over page.

Personalise Your Protection

Guard options sold separately

JET	JET-003
VPS	VPS-003
Storm	STM-003
CARBON	BCF-003



Phone: +61 (0)2 4271 8244
Email: info@barkbusters.net

1 Aluminium Bar  PN: BAR-V067 Pcs. 1 Left & 1 Right	2 Multi Fit Clamp LEFT  PN: MFC-L Pcs. 1	3 Multi Fit Clamp RIGHT  PN: MFC-R Pcs. 1	4 Clamp Connector  PN: CP8-L Pcs. 1	5 Clamp Connector  PN: CP8-L Pcs. 1	6 Socket Head Bolt 20mm  PN: M6x20SHCSZP Pcs. 4	7 Socket Head Bolt 30mm  PN: M6x30SHCSZP Pcs. 2	8 Nylock Nut  PN: M6LN Pcs. 2
9 Button Head Bolt 25mm  PN: M8x25BHCSZP Pcs. 2	10 Treaded insert  PN: BESF2 Pcs. 2	11 Bar End Weight  PN: BEW-35 Pcs. 2	12 Spacer 5mm  PN: SP05-20-10 Pcs. 1	13 Spacer 7mm  PN: SP07-20-8 Pcs. 1	14 Washer  PN: M8FW-SS Pcs. 3	15 Flat Head Bolt 50mm  PN: M8x50FHCSZP Pcs. 1	16 Flat Head Bolt 45mm  PN: M8x45FHCSZP Pcs. 1

CAUTION:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician. Rideworx accepts no liability for damages caused by improper mounting. All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specified in the below table. After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

WARNING:

It is important there is a working clearance (approx 3mm) between the throttle grip end and the handguard to ensure a free closing throttle. Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly. Check periodically that all bolts are tight.

Recommended Torque Settings	
M6	10 Nm (7.4 lbf ft)
M8	28 Nm (20.7 lbf ft)
M16 (item 9)	40Nm (15.5 lbf ft)

RIDEWORX

Phone: +61 (0)2 4271 8244
 Email: info@barkbusters.net
 Web: www.barkbusters.net



Barkbusters

Disclaimer:

A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.