




SHAD

BCN

HONDA GB 350 S '25-

CAFE RACER
H0GB35SR

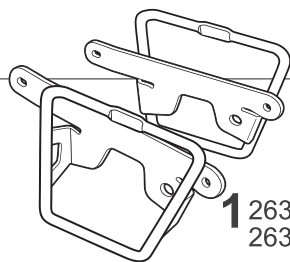

1 263808 x1 →
263809 x1 ←

2 261502 x2
Ø16 Ø9 x 42

3 303045 x4
Ø8

4 303027 x4
Ø8

5 304172 x4
M8x70 DIN 7380

6 260564 x2
Ø16 Ø9 x33

WARNING!

GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned. Check tightness every 4 months.





E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado. Repasar apriete cada 4 meses.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist. Alle 4 Monate Drehmoment überprüfen.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato. Controllare il serraggio delle viti ogni 4 mesi.

F Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté. Vérifier le serrage des vis tous les 4 mois.

ATTENTION: For a full equip assembly, mount the Top master before the Cafe Racer

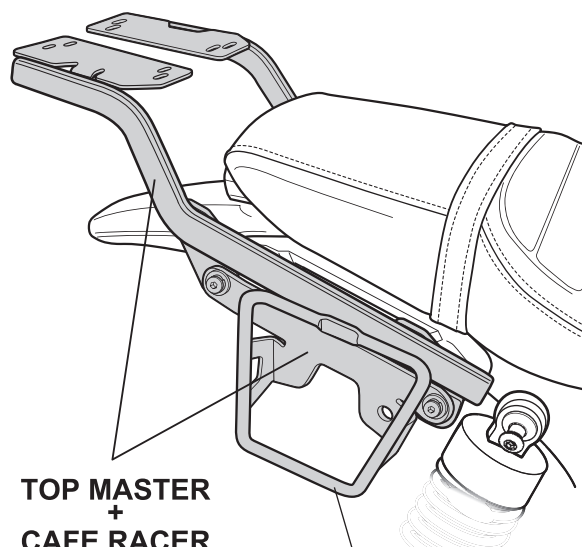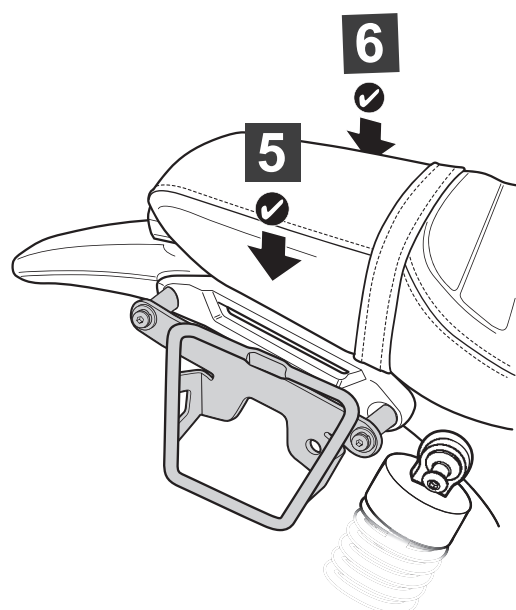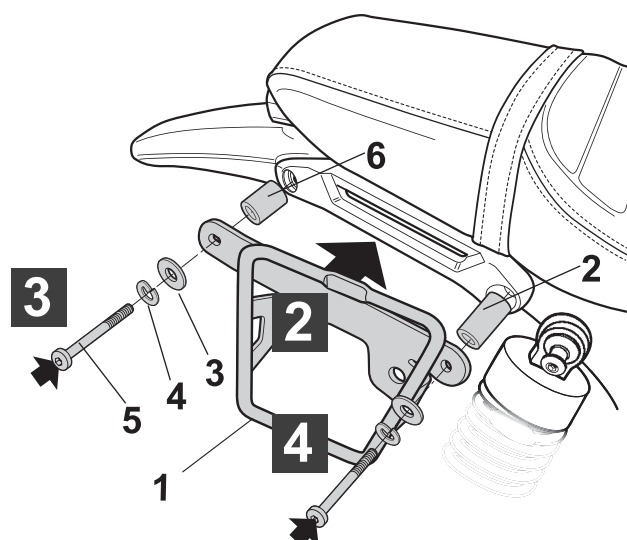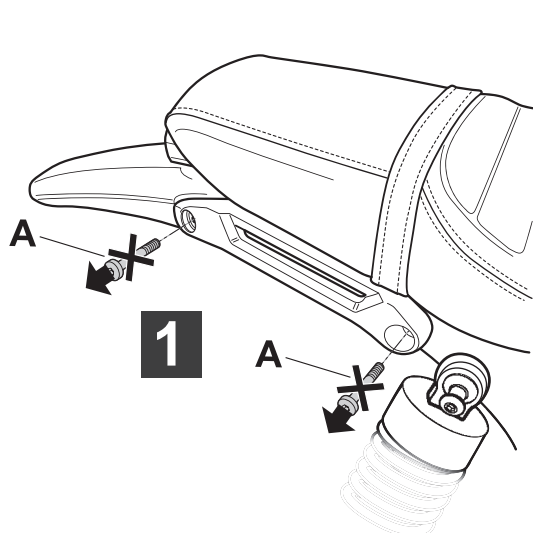

TOP MASTER
+
CAFE RACER

