

NOTICE DE MONTAGE

**PARE-BRISE ERMAX
ADAPTABLE SUR
CRUISYM 125/300 2018 →∞**
Durée estimée de montage : 15 min





Kit de fixation


- 4 vis noires BHc 6x15 (grosse tête)
- 2 pattes de fixation en aluminium
- 4 rondelles plastiques Ø5
- 4 rondelles plastique extra fines Ø6
- 4 inserts caoutchouc large
- 4 vis noires BHc 5x25 (grosse tête)

Montage

- Retirer les 2 vis intérieures de fixation des caches situés sur la bulle, afin de les déclipser.

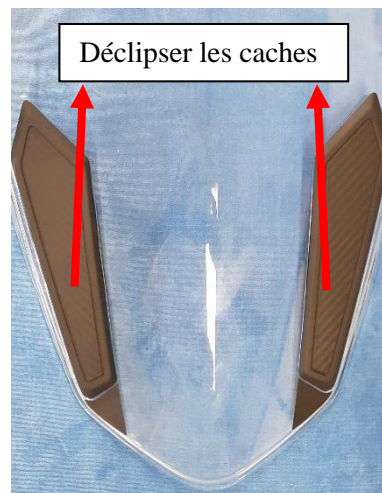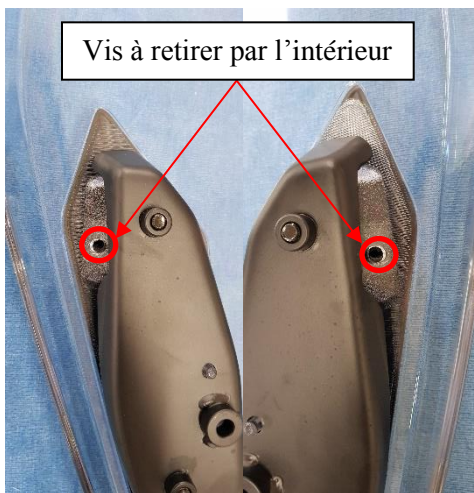

- Monter les deux pattes de fixation fournies à l'aide des 4 vis BHc 6x15 et des rondelles extra fines Ø6 en plaçant les 4 inserts caoutchouc larges aux emplacements prévus sur les extérieurs des pattes :

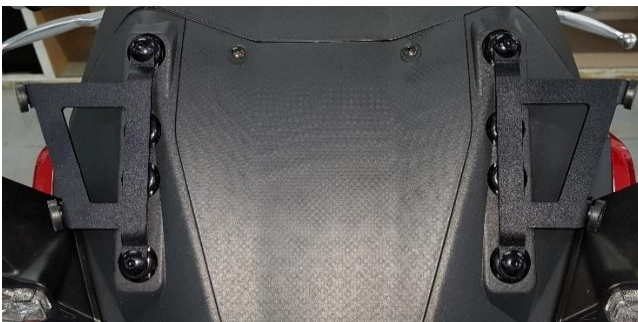

- Positionner et ajuster la bulle sur les pattes de fixation puis la fixer avec les 4 vis noires BHc 5x25 ainsi que les 4 rondelles plastiques Ø5 fournies.

« ATTENTION »

- * Tout accessoire monté ne sera plus considéré comme neuf et ne sera **ni repris ni échangé**.
- * Les accessoires Ermax sont conçus pour des **montes d'origine**. Ils ne seront pas garantis s'ils sont utilisés dans d'autres conditions.
- * En raison des tolérances de fabrication des véhicules, indépendantes de notre volonté, certains produits Ermax peuvent nécessiter des ajustements lors de la fixation.
- * Les marques de fabricant de motos citées sont indiquées exclusivement comme référence nécessaire à la destination des accessoires Ermax.
- * Attention aux serrages excessifs qui pourraient abîmer ou casser nos accessoires en plastique et les vis en aluminium.
- * Les bulles abîmées par un **lavage inadéquat** ne sont pas garanties (dissolvant, essence, détergent, produits abrasifs, corrosifs...). Essuyer immédiatement les liquides de frein ou de batterie qui pourraient déborder sur les accessoires.



FITTING INSTRUCTIONS


**ERMAX WINDSHIELD
ADAPTABLE ON
CRUISYM 125/300 2018 →∞**
Estimated mounting time : 15 min

Fitting kit


- 4 black screws BHc 6x15 (big head)
- 2 aluminium fitting brackets
- 4 plastic washers Ø5
- 4 extra-thin plastic washers
- 4 wide rubber inserts
- 4 black screws BHc 5x25 (big head)

Fitting instructions

- Remove the 2 inner screws securing the covers on the screen to unclip them.

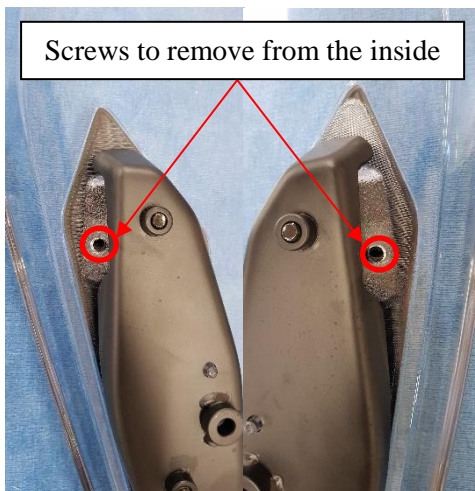

- Fit the 2 supplied fitting brackets with the 4 screws BHc 6x15 and the extra-thin washers Ø6 by placing the 4 wide rubber inserts at the locations provided on the outside of the brackets:

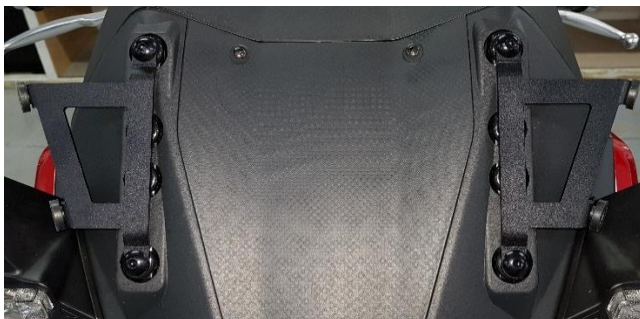

- Place and adjust the position of the screen on the fitting brackets and then screw it with the 4 black screws BHc 5x25 and the 4 plastic washers supplied.

« CAUTION »

- * Accessories gone up on the motorbike will not be any more considered as new and will be **neither retaken nor exchanged**.
- * Ermax accessories are foreseen for **original equipments**. They will not be guaranteed if they are used in others conditions.
- * Due to vehicles made tolerances, beyond our control, some Ermax products might need adjustments to fit.
- * The mentioned label of motorbikes's manufacturers are indicated exclusively as a reference to Ermax accessories.
- * Care to excessive clampings which may damage or break our plastic accessories and aluminium screws.
- * Screens damaged by an **inadequat washing** are not guaranteed (abrasive, corrosive ... products, solvent, thinner, benzine ...). Wash immediately brake or battery fluid which may flow on accessories.