


# SHAD

KTM 390 ADVENTURE '20-

3P KITS K0DK30IIF

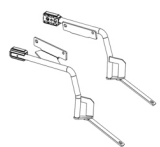

1 K0DK30IIF-IM x1



2 K0IDK30IF-02 x1  
SUPPORT PLATE REAR




3 K0IDK30IF-02 x1  
SUPPOR PLATE FRONT



4 FOD012 x4  
BUSHING Ø16 Ø10X10



5 EOD028 x12  
FLAT WASHER M8



6 EOD017 x4  
BOLT M8X40 DIN912



7 EOD014 x4  
BOLT M8X25 DIN912



8 EOD034 x4  
NUT NYLON M8



9 EOD021 x2  
BOLT M8X60 DIN912



10 FOD011 x2  
BUSHING Ø16 Ø10X5



11 EOD053 x6  
SPLIT LOCK WASHER M8

## WARNING!

**(GB)** Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned. Check tightness every 4 months.

**(E)** No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado. Repasar apriete cada 4 meses.

**(D)** Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist. Alle 4 Monate Drehmoment überprüfen.

**(I)** Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato. Controllare il serraggio delle viti ogni 4 mesi.

**(F)** Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté. Vérifier le serrage des vis tous les 4 mois.

