



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com

Honda CBR1000RR-R


Front Spindle Bobbins


Installation Instructions




Kit Contents PRN014763

- (A) 1 x Spindle Bolt
- (B) 1 x Spindle
- (C) 1 x Spacer Left
- (D) 1 x Spacer Right
- (E) 2 x Bobbin Head
- (F) 2 x M8 Washer
- (G) 2 x M8 Nut

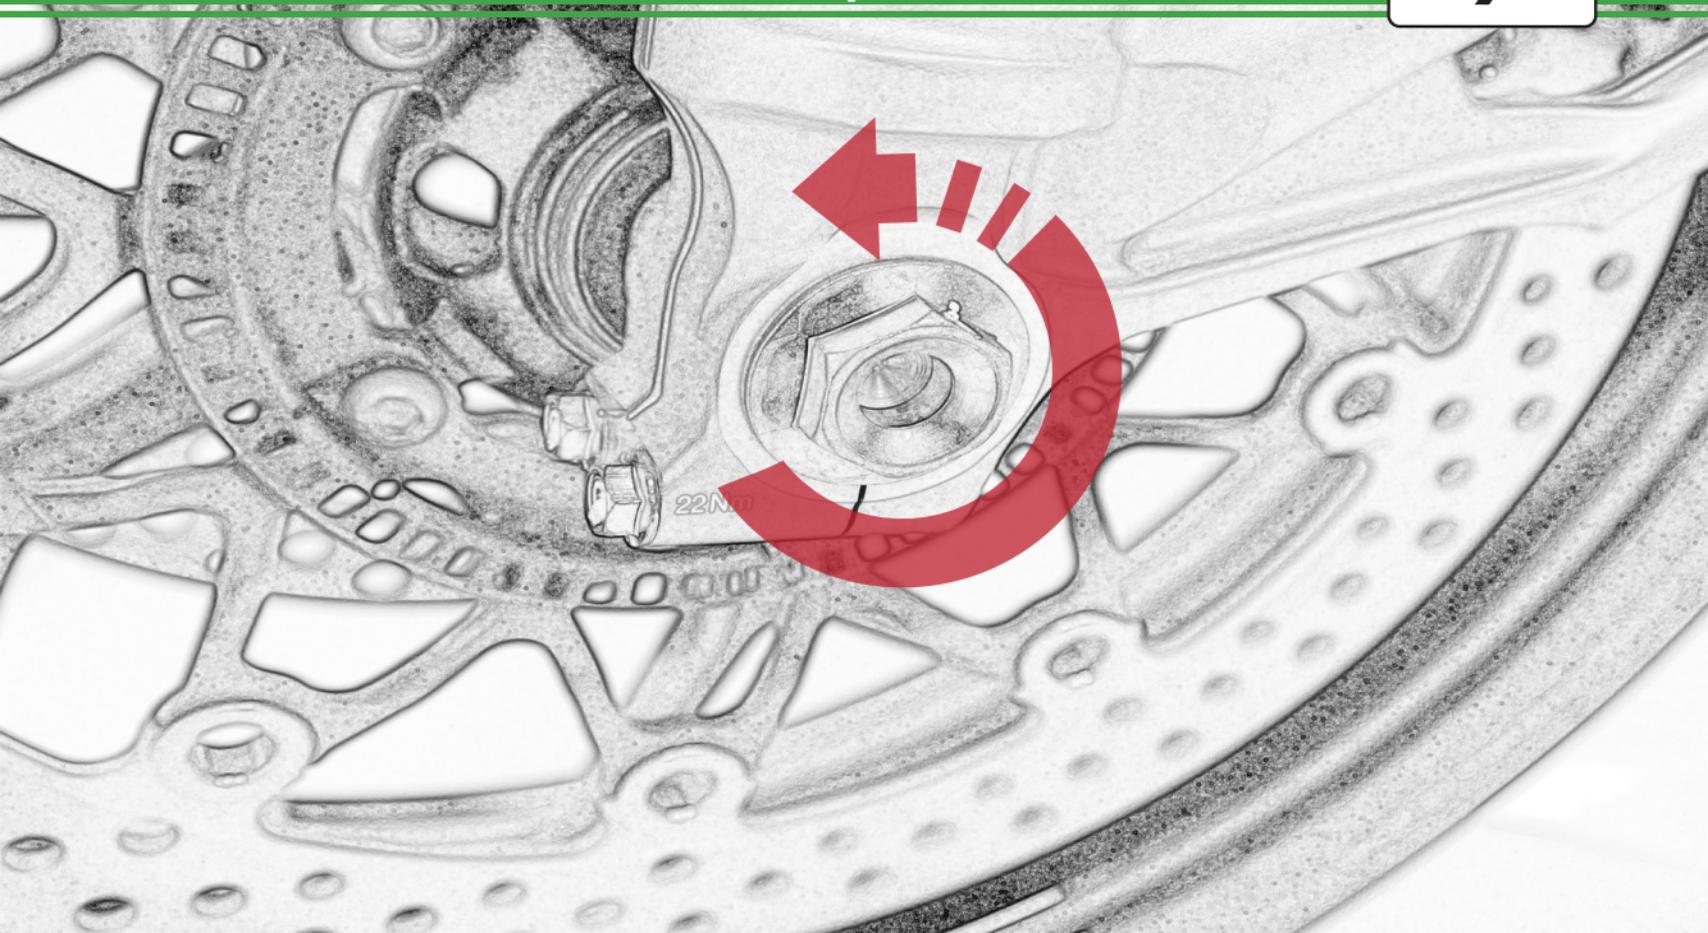

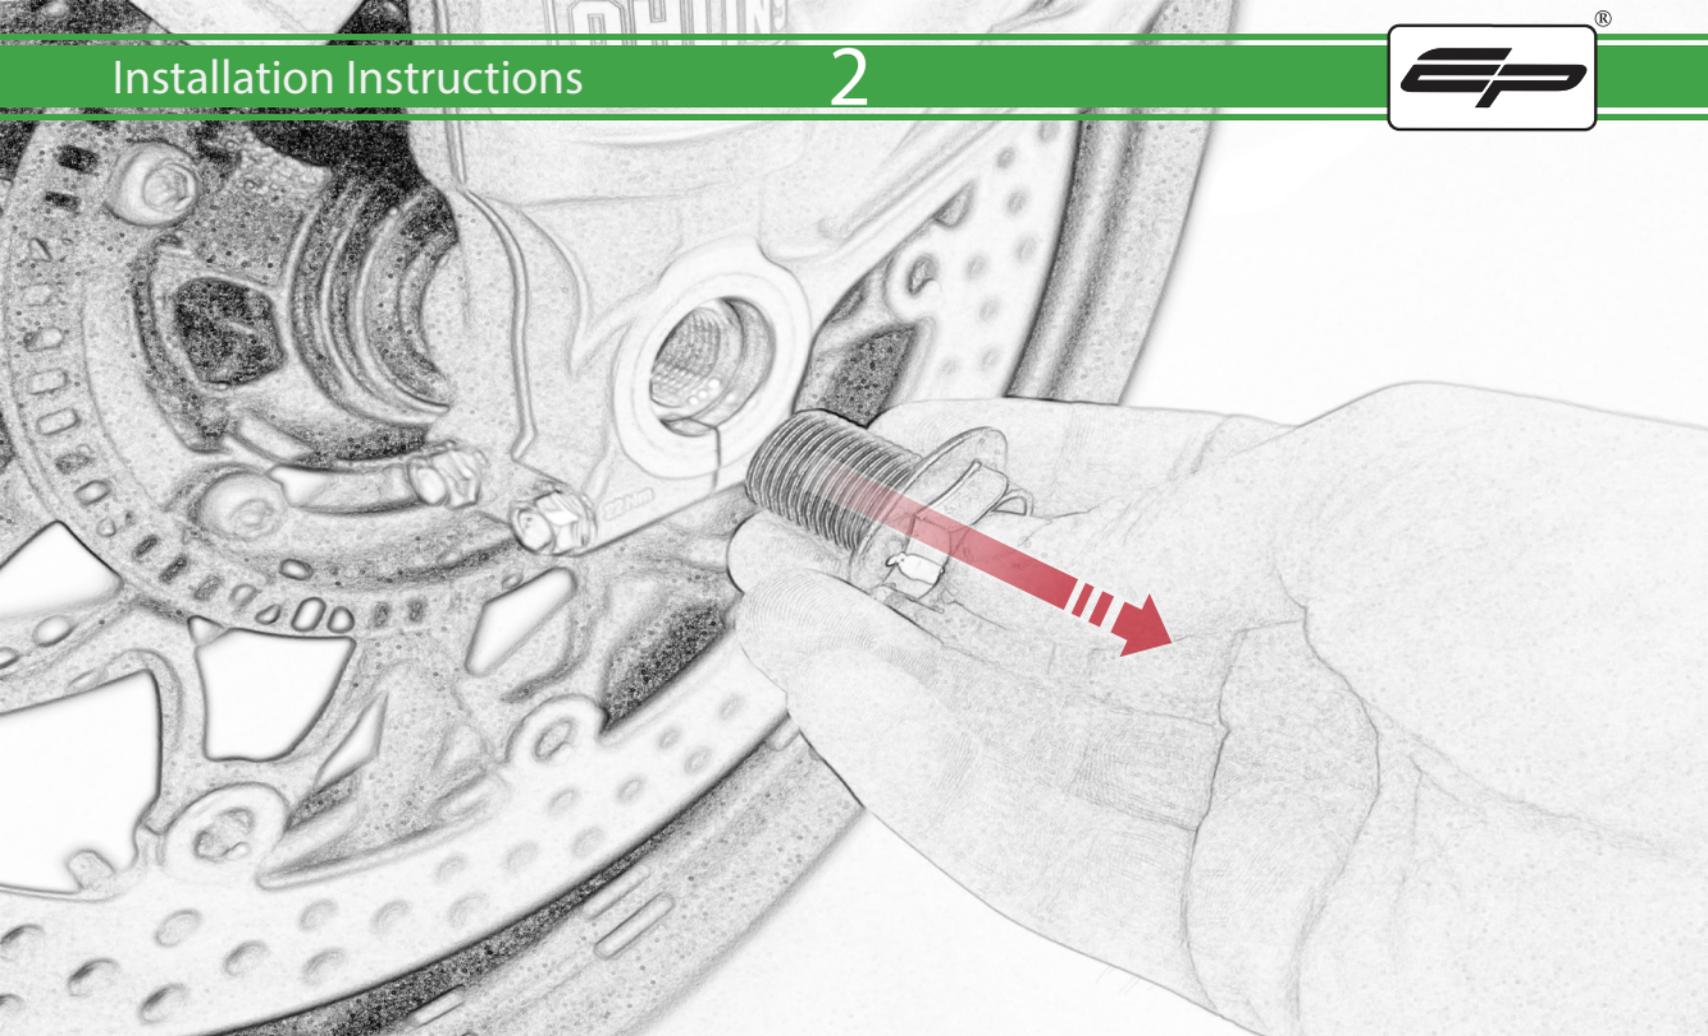

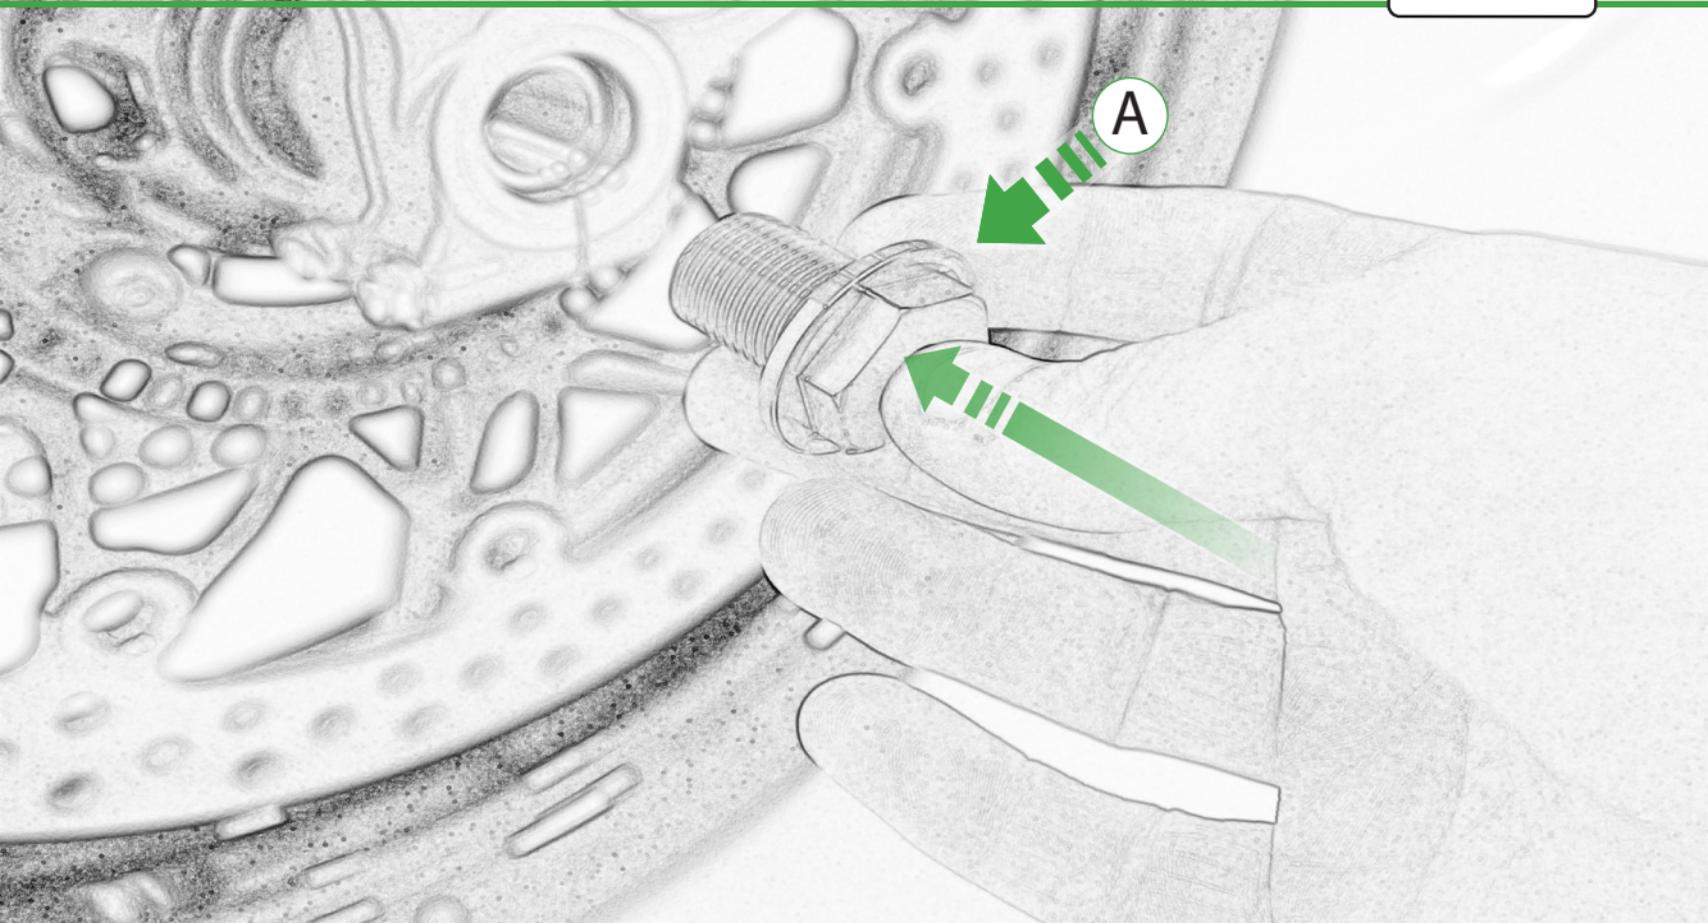





1/2 Beta 920/55





Fully Tighten
25Nm

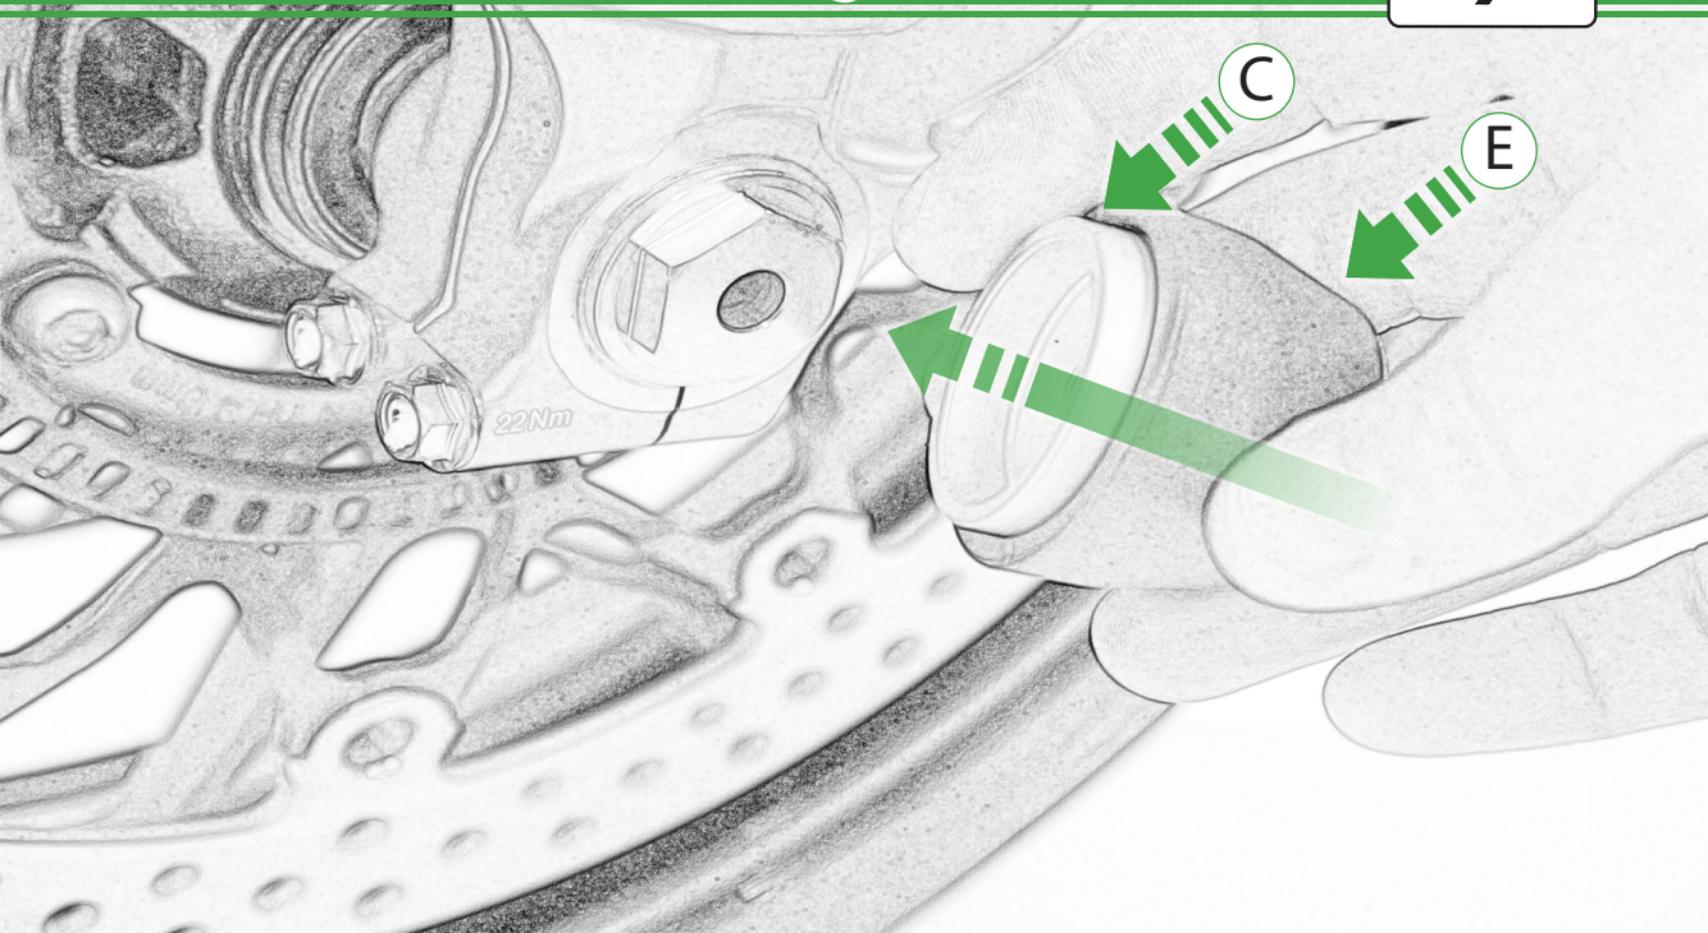


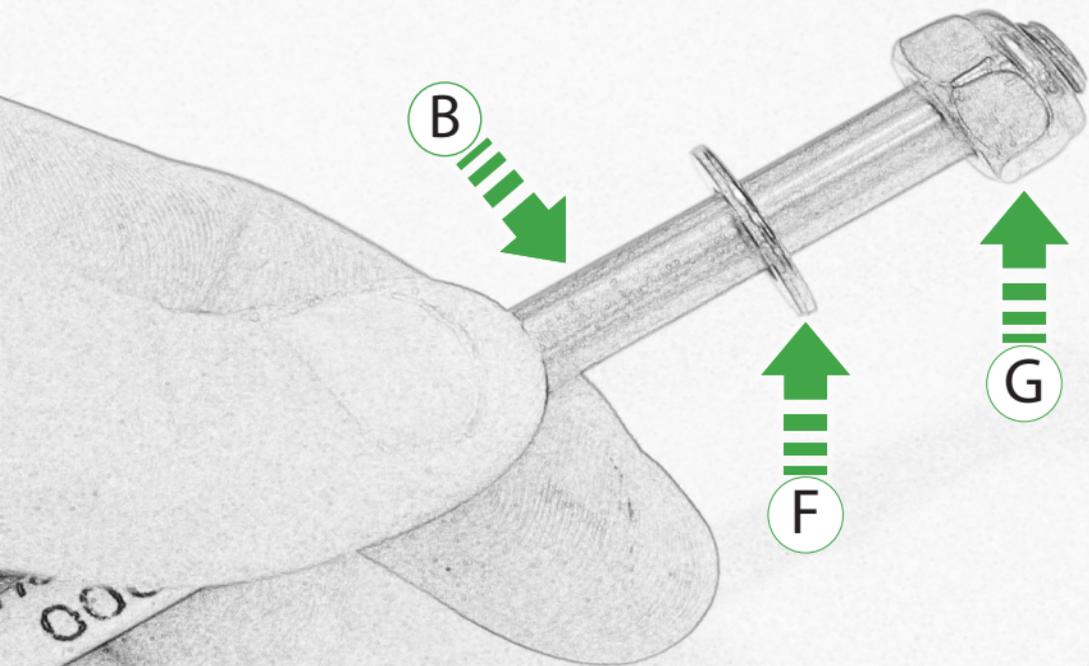




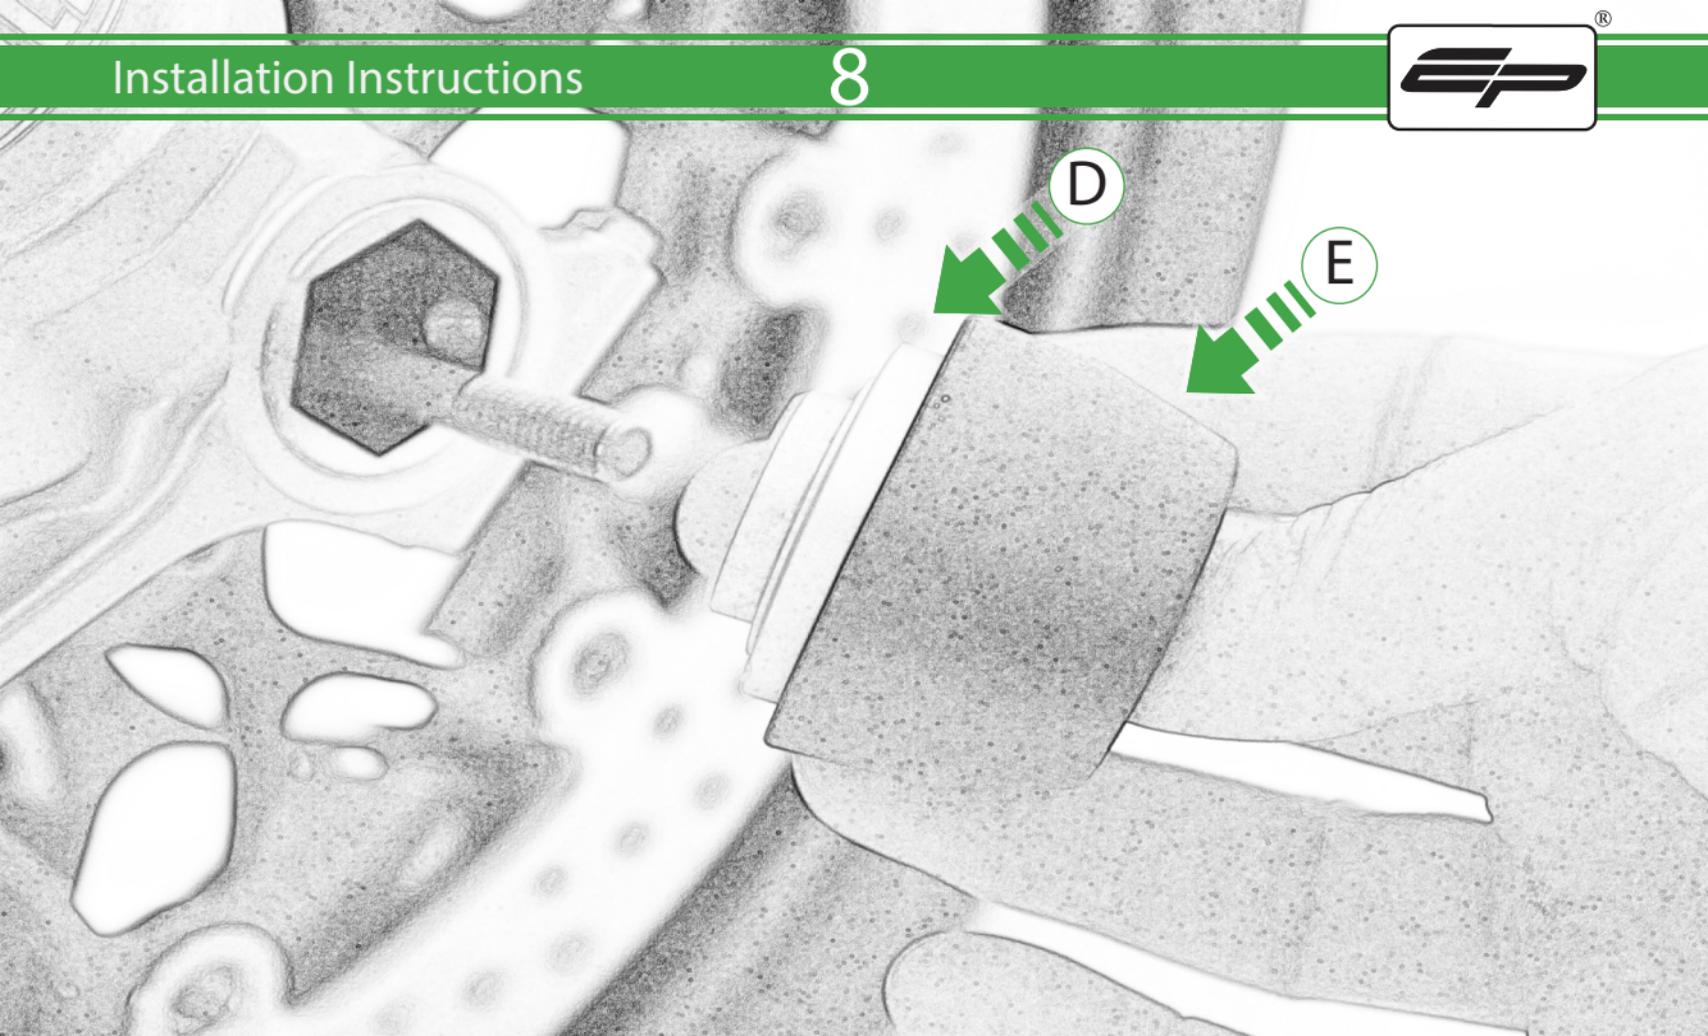

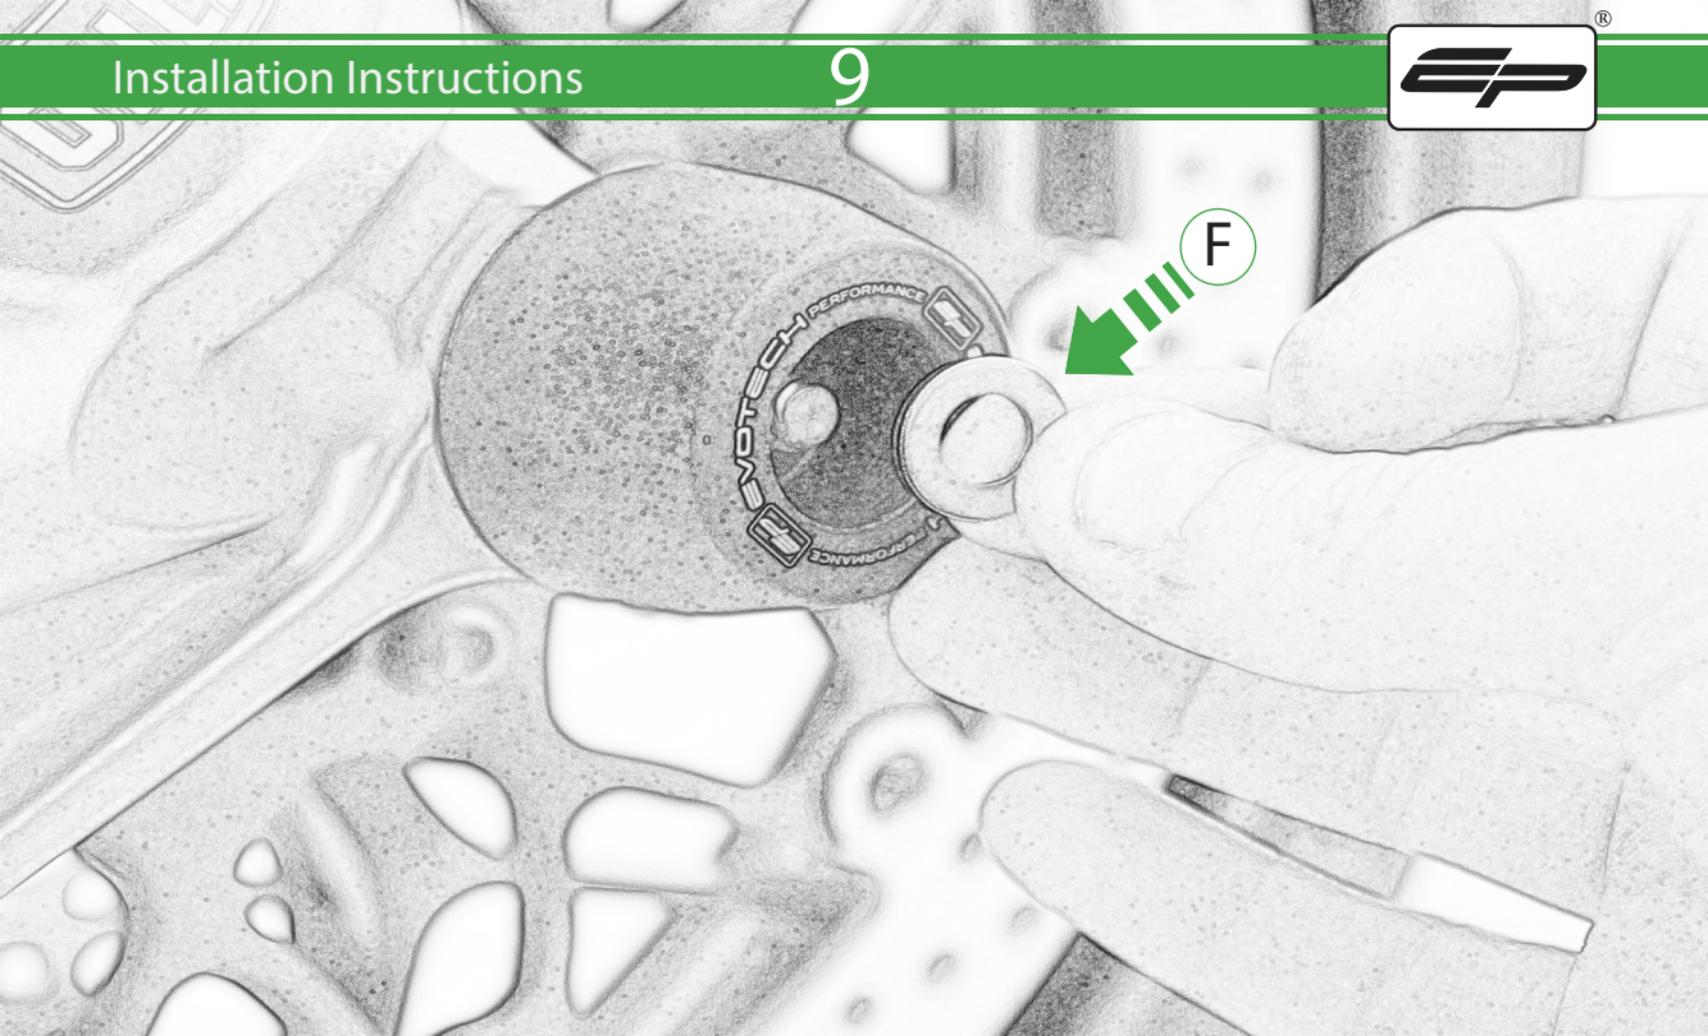


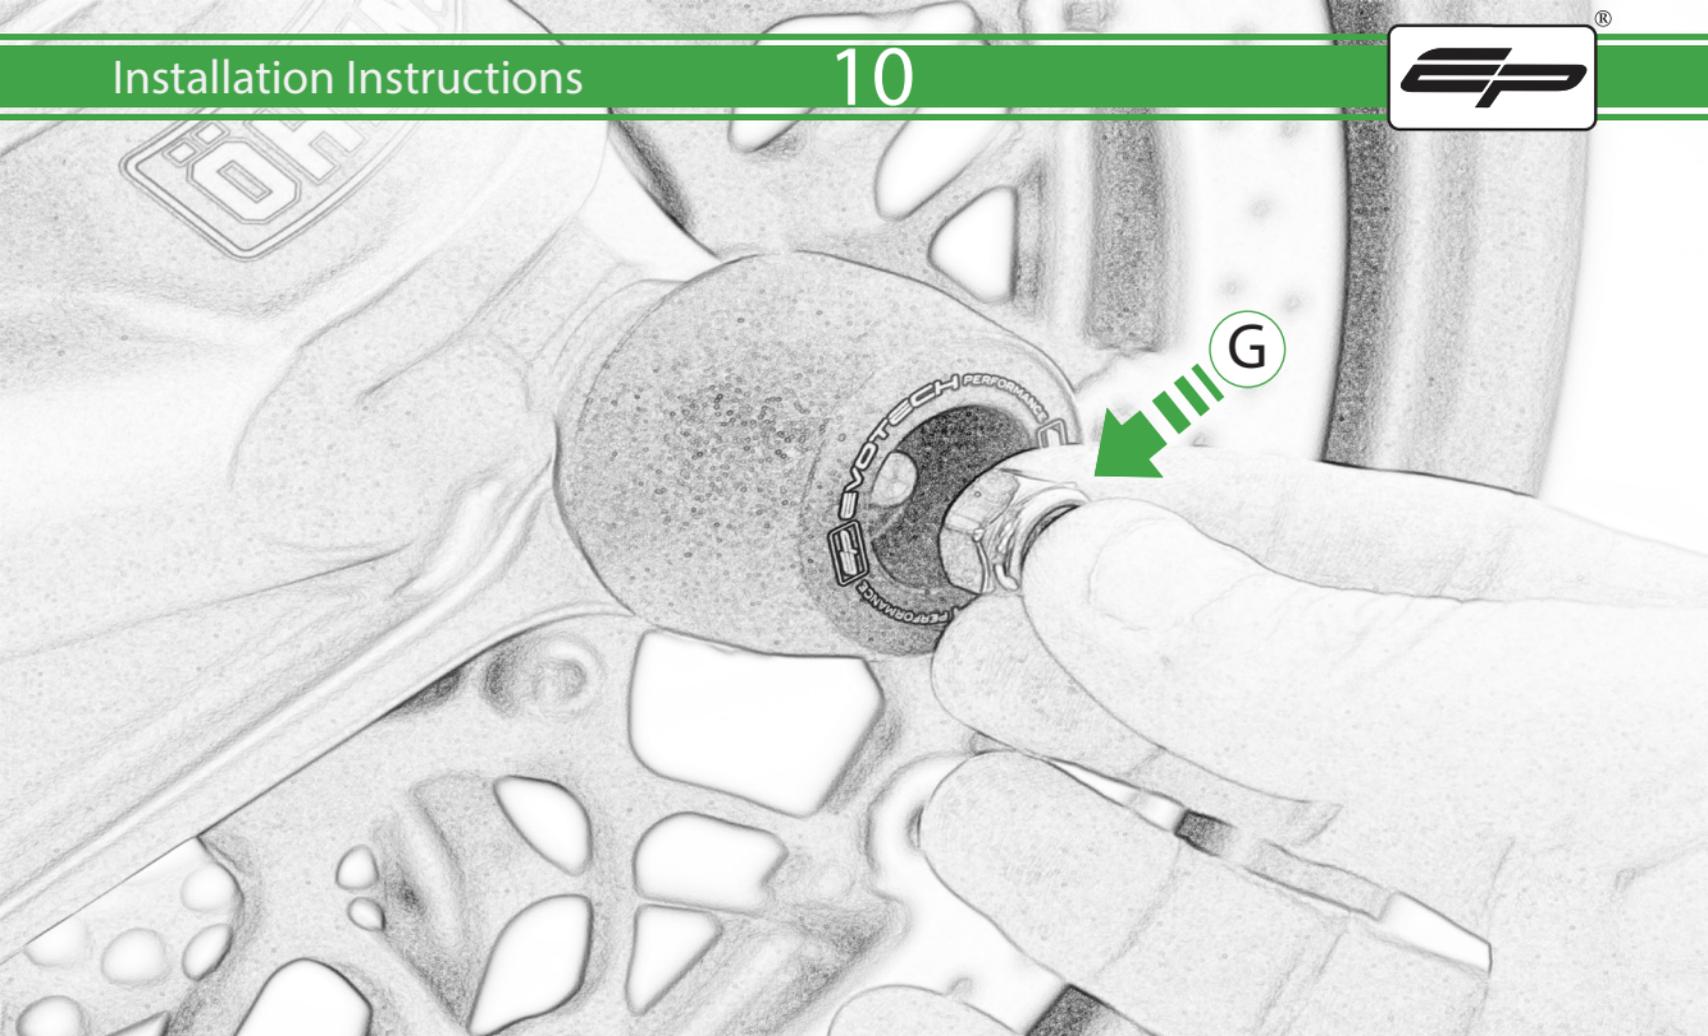

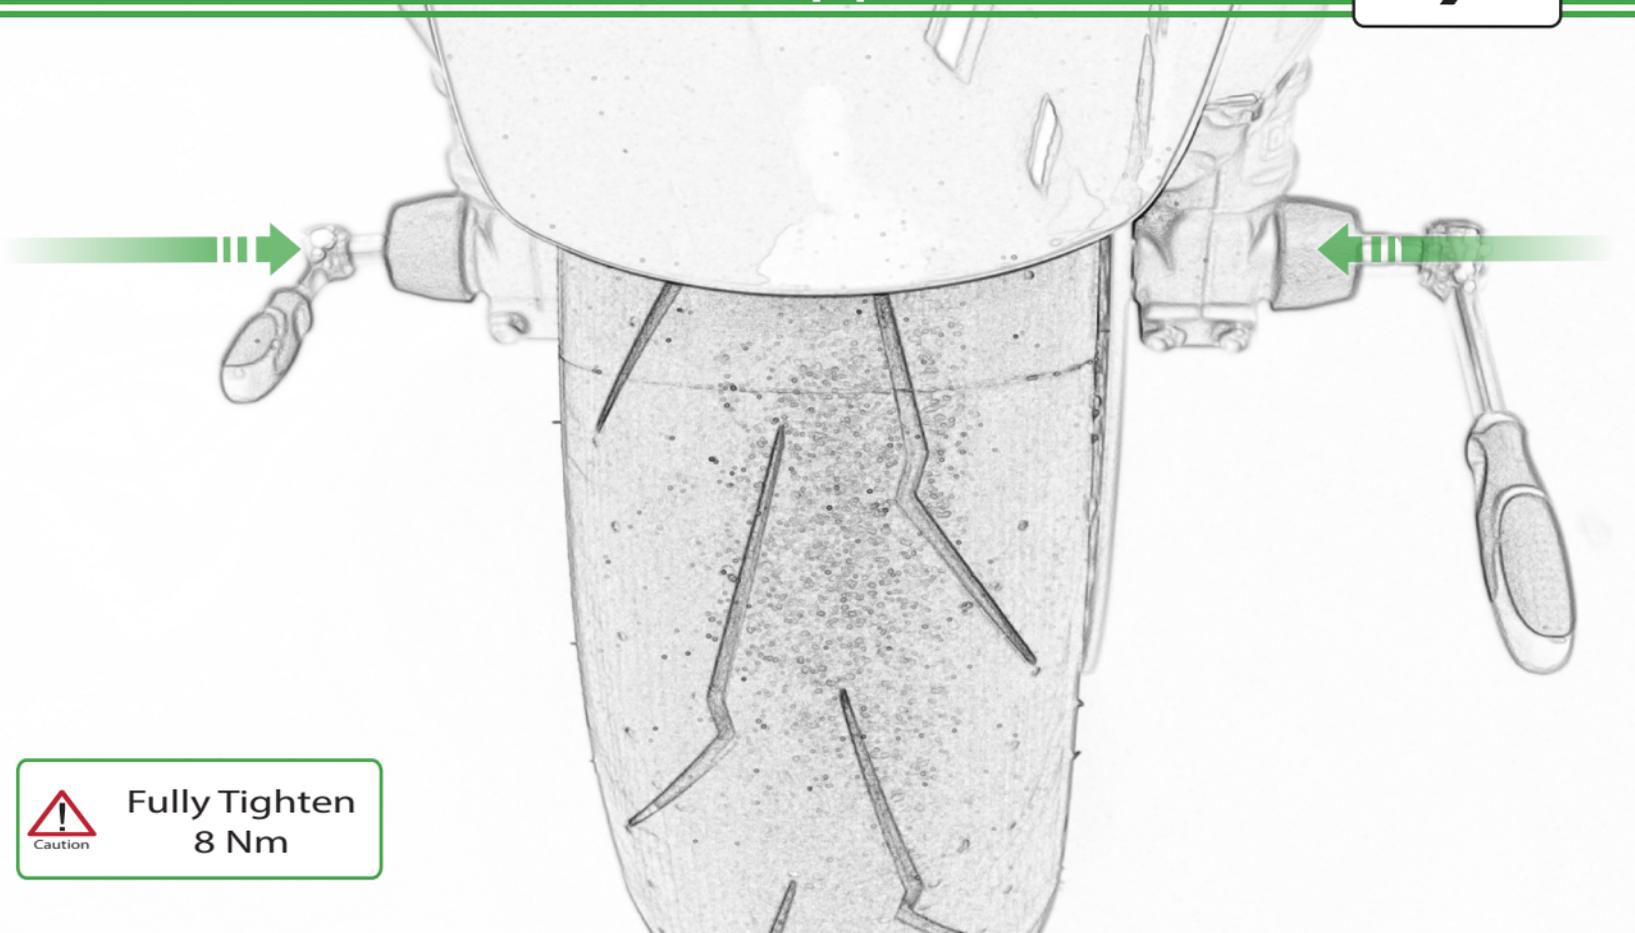


Caution

Fully Tighten
8 Nm

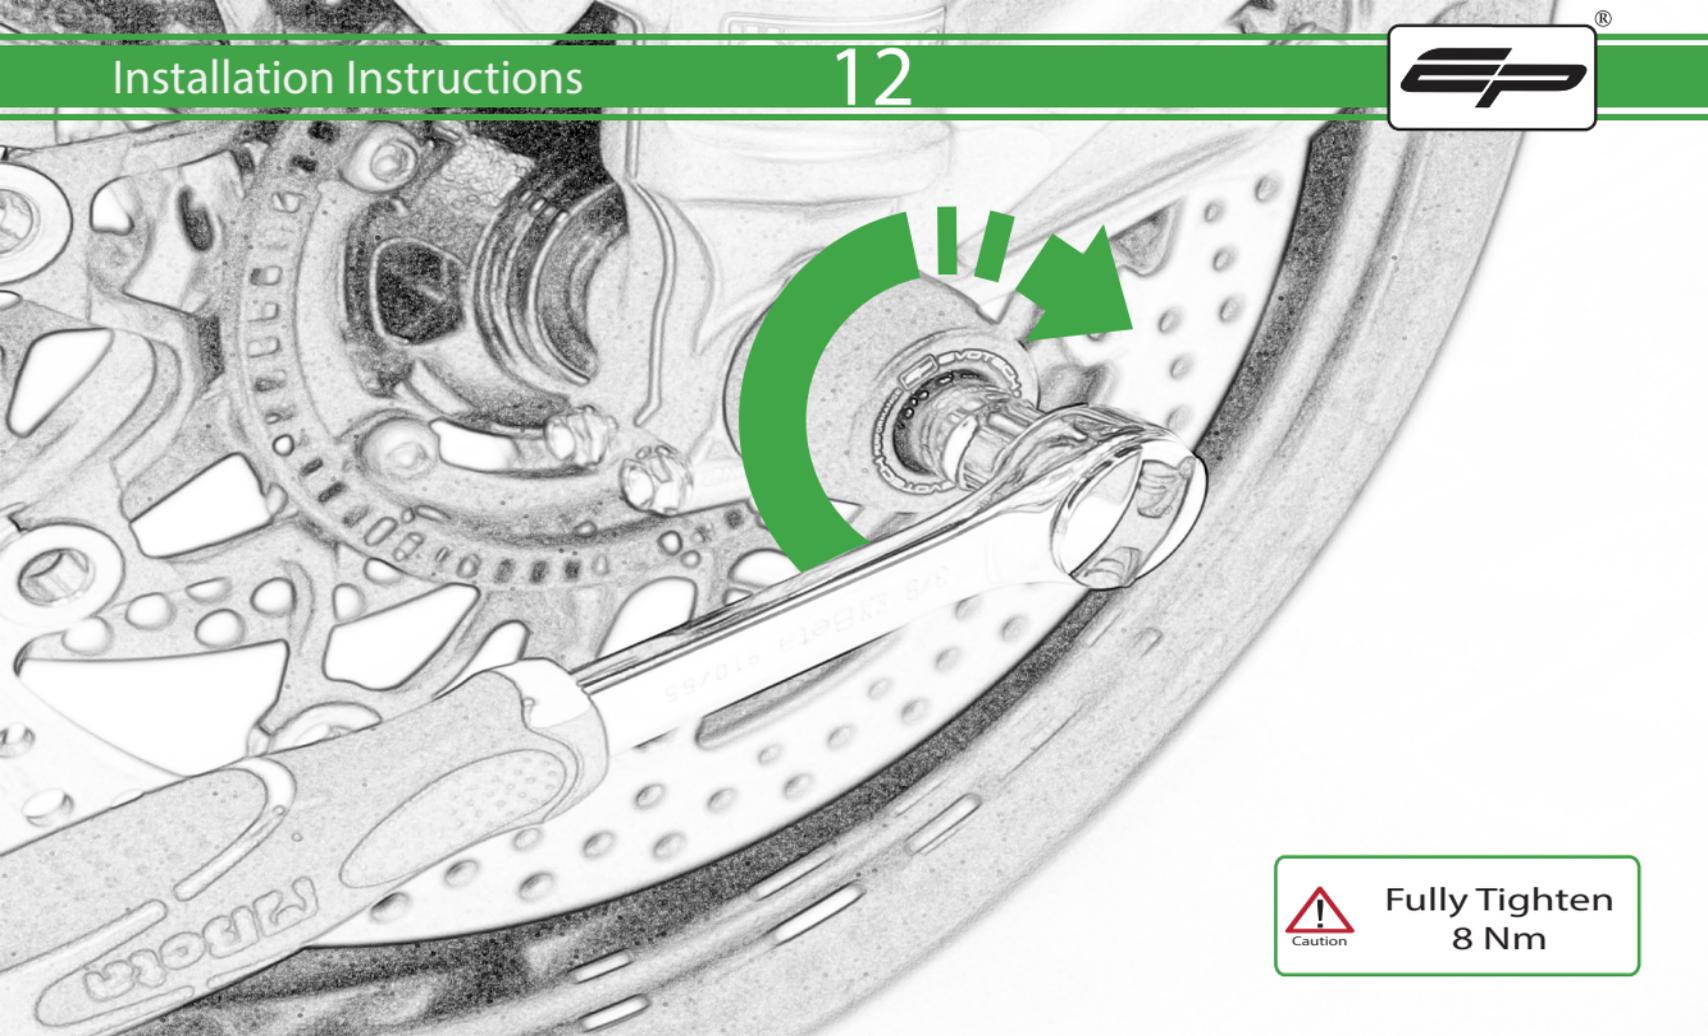

 Fully Tighten
8 Nm

The caution icon is a red triangle with a white exclamation mark inside. Below the triangle, the word 'Caution' is written in a small, black, sans-serif font.

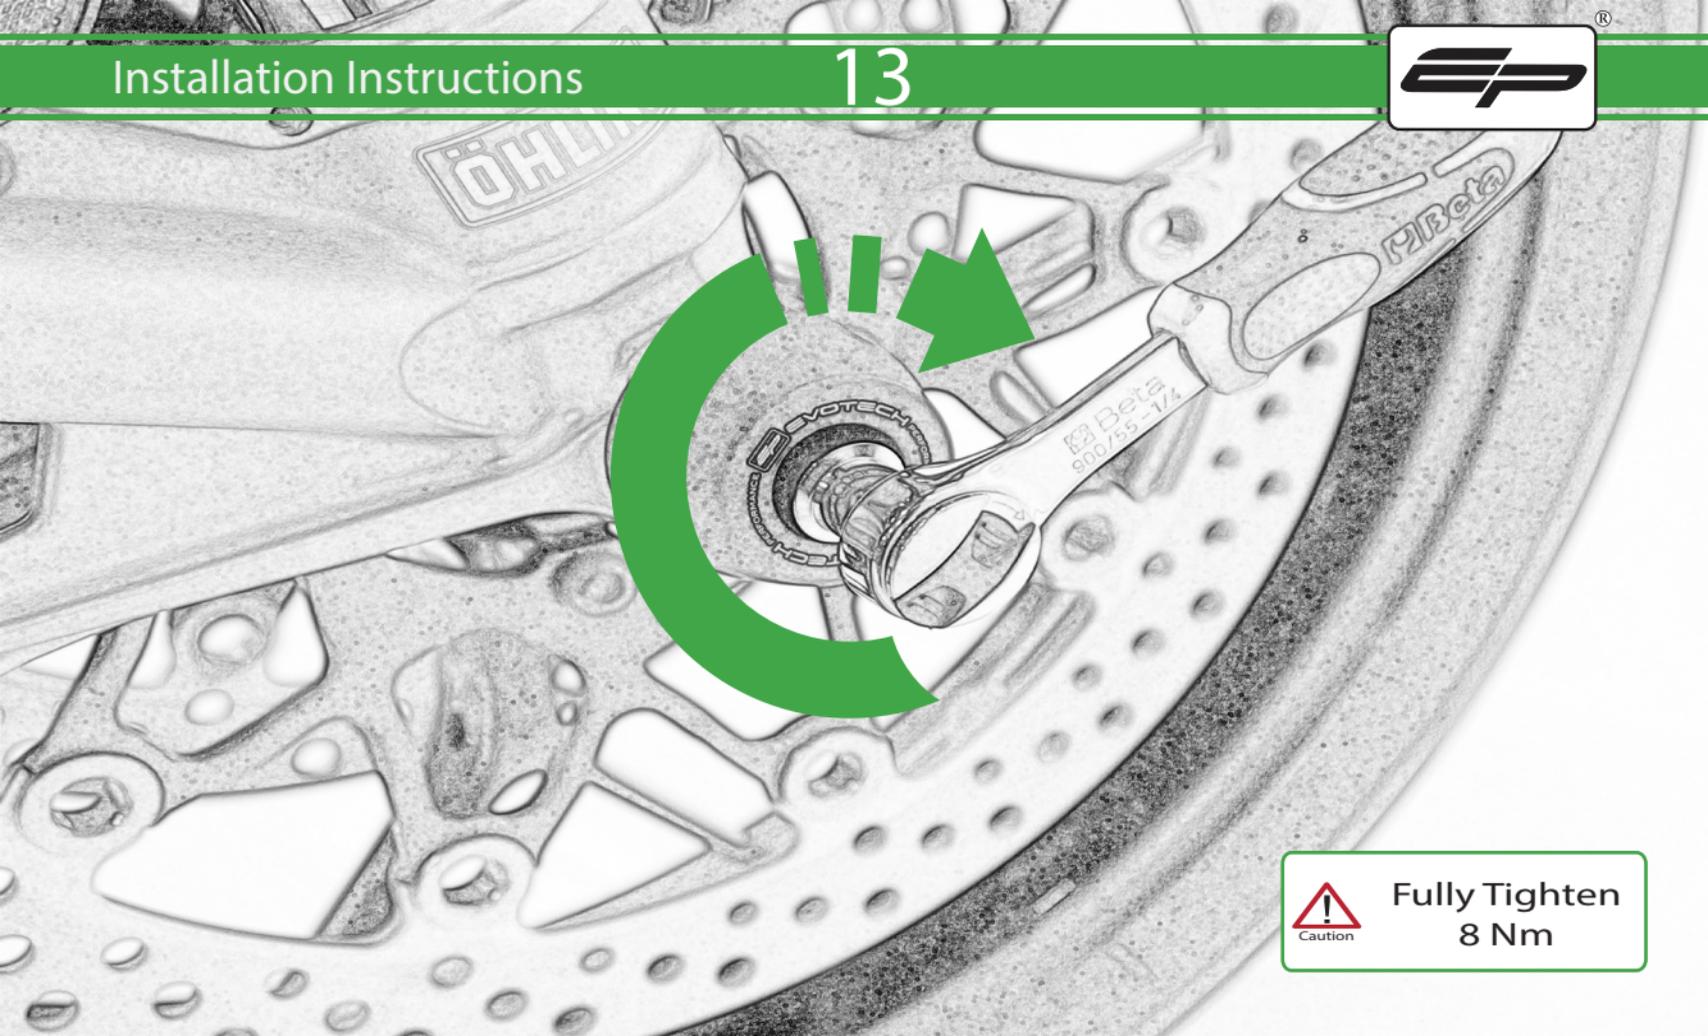

Fully Tighten
8 Nm



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com