



EVOTECH®
P E R F O R M A N C E

Honda CBR1000RR-R / SP


Rear Spindle Bobbins


Installation Instructions





Kit Contents PRN014765


- (A) 1 x Spindle Shaft
- (B) 1 x Left-hand Aluminium Spacer
- (C) 1 x Right-hand Aluminium Spacer
- (D) 2 x M8 Washer
- (E) 2 x M8 Nyloc Nut
- (F) 2 x Nylon Bobbin Heads

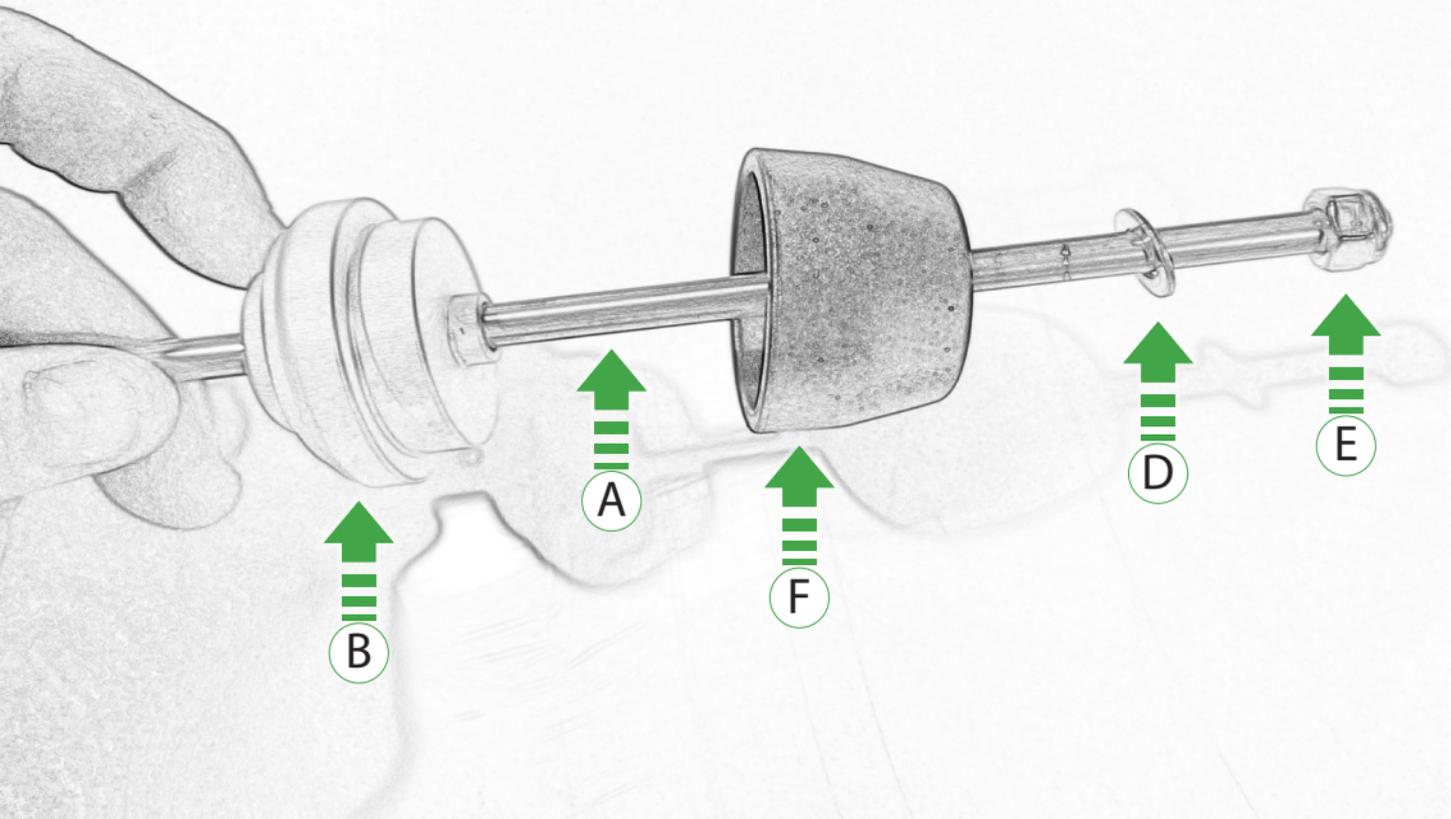


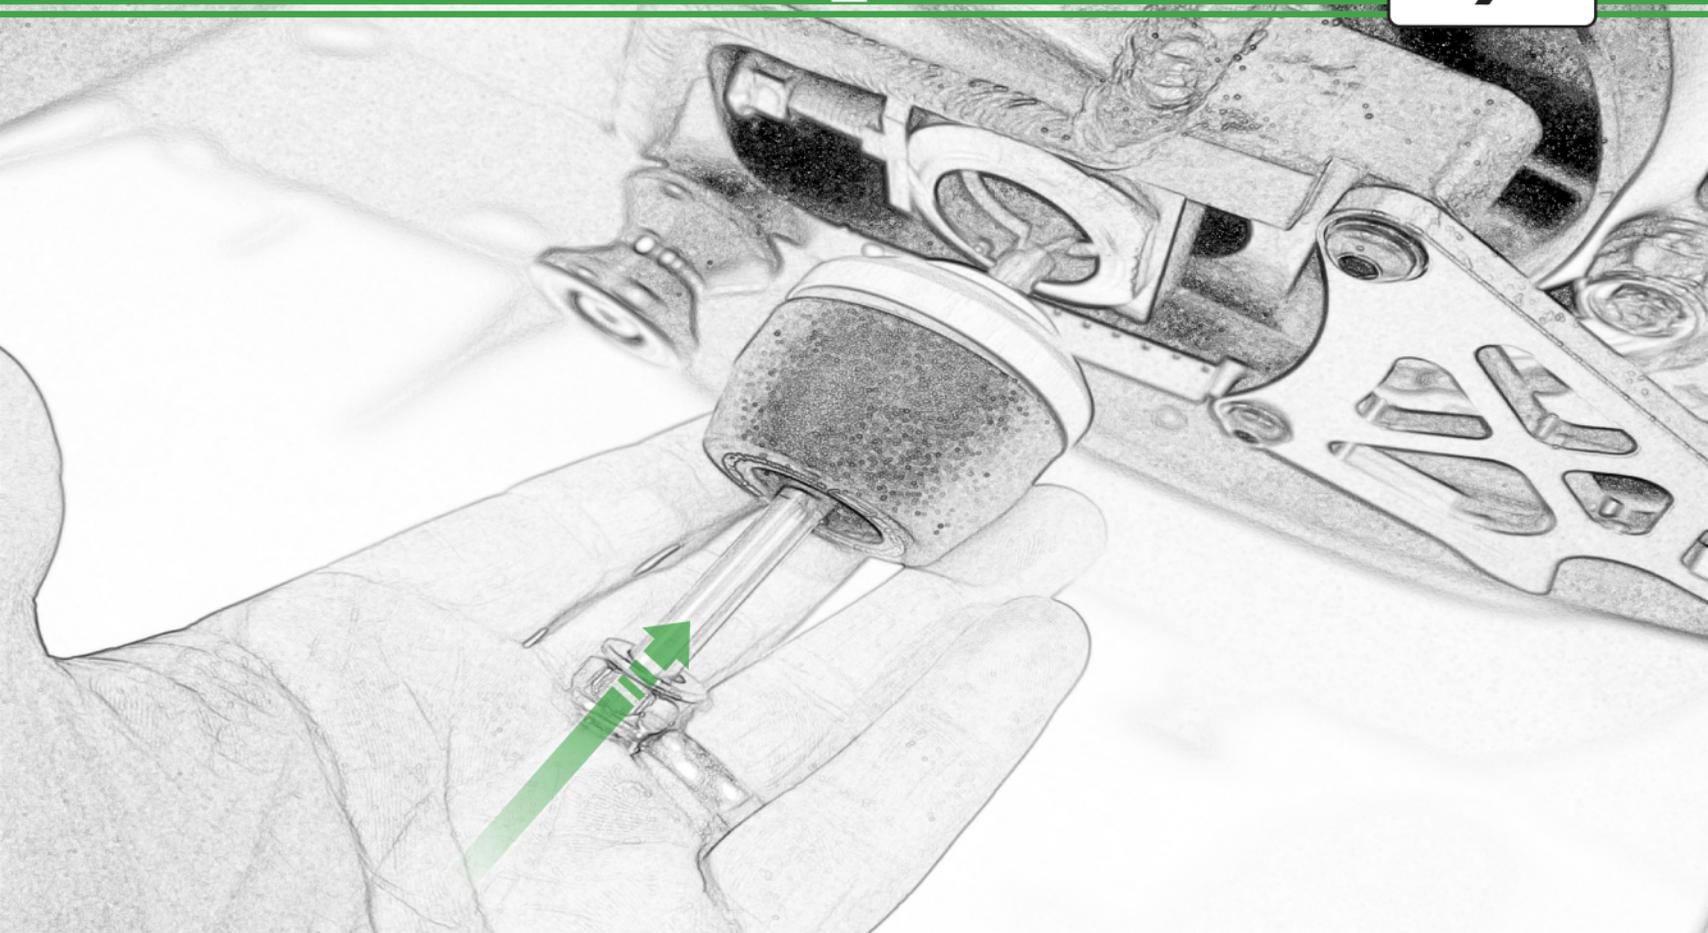


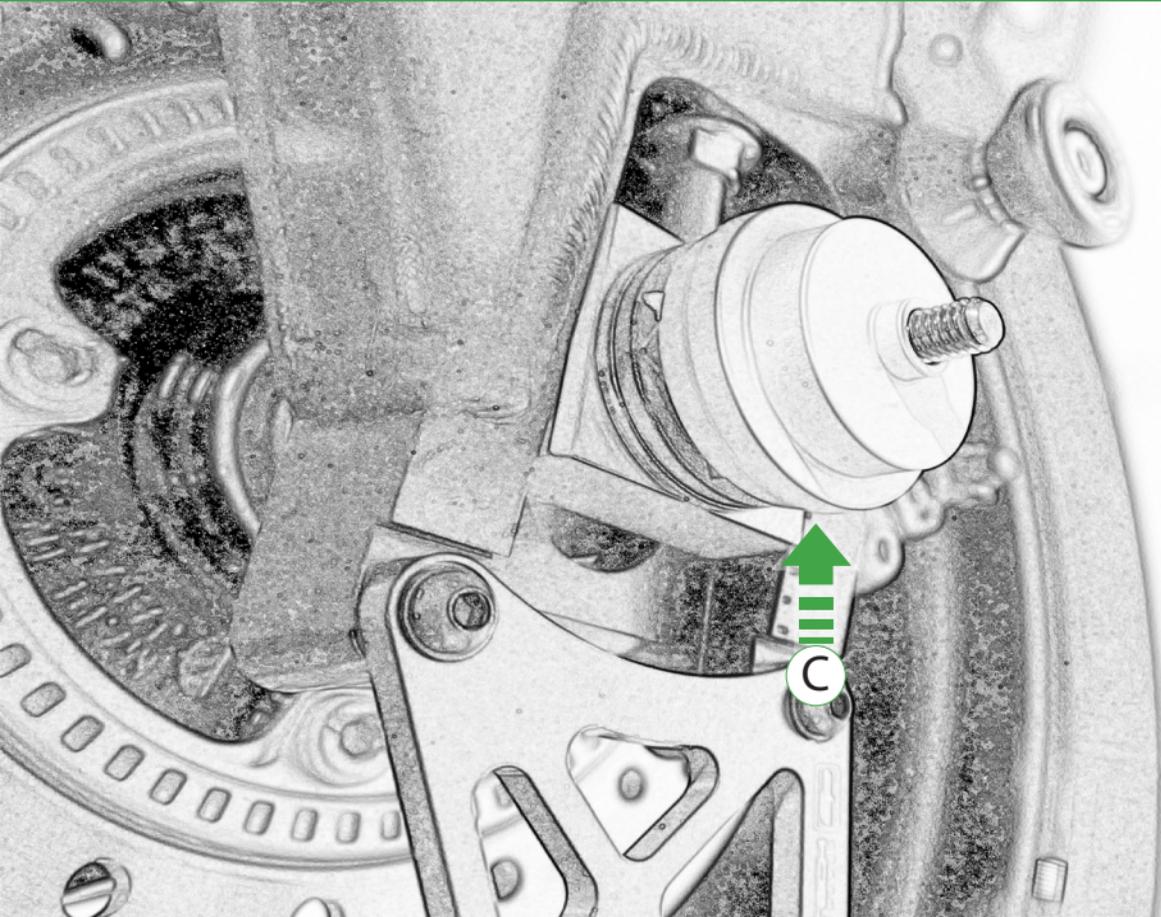

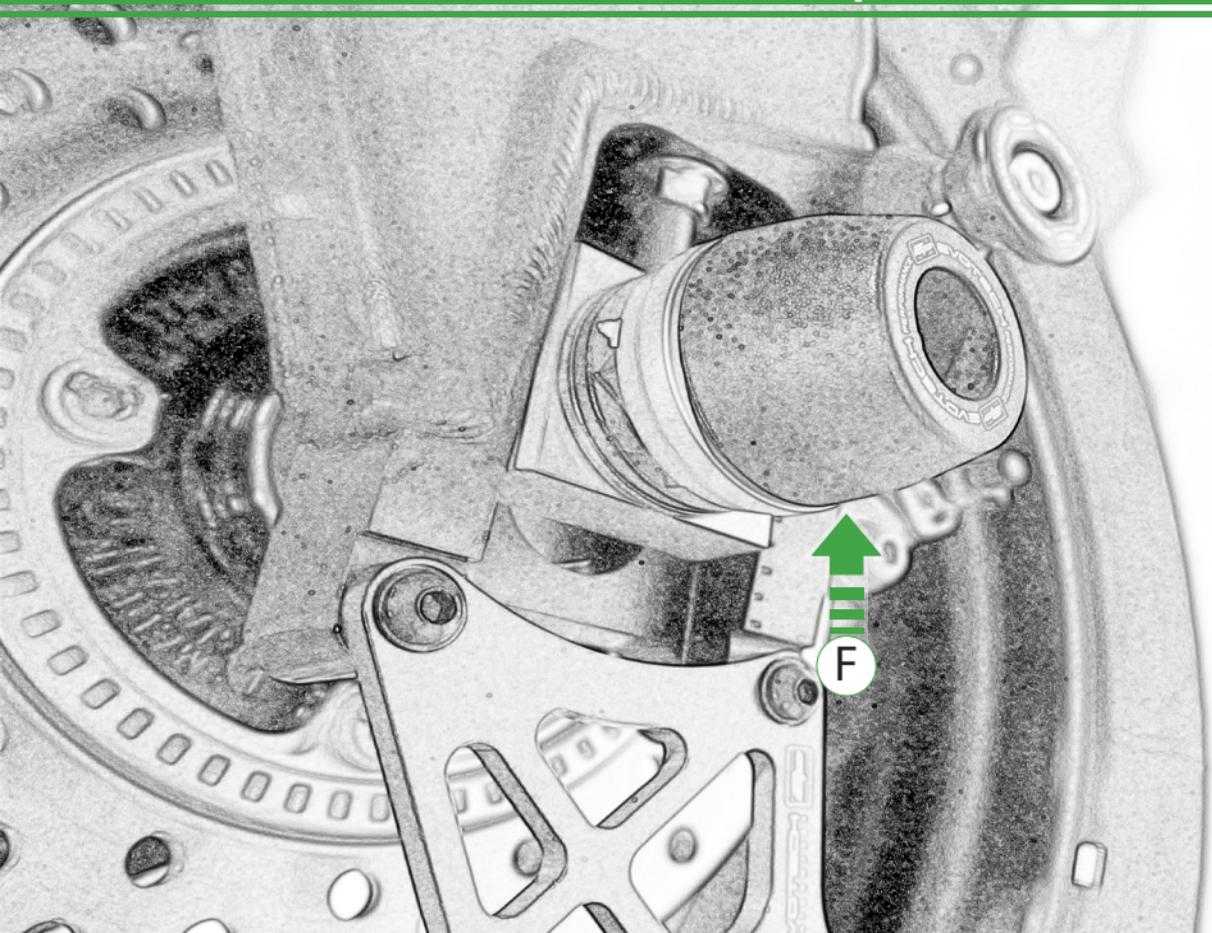


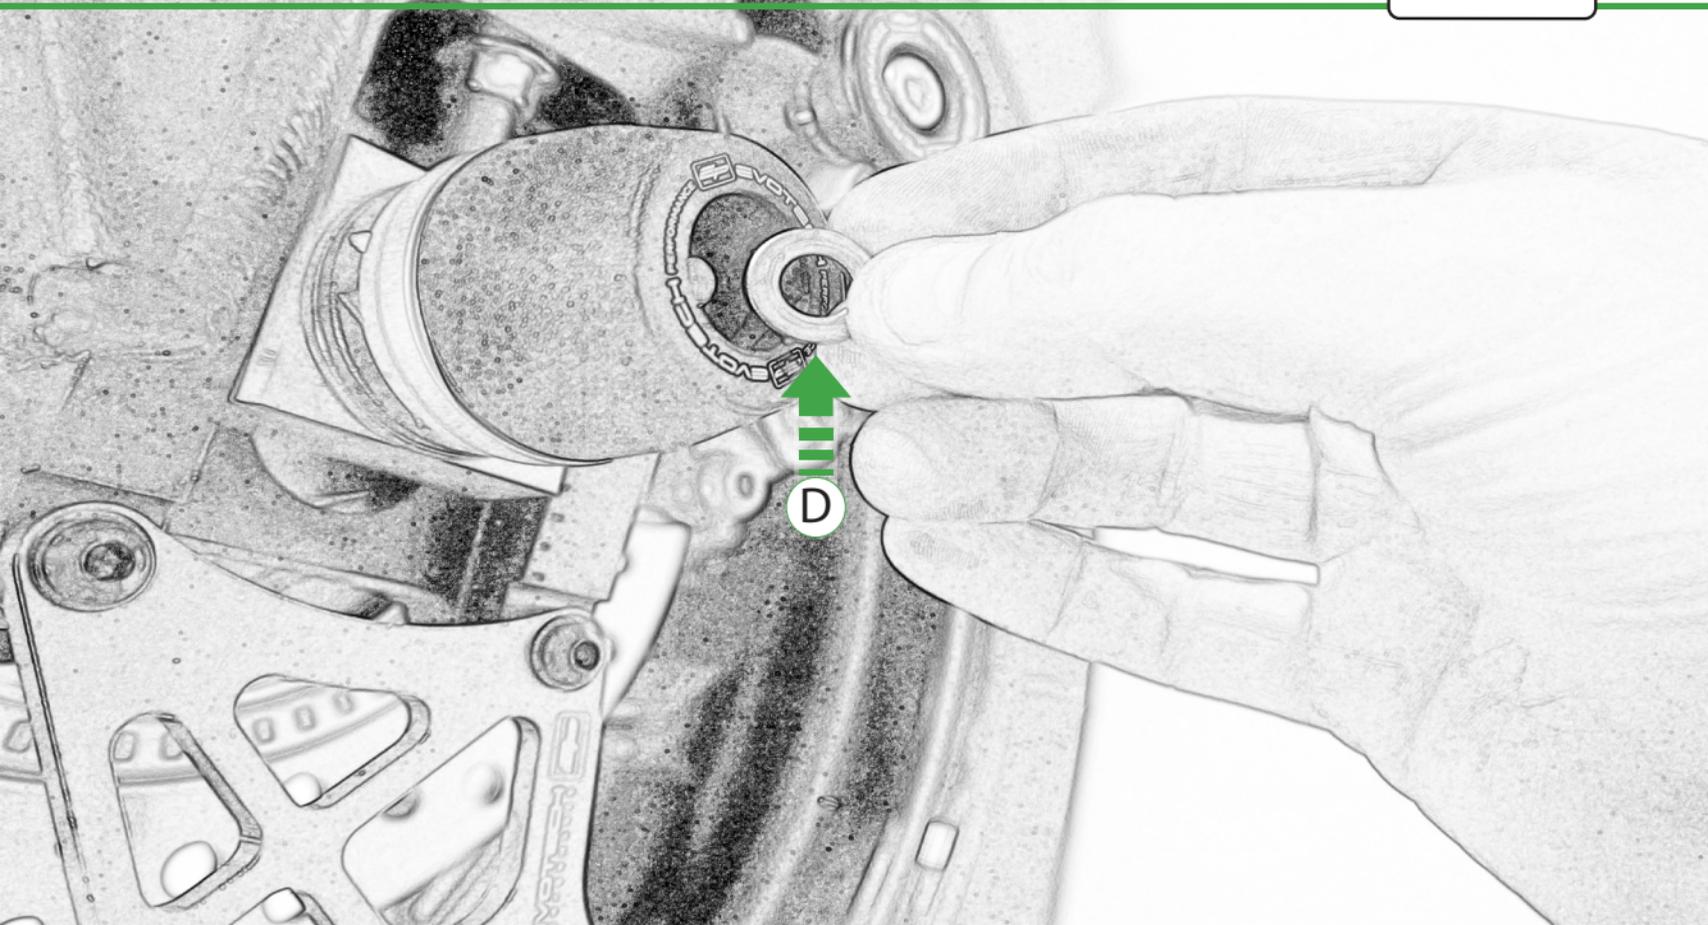

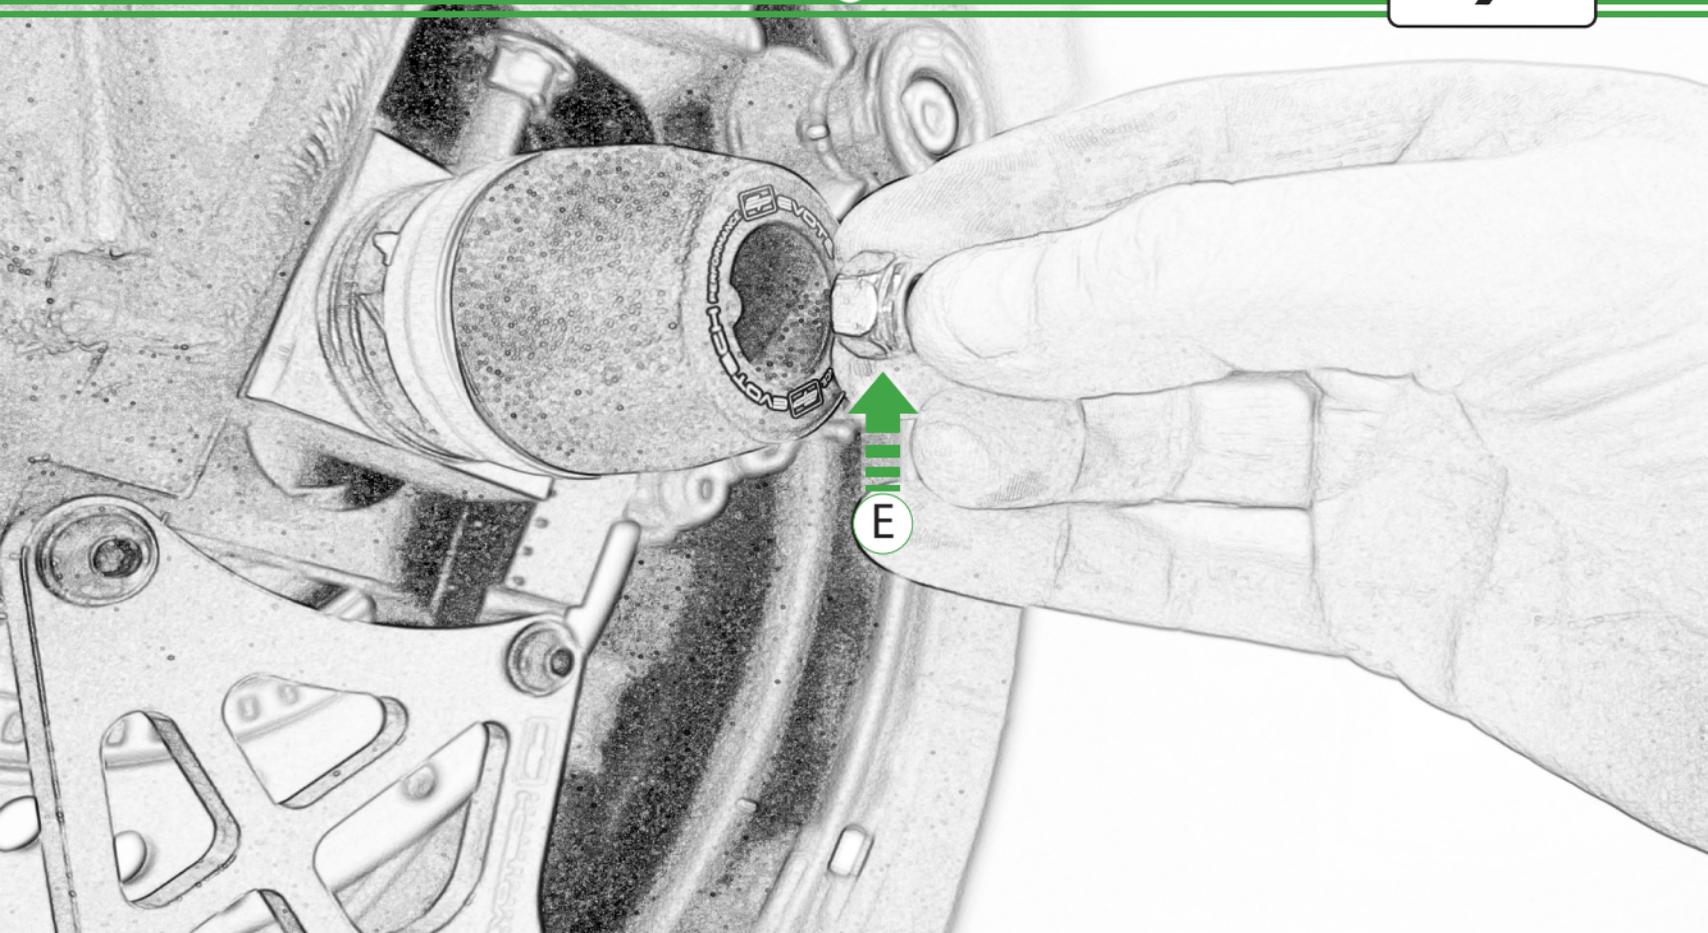

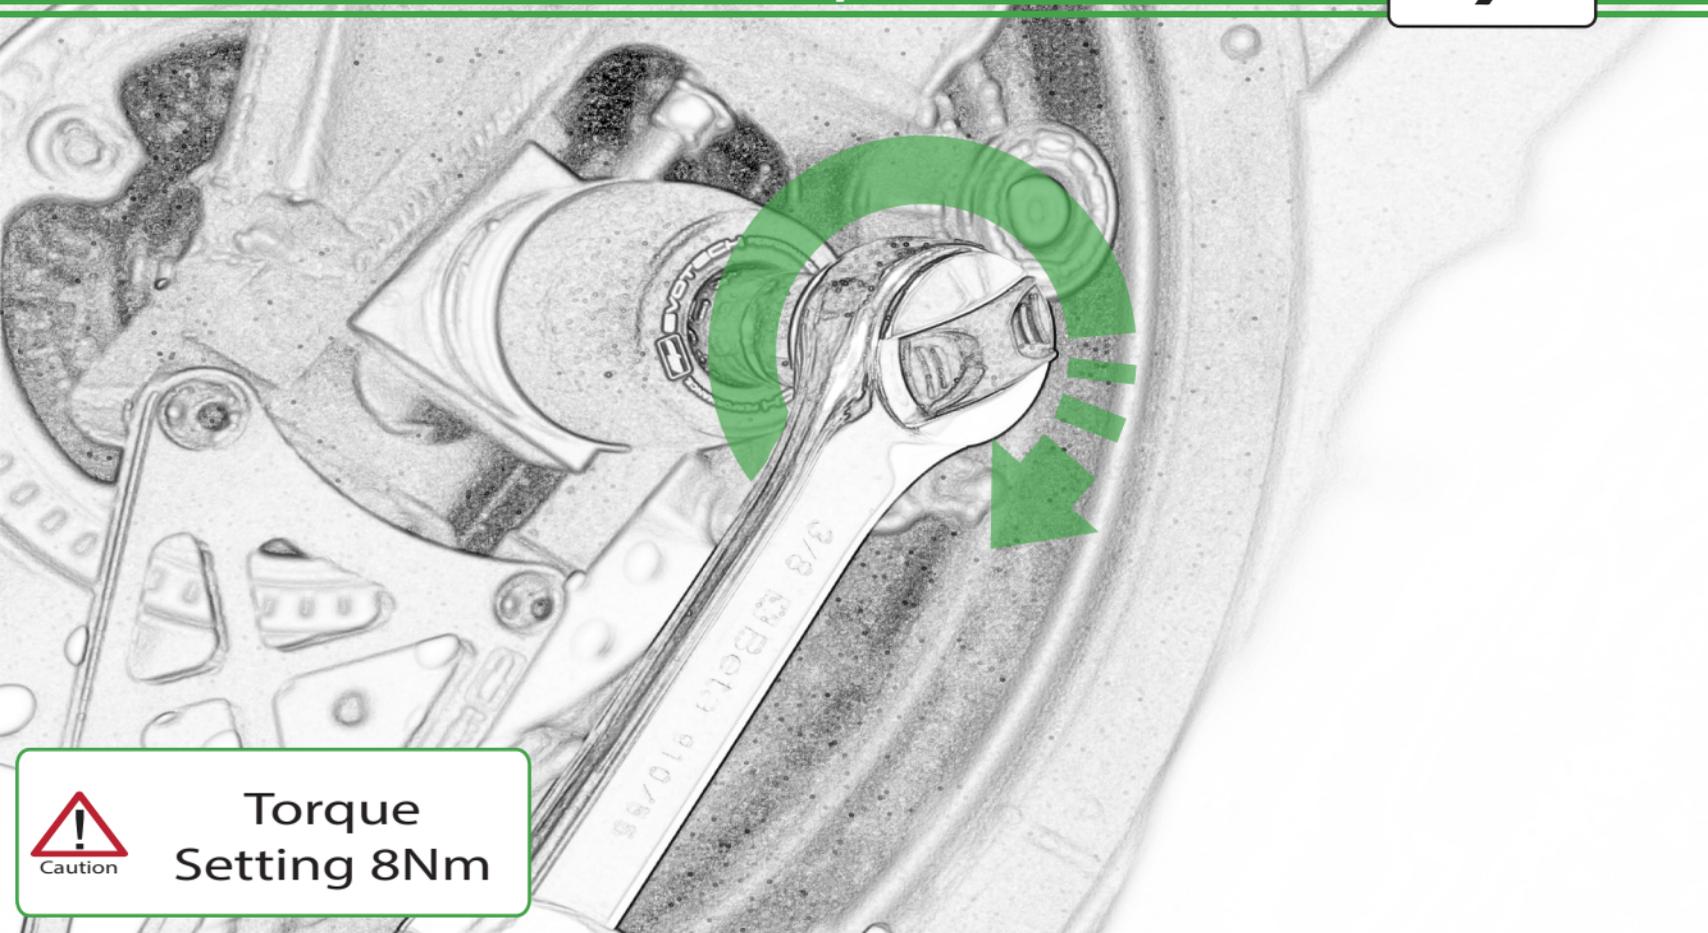

**Torque
Setting 8Nm**

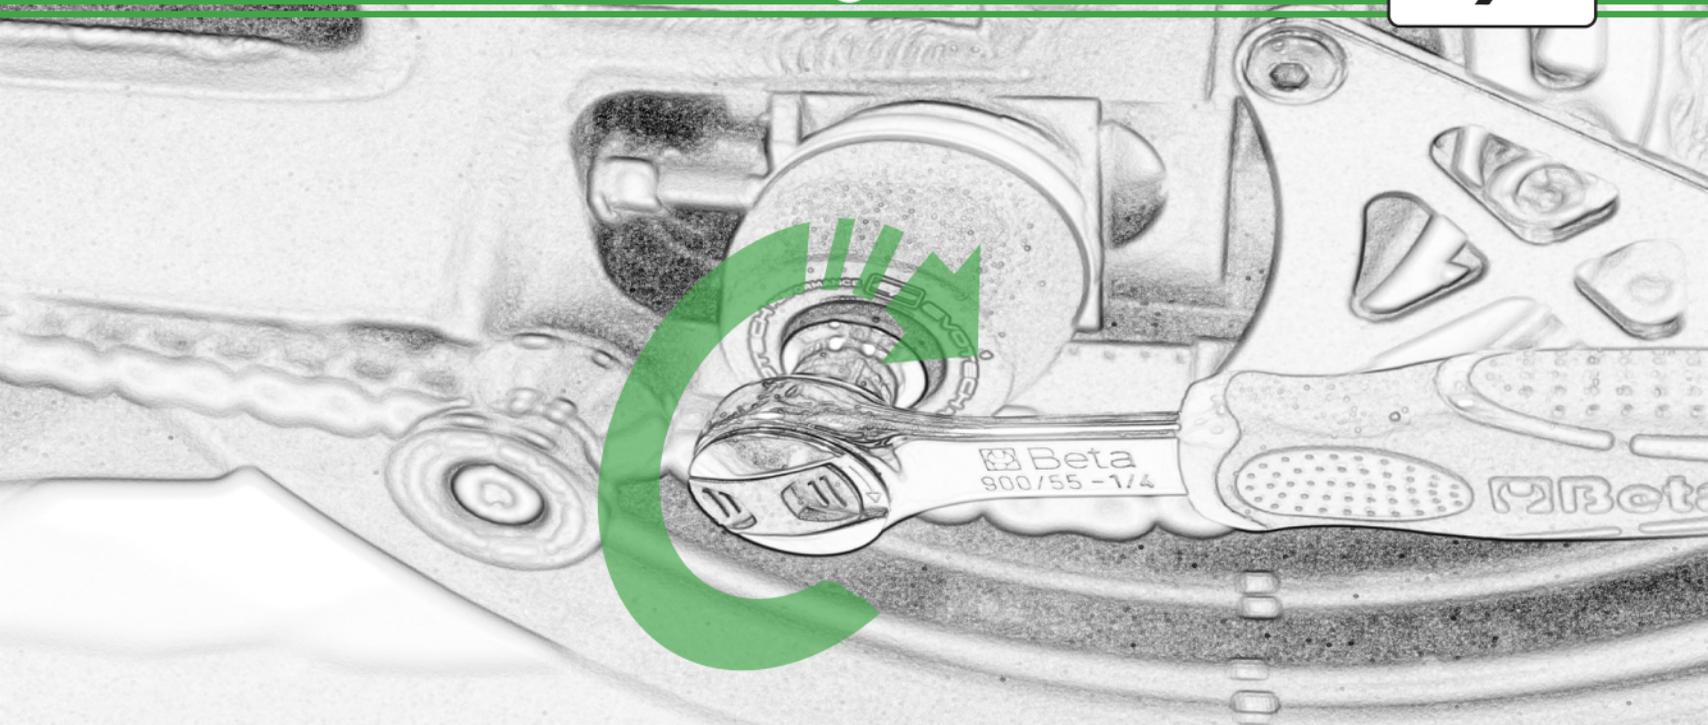

Caution

Torque
Setting 8Nm



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com