



EVOTECH®
P E R F O R M A N C E


MV Agusta Brutale / Veloce
Radiator Guard

Installation Instructions



Kit Contents PRN013447



- (A) 1 x Neoprene Pads
- (B) 2 x M4 x 8mm Black Button Head Bolts
- (C) 2 x M4 Black Washers
- (D) 4 x M5 x 8mm Black Button Head Bolts
- (E) 8 x Rubber Pads
- (F) 8 x Rubber Bungs

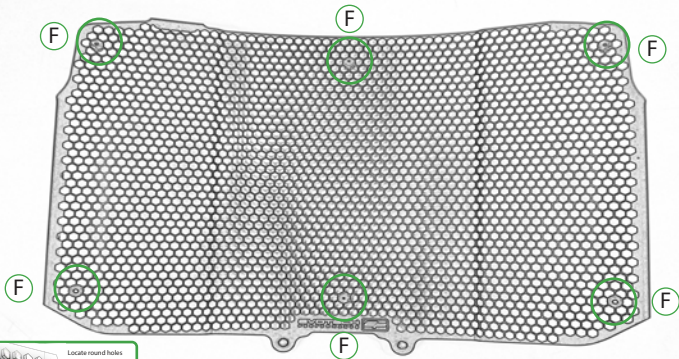



Locate round holes amongst hexagons.


Push Rubber Spacer through from the back of the guard so Hexagonal shapes sit on the front face




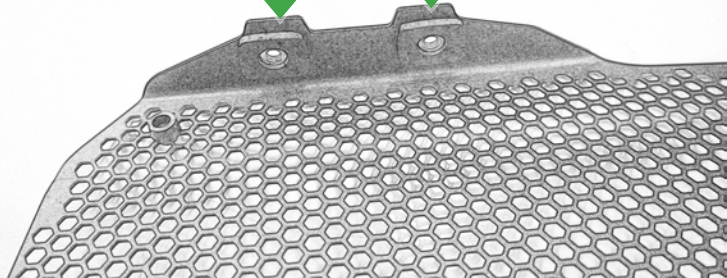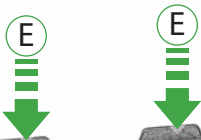


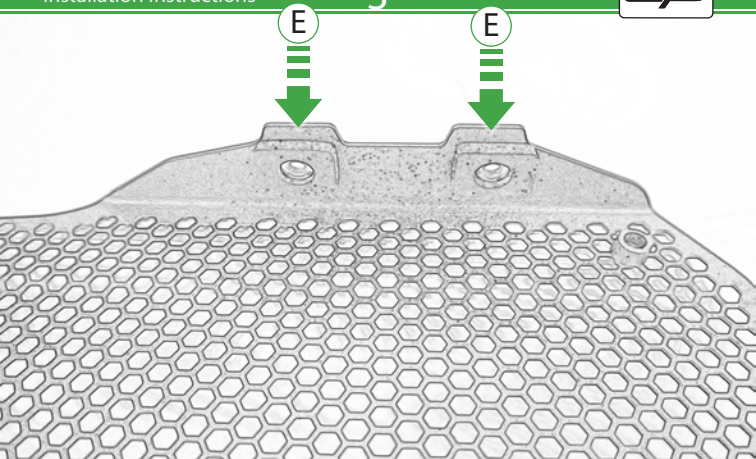

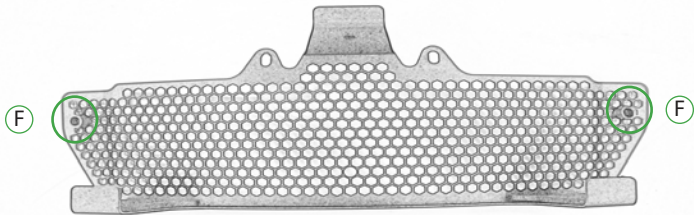

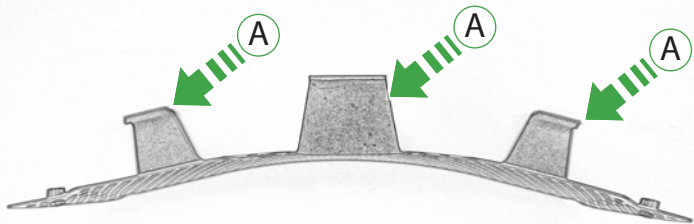

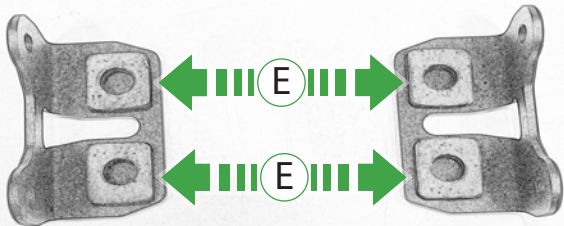


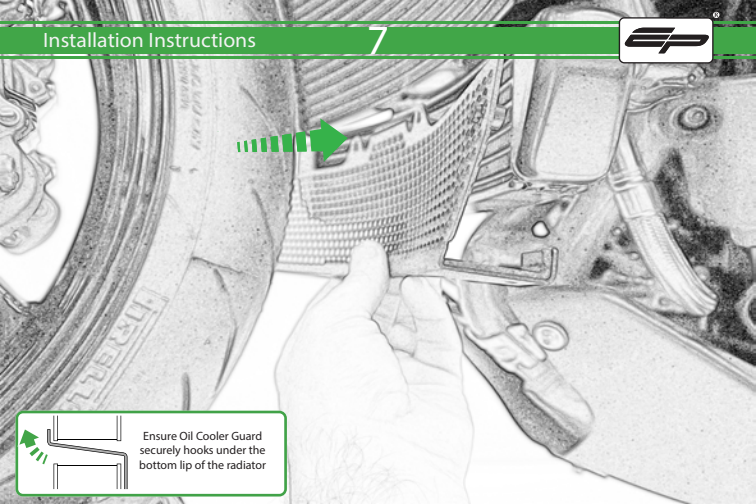



Ensure Oil Cooler Guard
securely hooks under the
bottom lip of the radiator




Ensure Oil Cooler Guard
securely hooks under the
bottom lip of the cooler

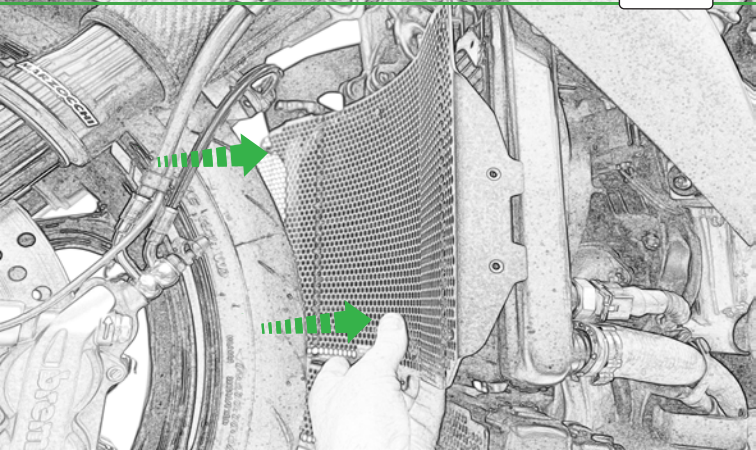

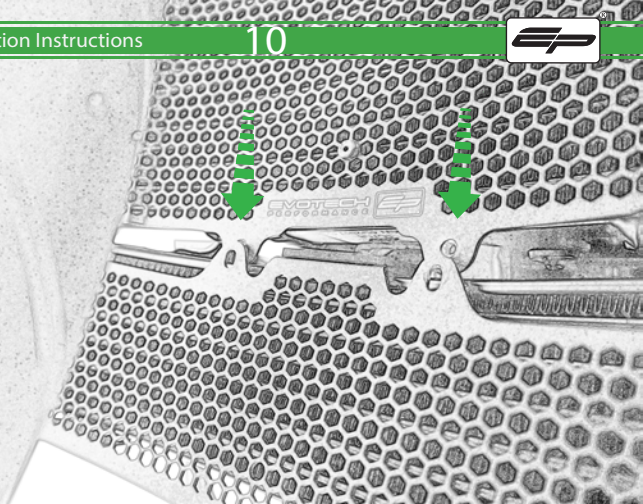

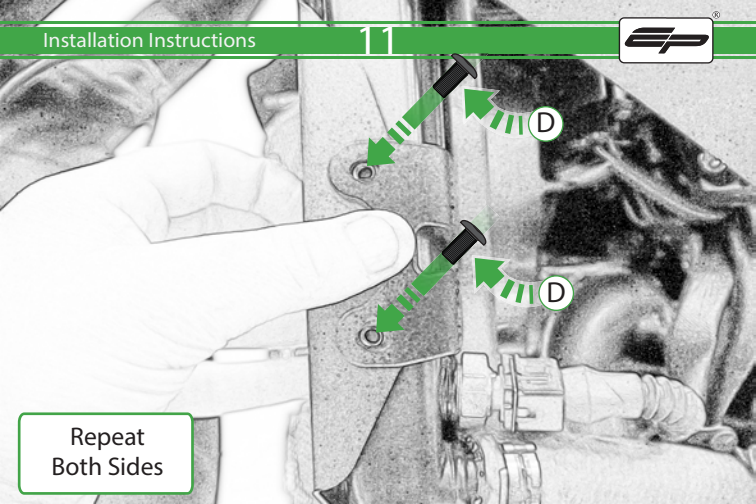

Repeat
Both Sides

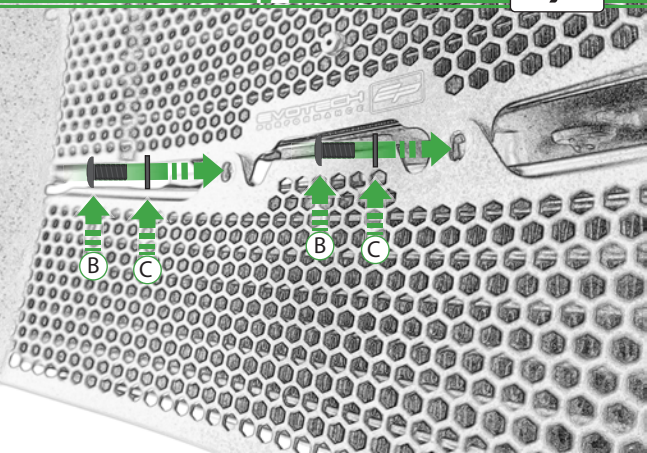



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that dirt and debris have not become trapped between the guard and the radiator/oil cooler. Such dirt and debris would reduce the cooling efficiency of the radiator/oil cooler.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com