

KTM 125/200/390 Duke Tail Tidy

Installation Instructions



Kit Contents PRN013771

- A 1 x L/H Arm
- B 1 x R/H Arm
- © 1 x Base Plate
- 1 x Cover Plate
- E 1 x Number Plate Bracket
 F 1 x Reflector Kit.
- © 1 x M5 Cover Cap
- (H) 1 x M6 x 16 Countersunk Screw
- 1 1 x M5 x 10 Caphead Scew
- 3 2 x M5 x 16 Button Head Bolts
- © 2 x Indicator Stems
- L 2 x 4mm Dowel Pins


(M) 2 x Indicator Screws


N 3 x M6 x 16 Cross Dowels


6 x M6 x 16 Button Head Bolts







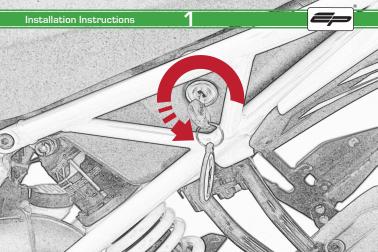


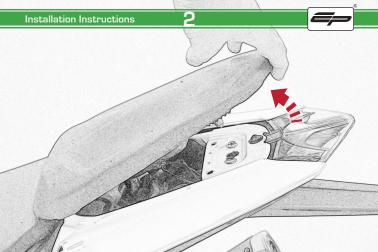


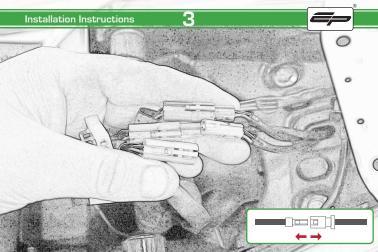


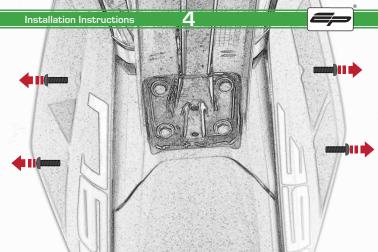


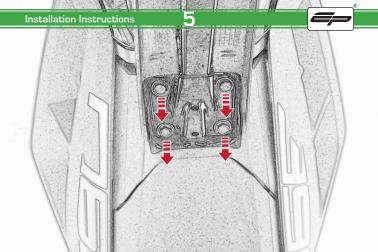


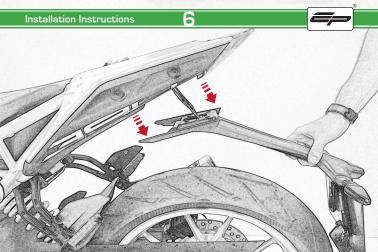

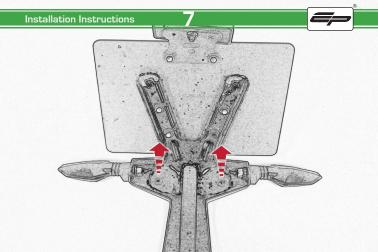


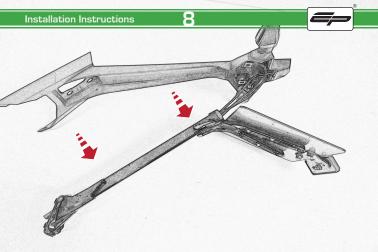

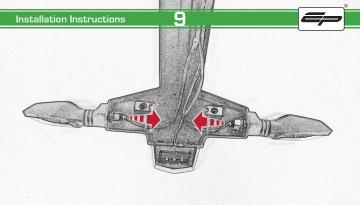

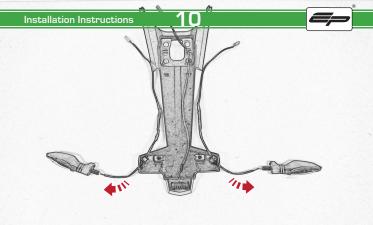




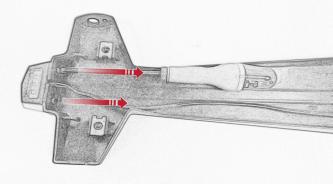

Installation Instructions

<u> 12</u>




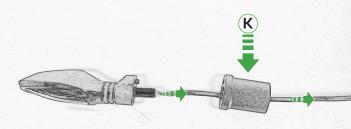


Repeat Both Side

Repeat Both Side

Fully Tighten

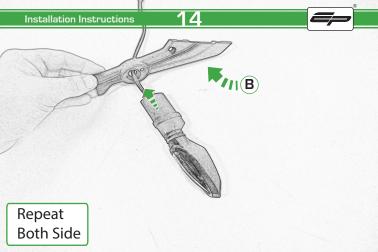


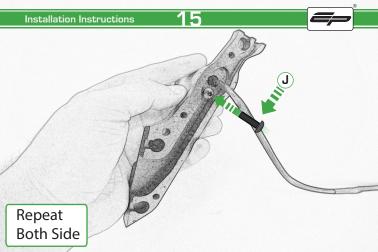











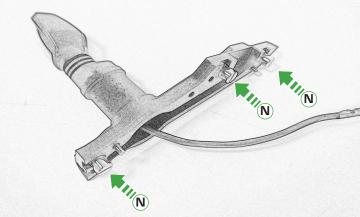


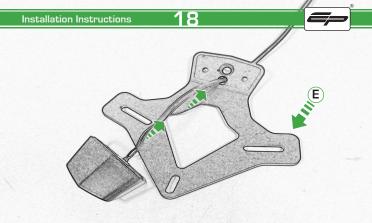


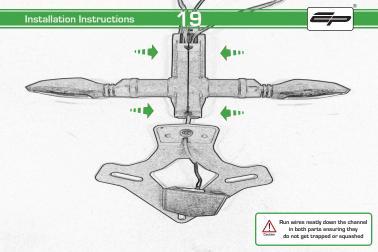


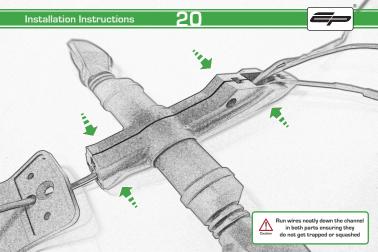

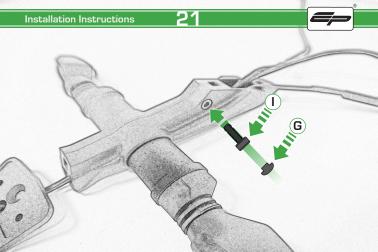

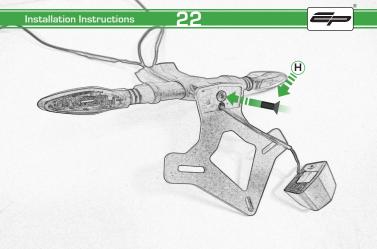


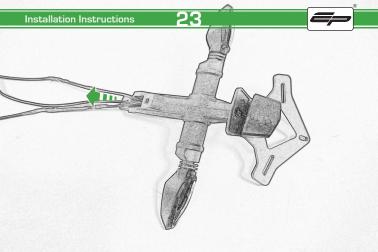


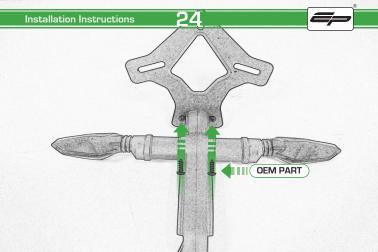








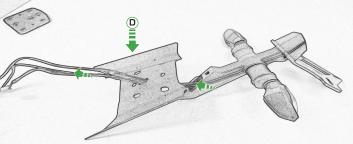


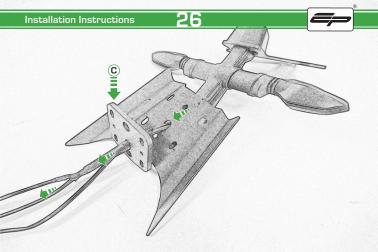


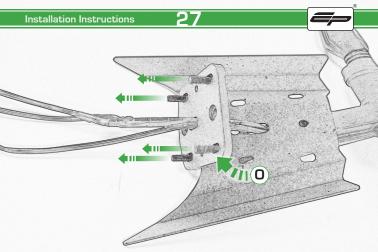


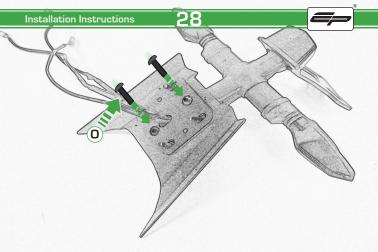


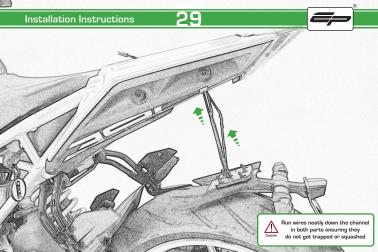


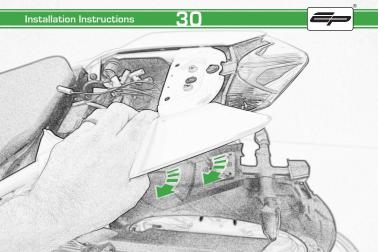


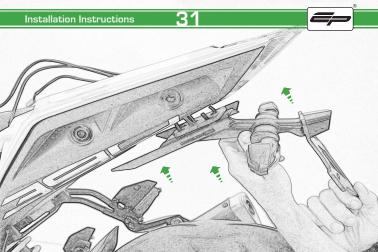

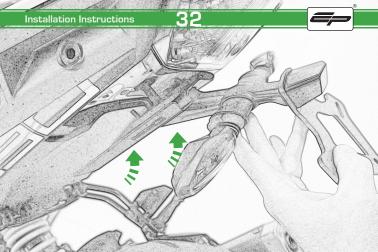

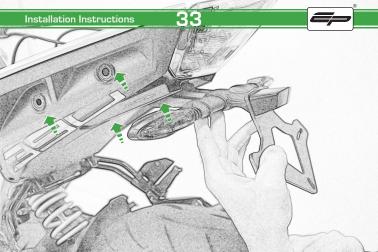

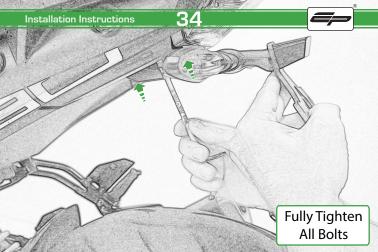

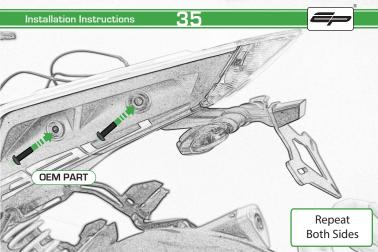








Reflector Bracket Installation




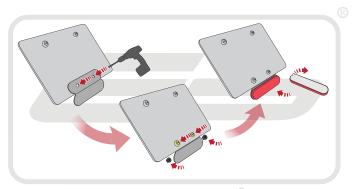



Number Plate Adaptor Installation Instructions



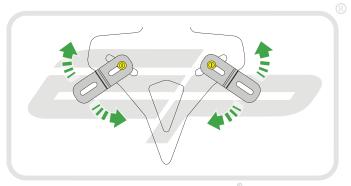







After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.





www.evotech-performance.com