



**EVOTECH**®  
P E R F O R M A N C E


BMW S 1000 RR  
Radiator Guard Set


Installation Instructions




## Kit Contents PRN014329

- Ⓐ 2 x M5 x 8 Black Button Head
- Ⓑ 6 x Neoprene
- Ⓒ 10 x Rubber Bung

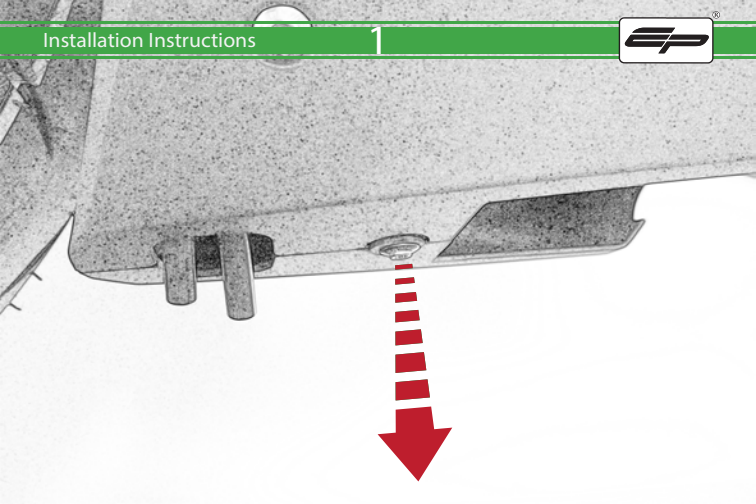

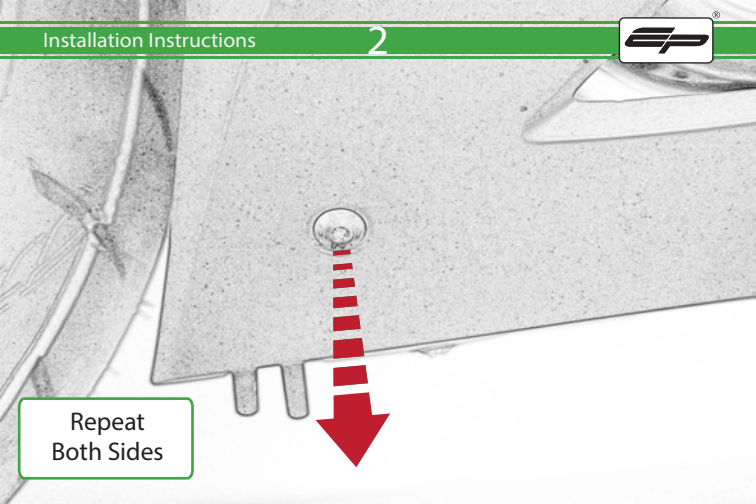


Repeat  
Both Sides

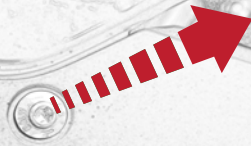


Repeat  
Both Sides



Repeat  
Both Sides

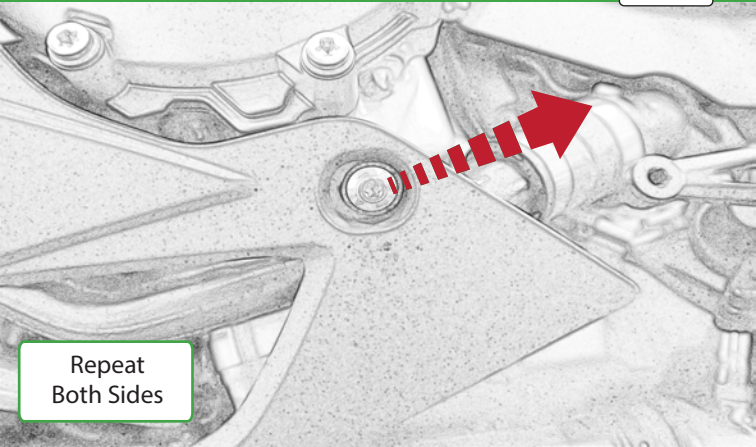


Repeat  
Both Sides

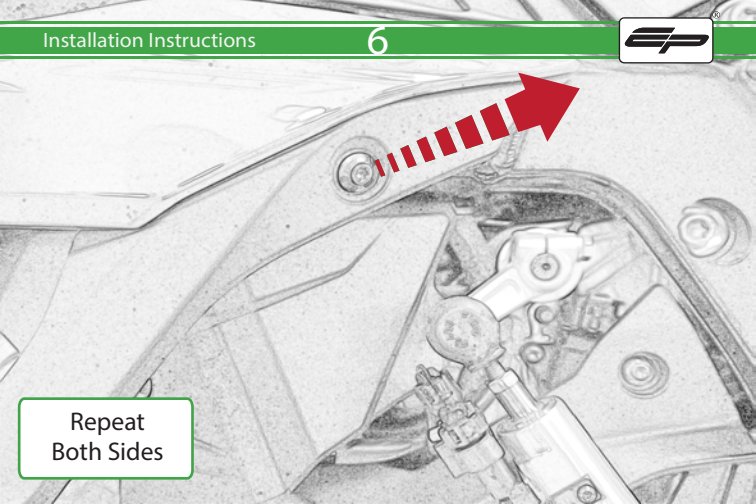


Repeat  
Both Sides




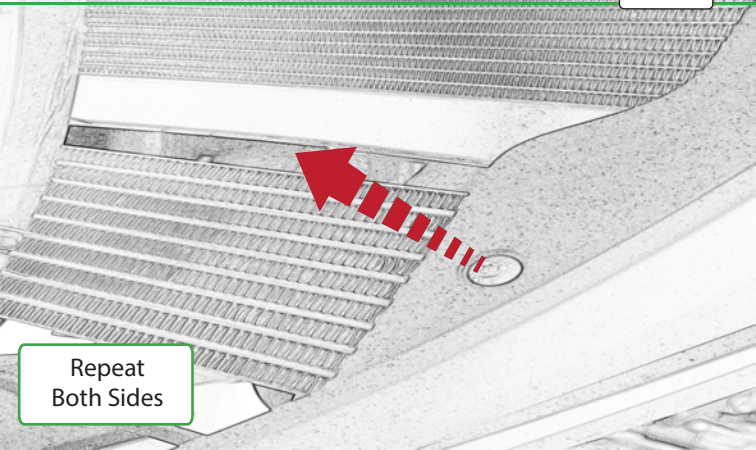

Repeat  
Both Sides

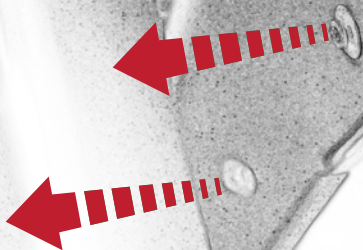


Repeat  
Both Sides

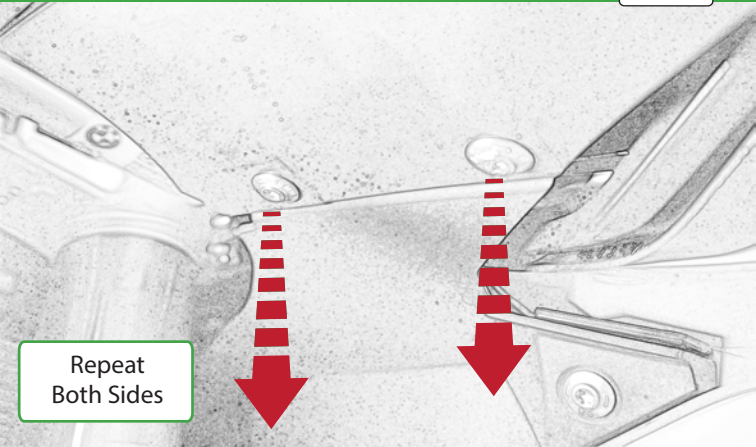


Repeat  
Both Sides




Repeat  
Both Sides

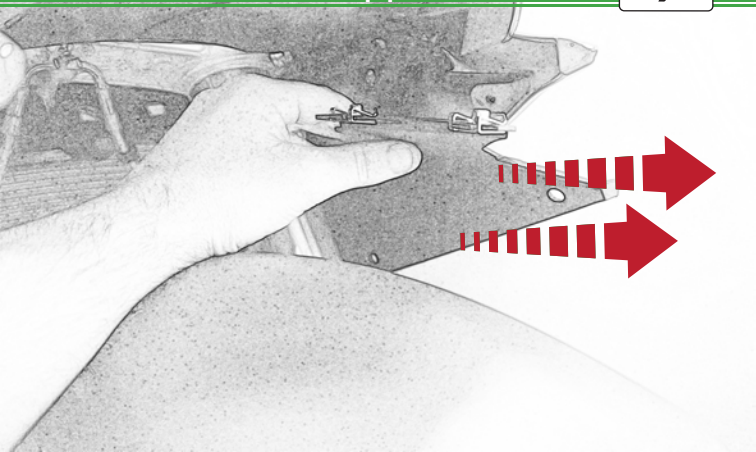


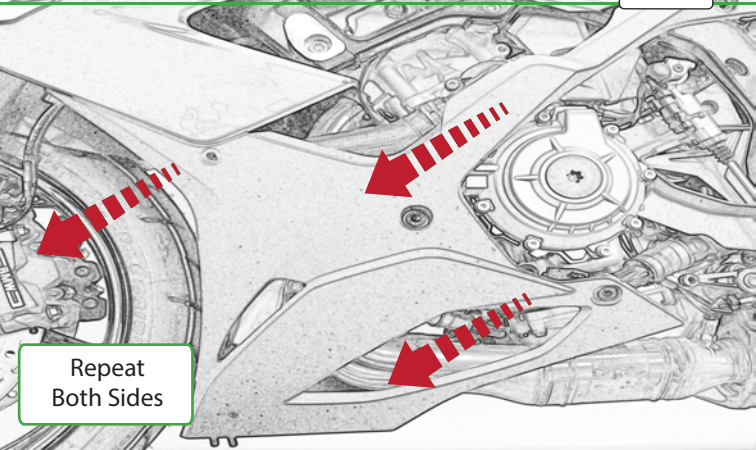

Repeat  
Both Sides

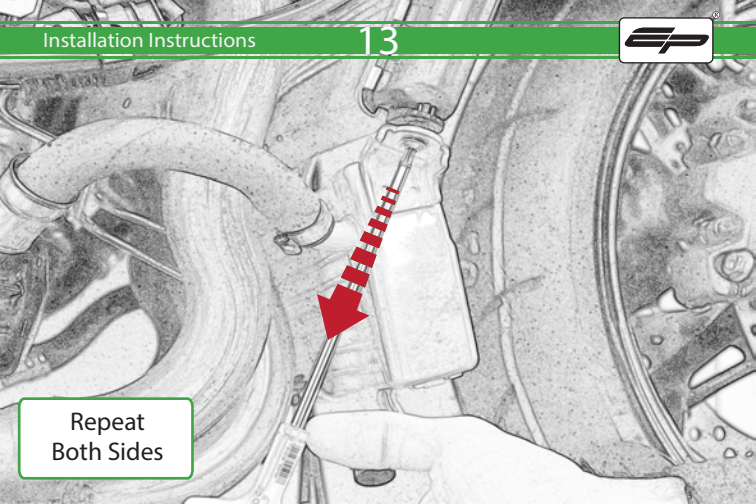

Repeat  
Both Sides

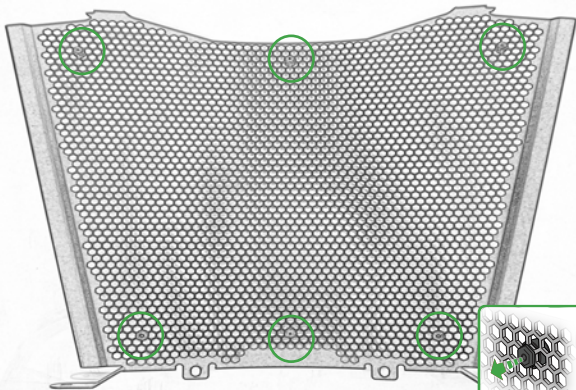




Locate round holes  
amongst hexagons.

Push Rubber Spacer  
through from the  
back of the guard  
so Hexagonal shape  
sits on the front face






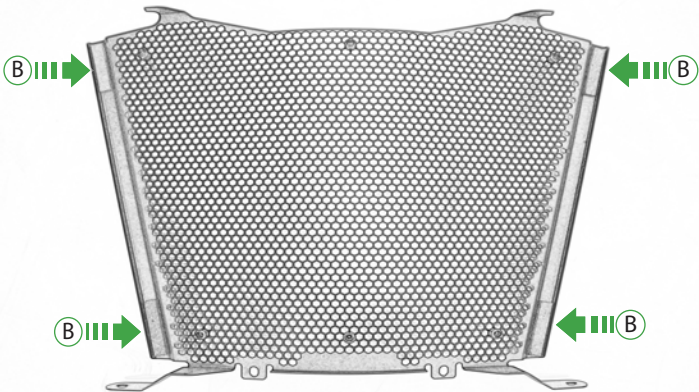


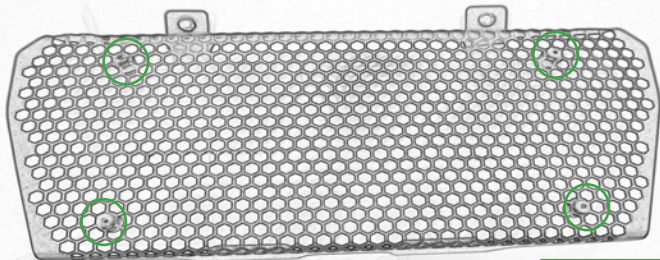

Locate round holes  
amongst hexagons.


Push Rubber Spacer  
through from the  
back of the guard  
so Hexagonal shape  
sits on the front face

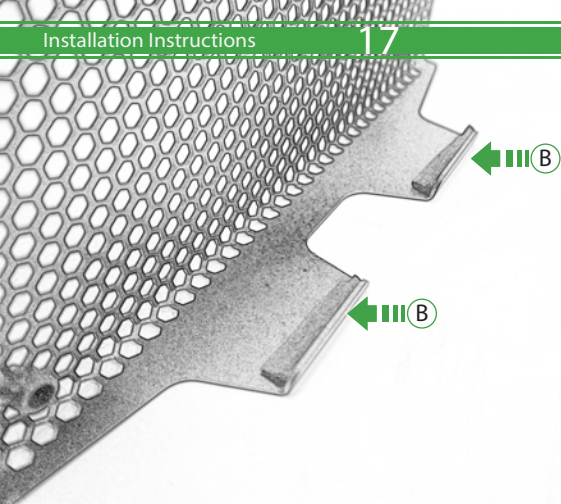

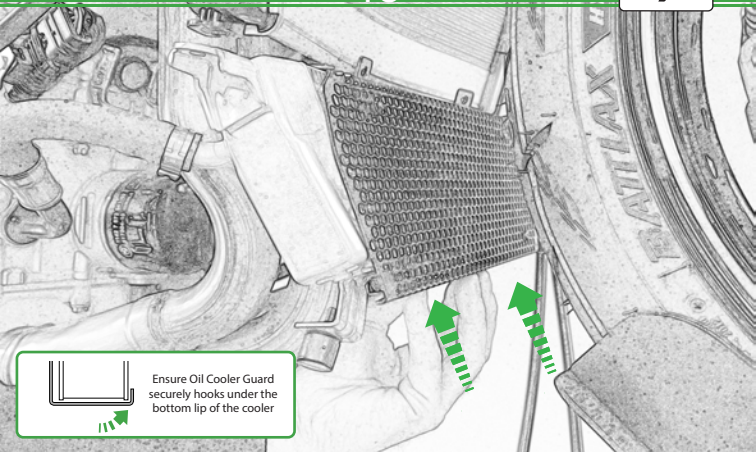


Ensure Oil Cooler Guard  
securely hooks under the  
bottom lip of the cooler



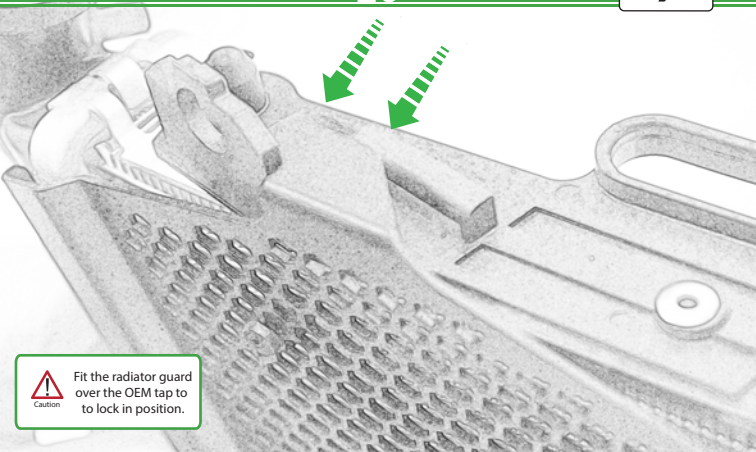


Caution

Fit the radiator guard over the OEM tap to lock in position.

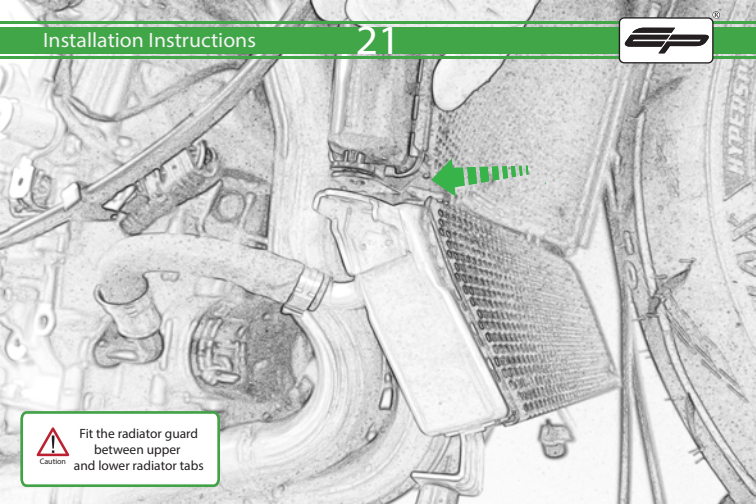


Caution

Fit the radiator guard  
between upper  
and lower radiator tabs

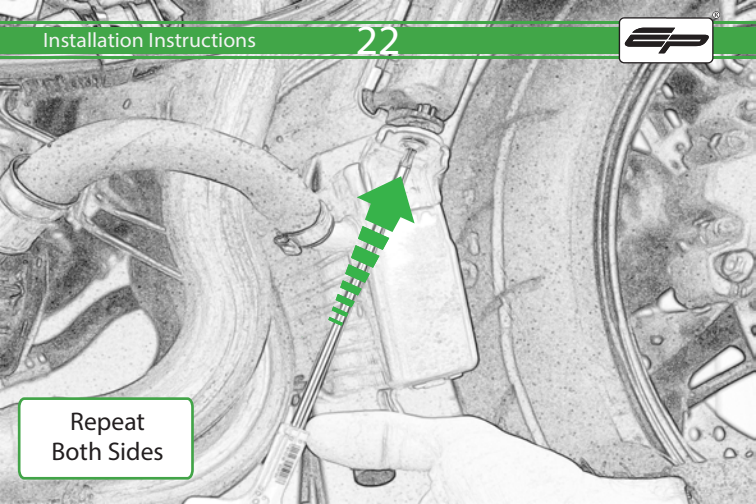

Repeat  
Both Sides



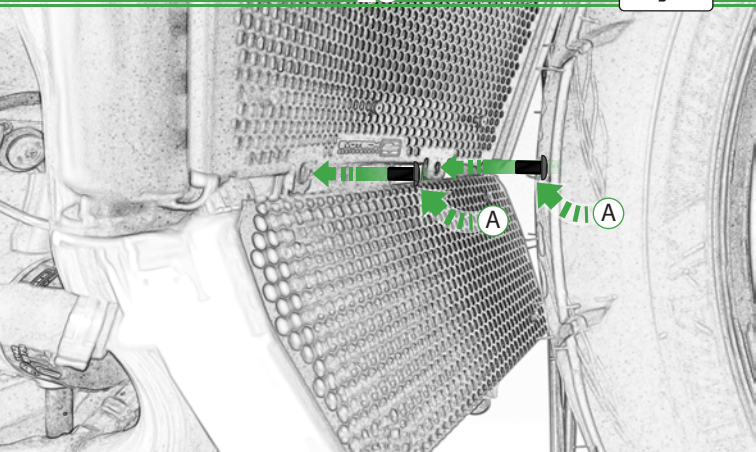





## ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that dirt and debris have not become trapped between the guard and the radiator/oil cooler. Such dirt and debris would reduce the cooling efficiency of the radiator/oil cooler.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)