


www.evotech-performance.com
BMW S 1000 RR
Tail Tidy Instructions





Kit Contents PRN014343


- A 1 x Rubber Bung
- B 1 x Retro Light
- © 1 x Loom Connector
- D 1 x Mounting Bracket
- E 2 x M4 Flange Nuts
- © 2 x Indicator Spacers
- © 2 x M6 x 16 Black Button Head Bolts
- \oplus 2 x M5 x 16 Caphead
- ① 2 x M5 x 16 Black Button Head Bolts
- 3 x M5 x 10 Black Button Head Bolts




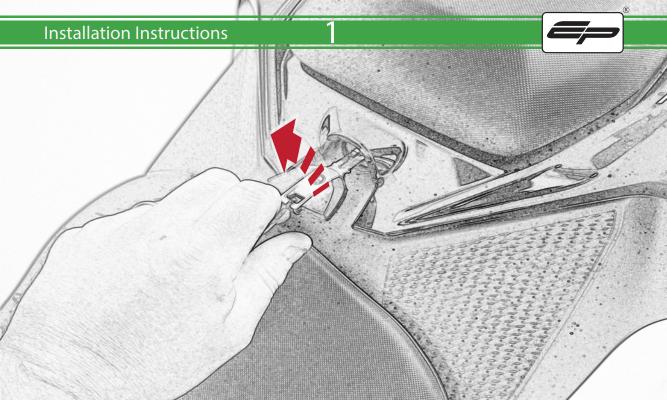


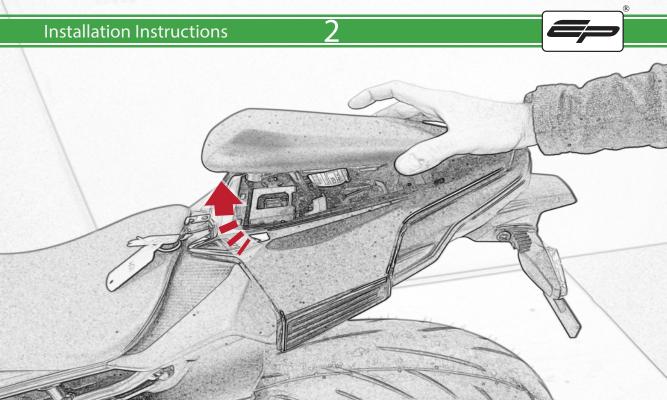


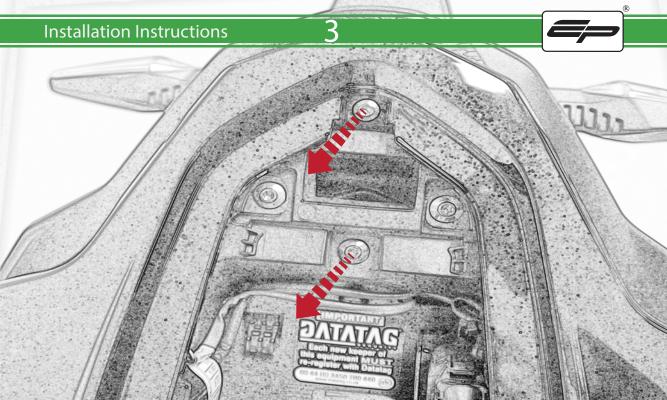


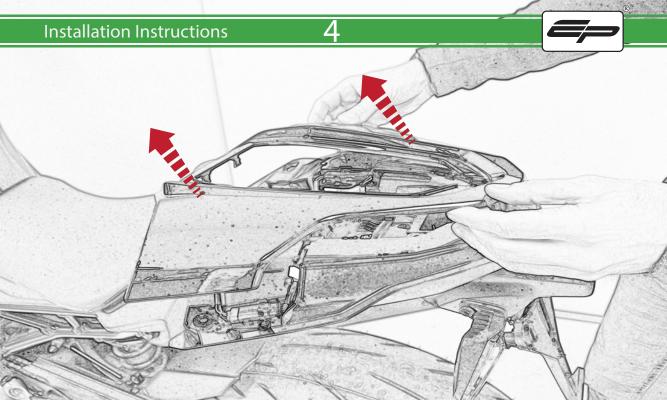


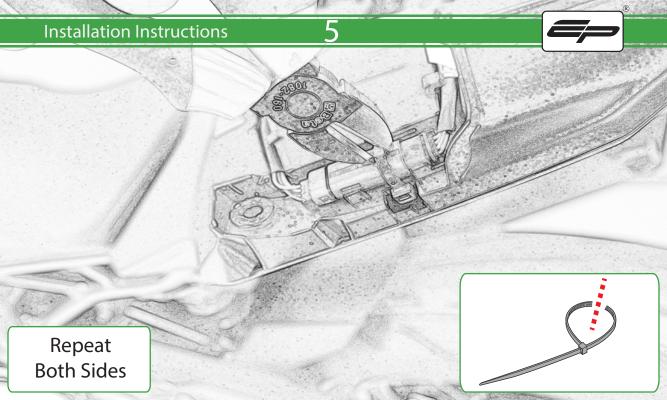


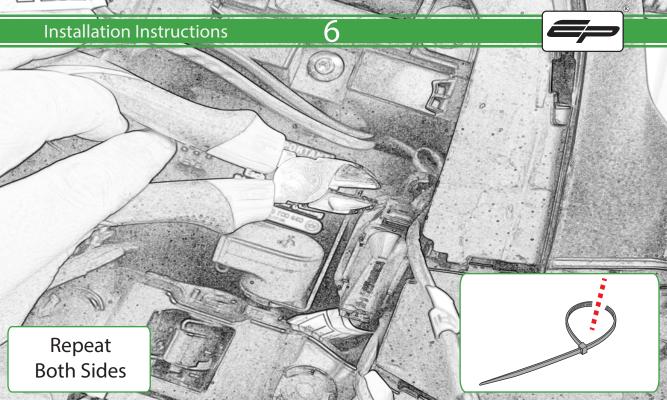


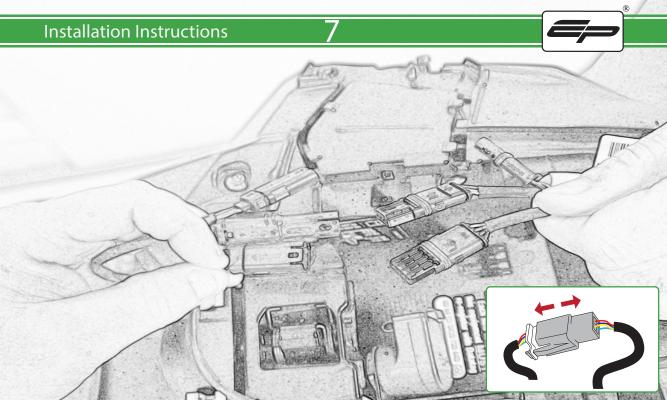


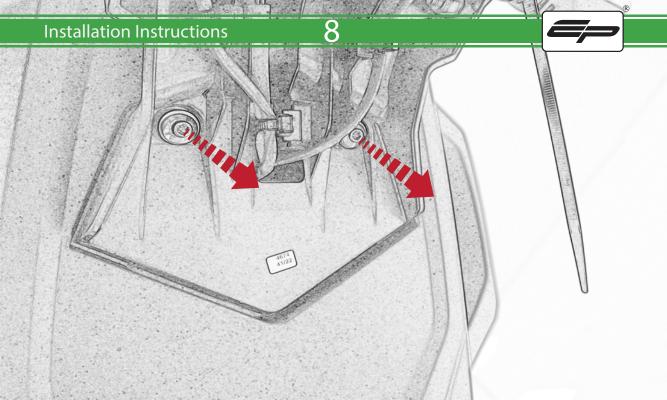


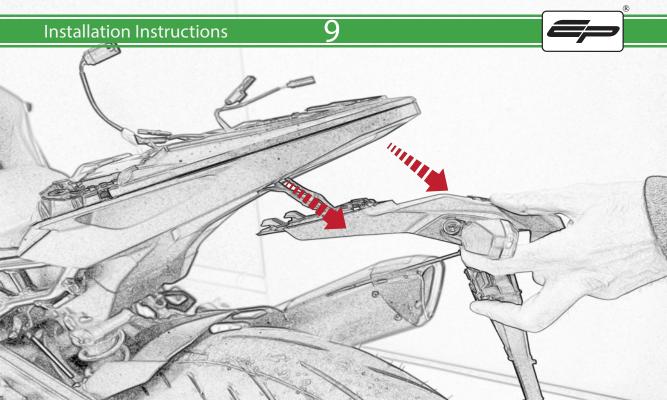


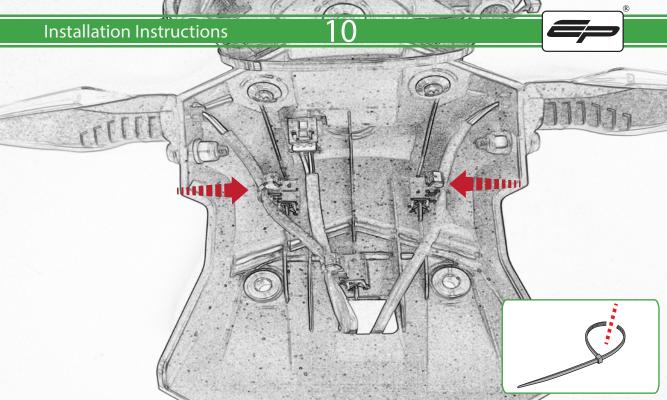

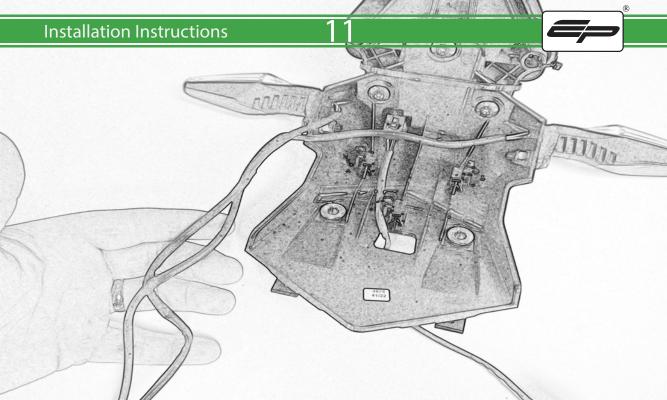


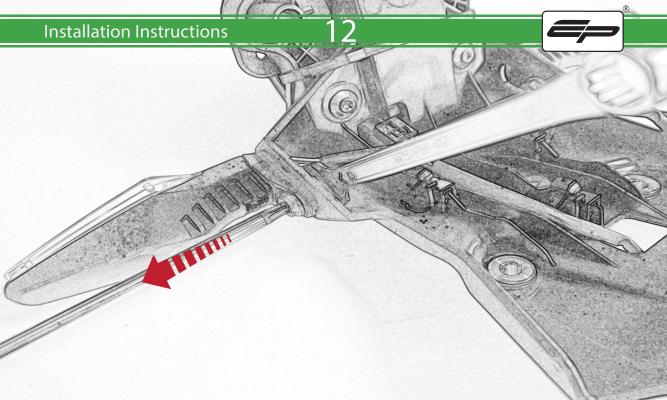

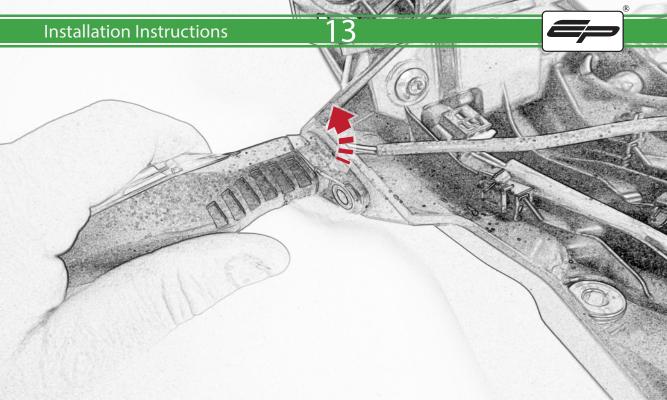

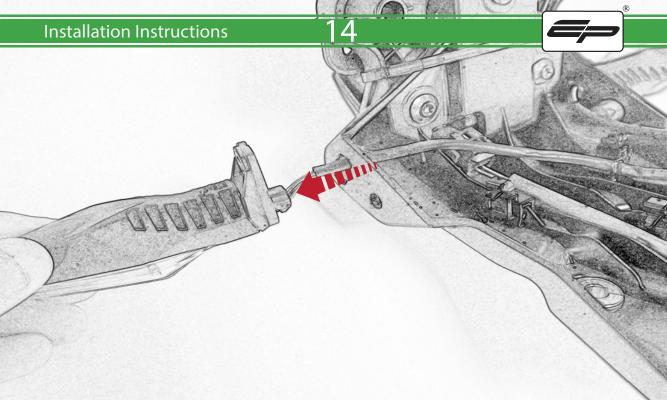




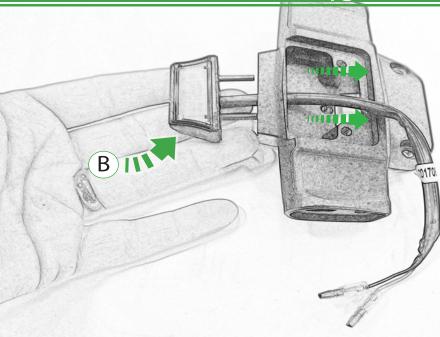



Installation Instructions 1




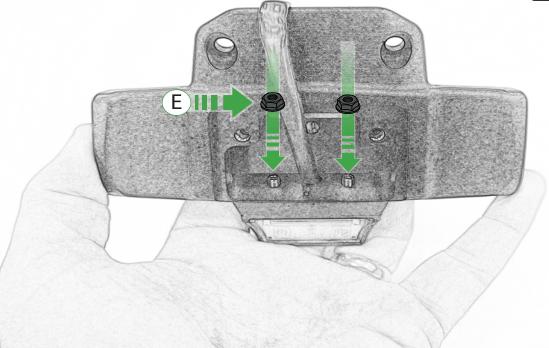





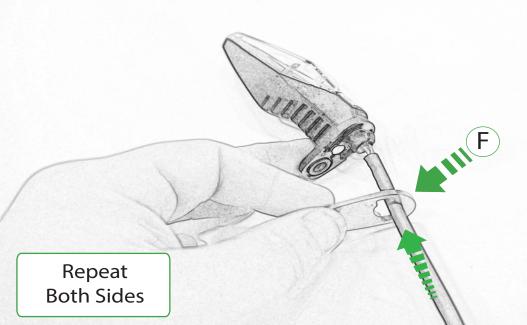


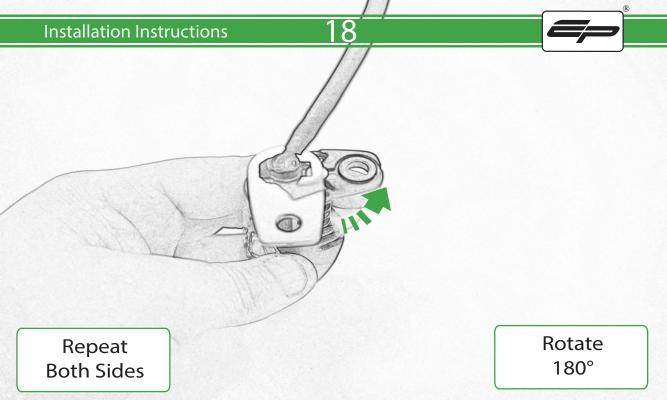

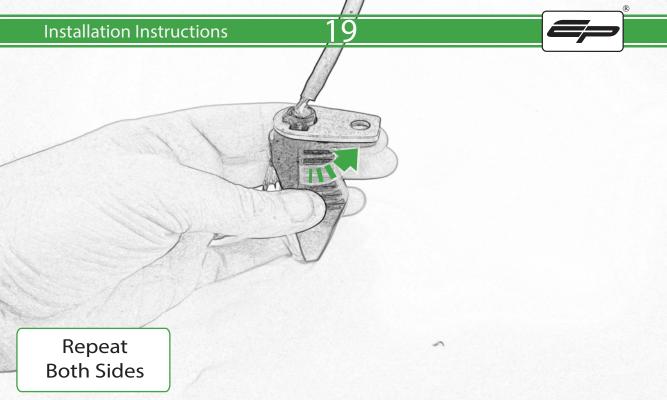

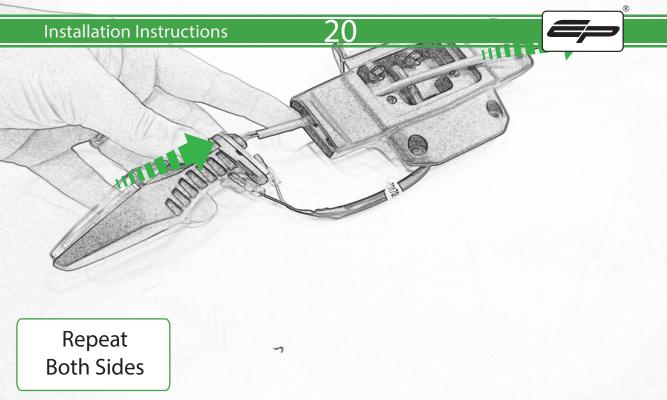


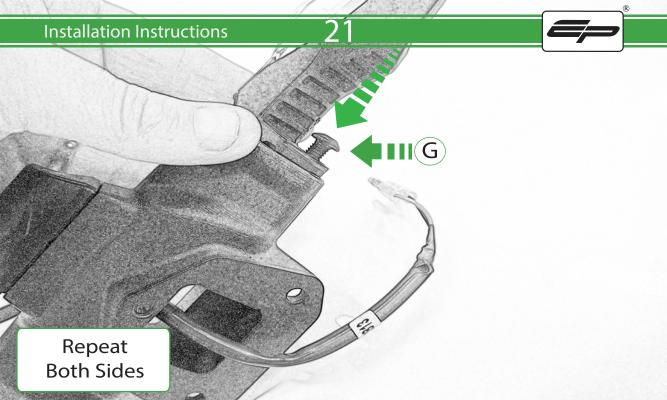


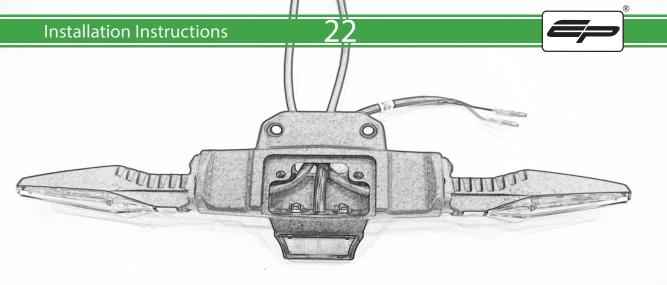






Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

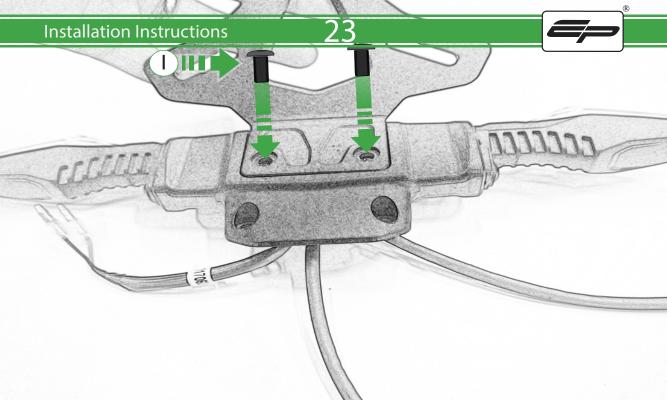


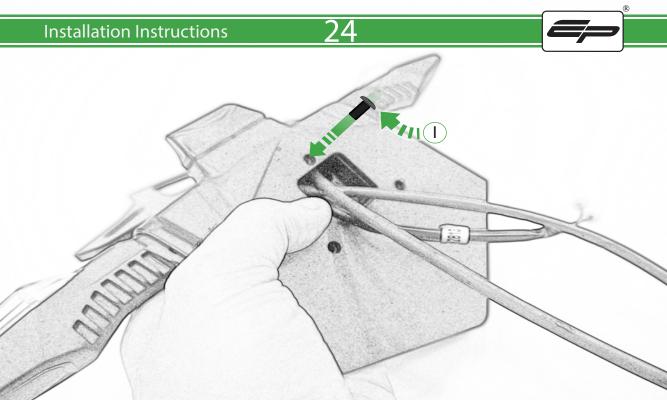


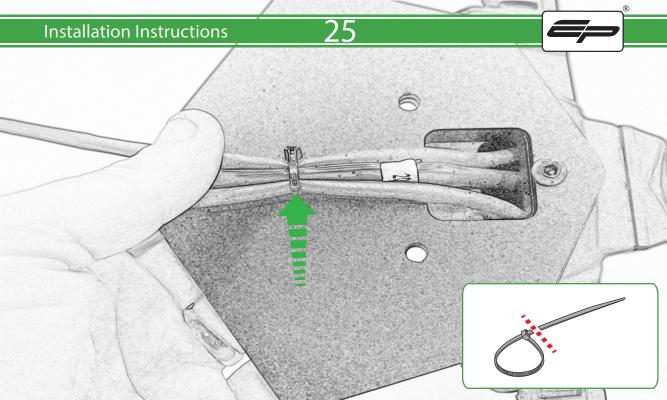


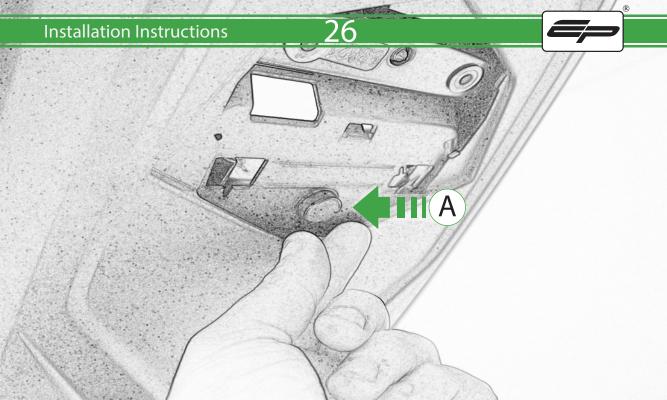


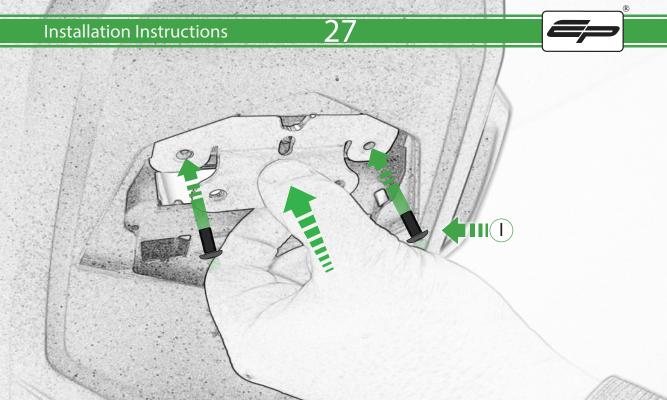


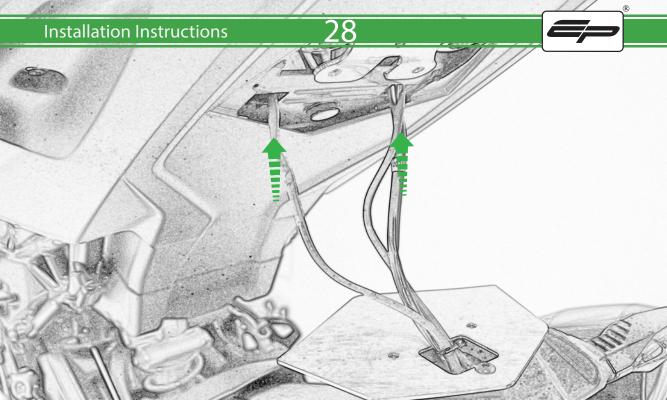


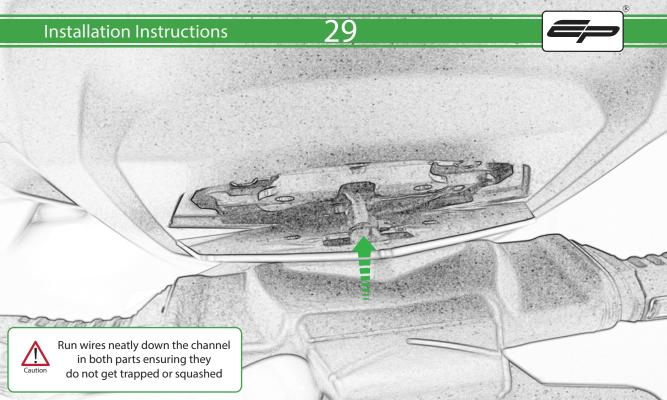

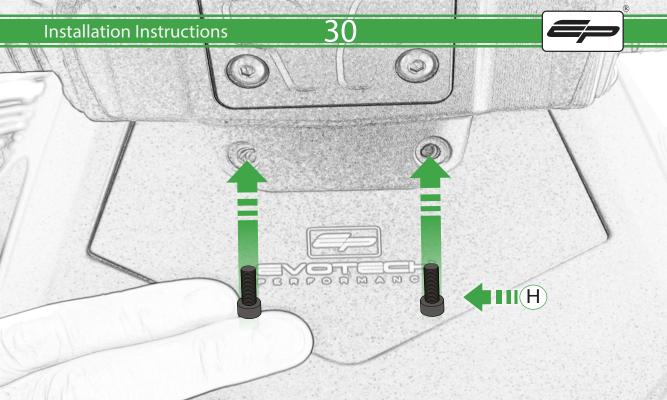

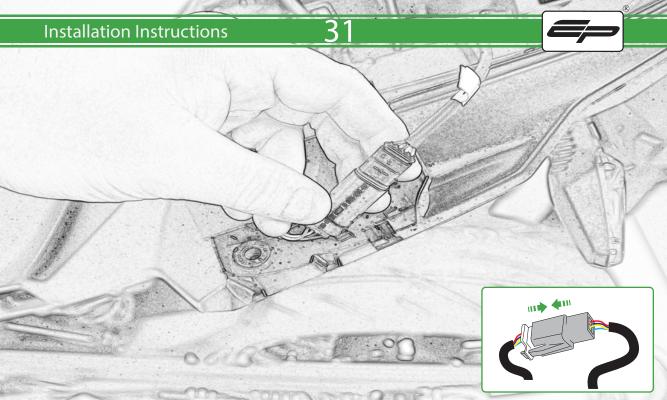

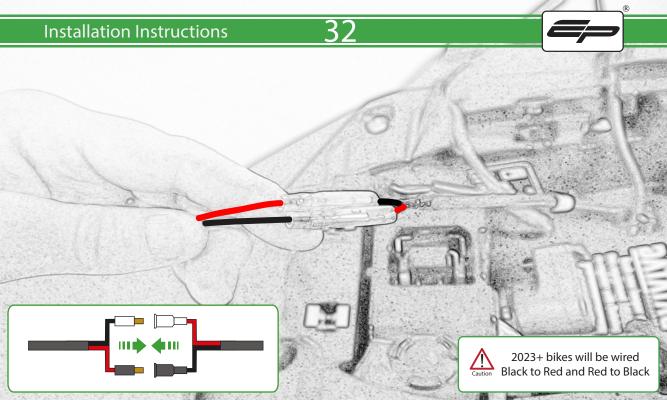

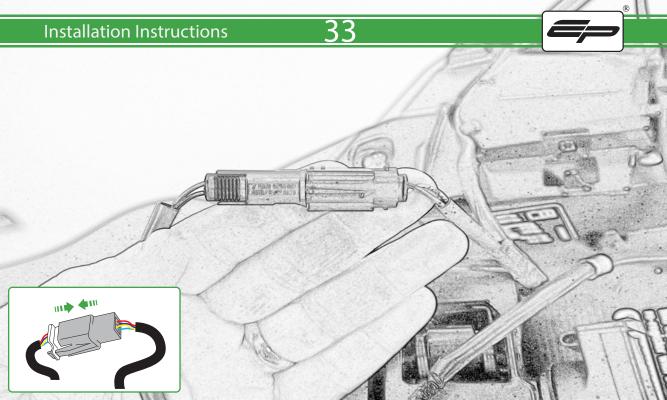







35



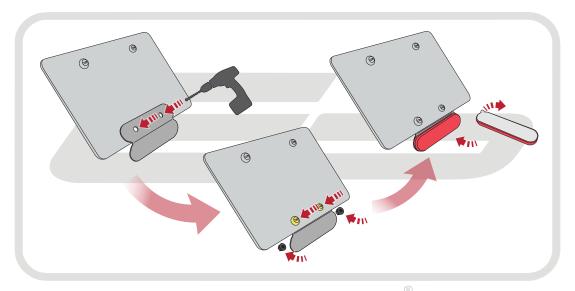





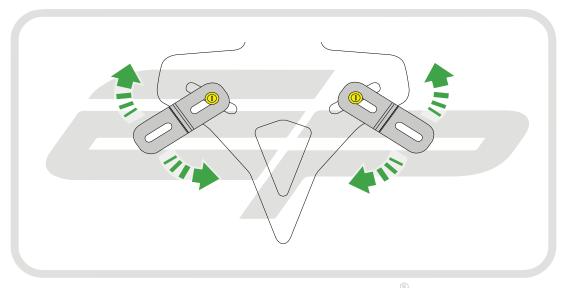







📐 ESSENTIAL CHECKS 🤼



After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed. Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle. It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.





www.evotech-performance.com