





BMW R 1200 / 1250 GS
Garmin Sat Nav Mount

Installation Instructions

- Ⓐ 1 x Main Plate
- Ⓑ 1 x Sub Plate
- Ⓒ 2 x M4 x 5mm Black Button Head Bolts
- Ⓓ 2 x P-clips (No.1)
- Ⓔ 2 x P-clips (No.2)
- Ⓕ 2 x P-clips (No.3)
- Ⓖ 2 x P-clips (No.4)
- Ⓗ 3 x M5 x 12mm Black Button head Bolts
- Ⓘ 4 x M4 x 10mm Black Button head Bolts
- ⓵ 4 x M6 x 16mm Caphead Bolt

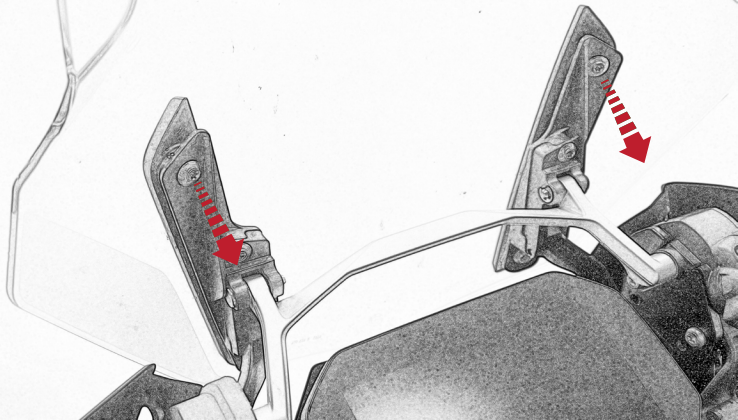

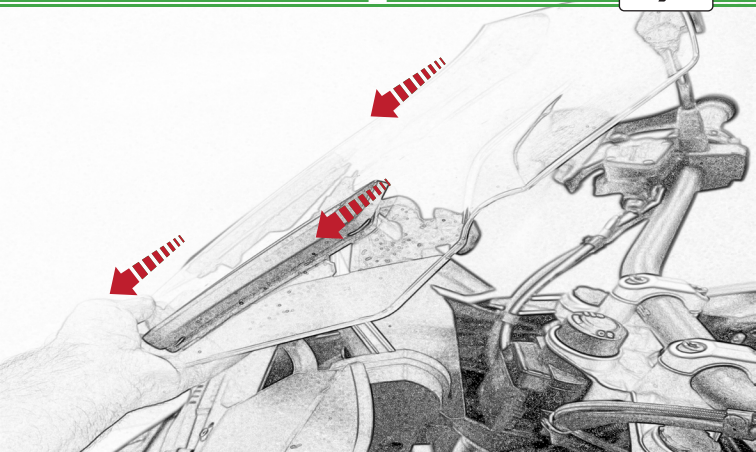





Repeat
Both Sides




Repeat
Both Sides

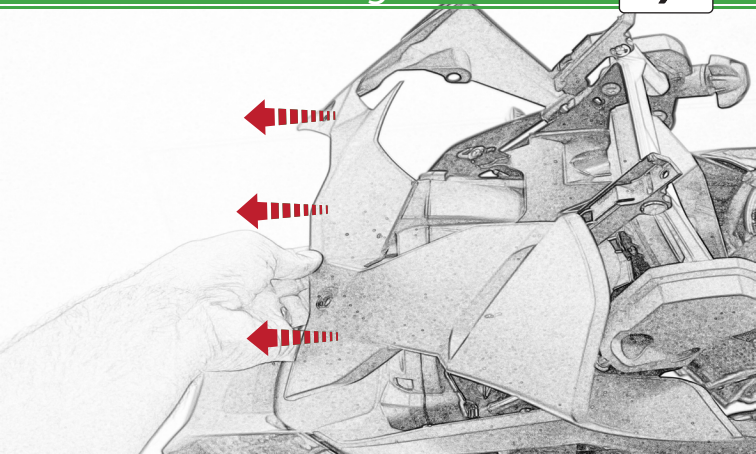


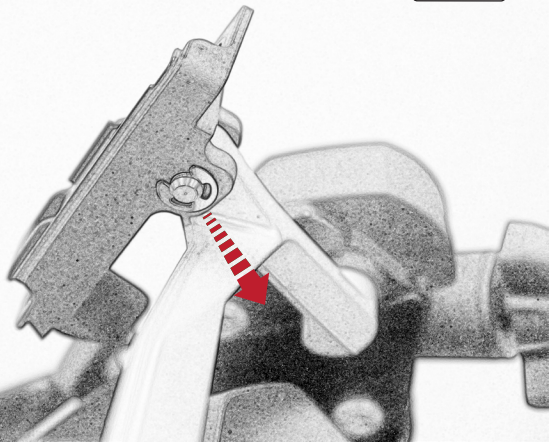


Repeat
Both Sides

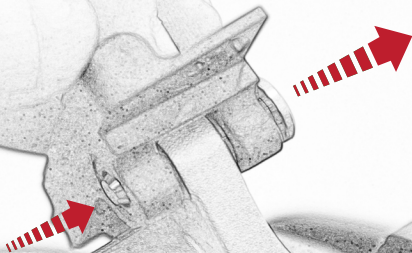


Repeat
Both Sides

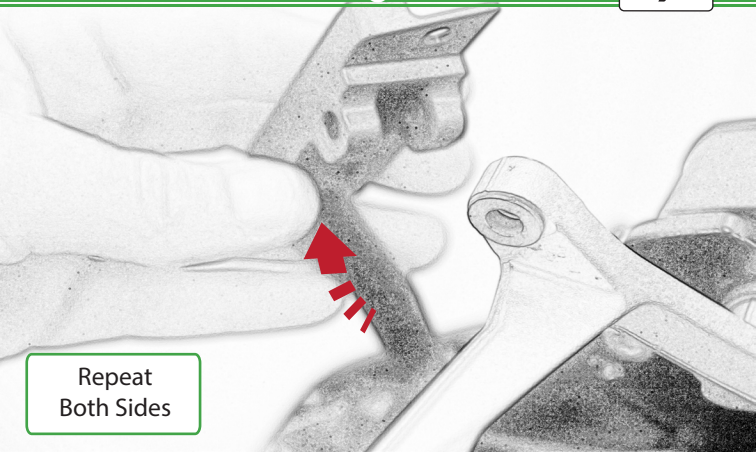


Repeat
Both Sides

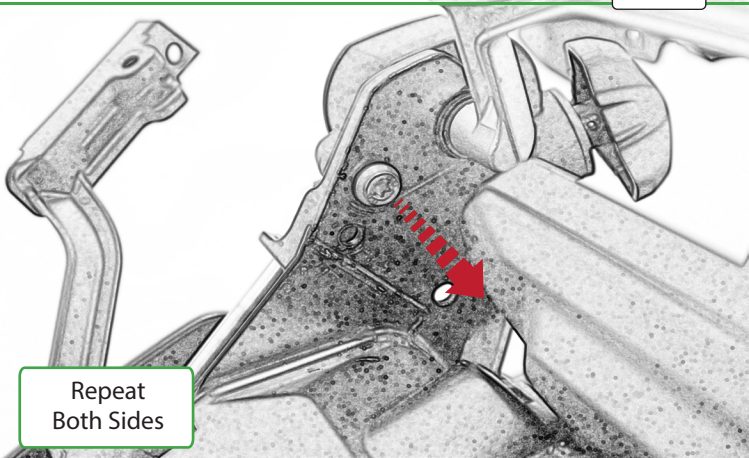

Repeat
Both Sides

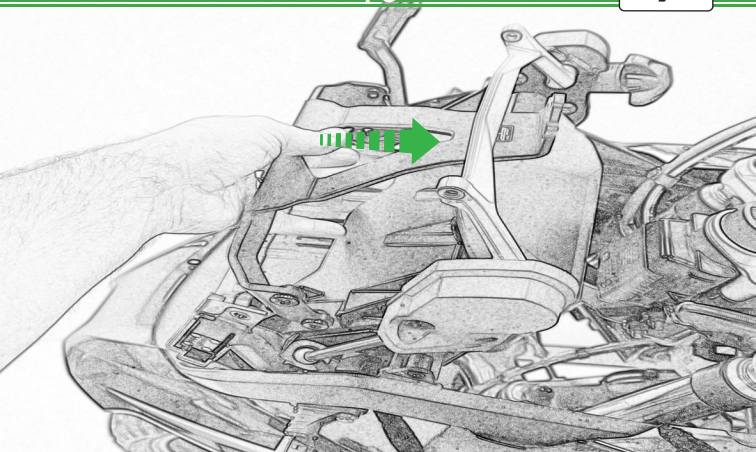

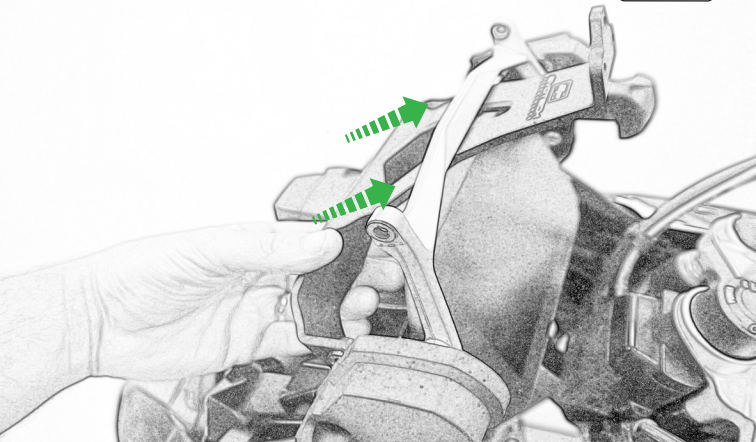






J




Repeat
Both Sides

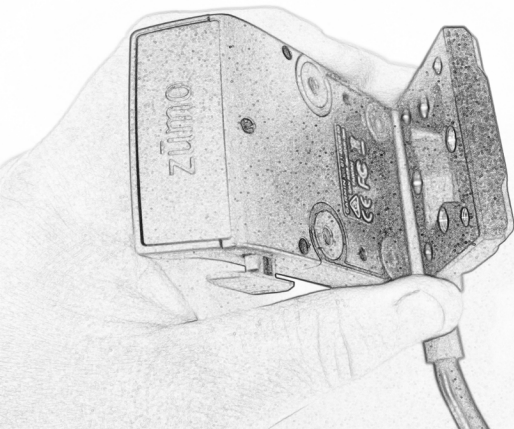

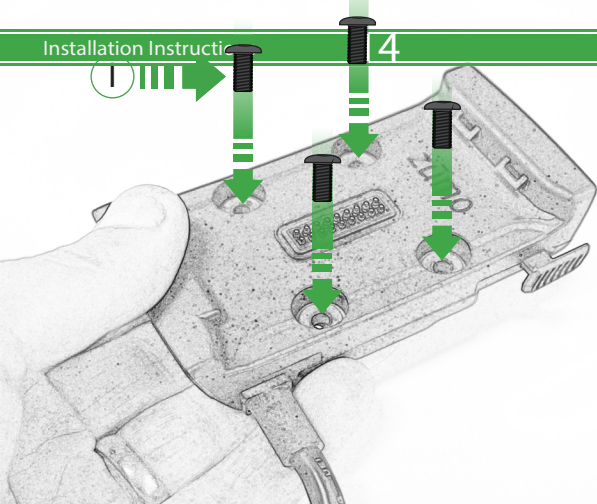

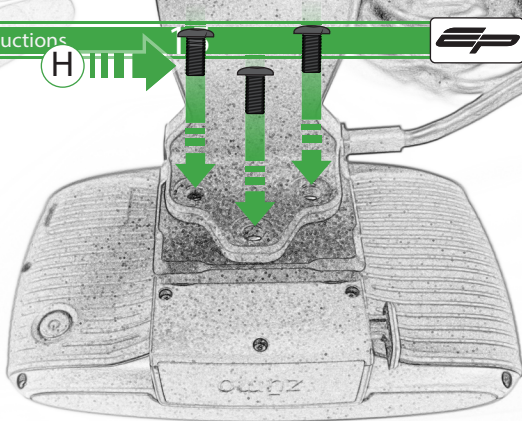

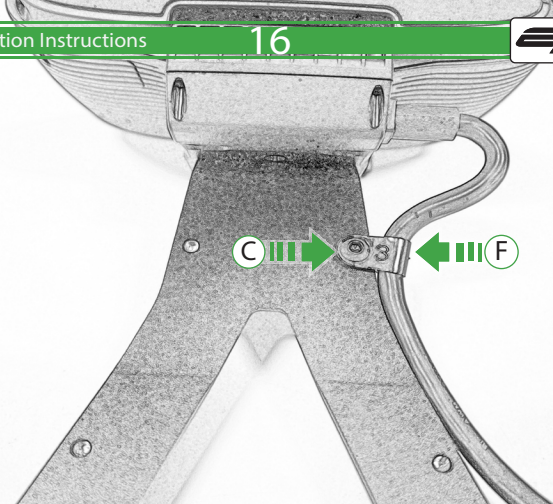



Reverse Stages

9 - 1



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com