

Triumph Tiger 1200 Tom Tom Sat Nav Mount

Installation Instructions

Installation Instructions



Kit Contents PRN014516-014567


1 x Main Plate


(L) 2 x M4 x 5mm Black Button Head Bolts


(B) 1 x Pivot Plate

- M 4 x M5 x 12mm Black Button Head Bolts
- © 1 x Sub Mounting Bracket
- (D) 2 x M5 x 8mm Black Button Head Bolts
- (E) 2 x Lobe Screw
- F 2 x Locking Washer
- © 2 x P-clips (No.1) H 2 x P-clips (No.2)
- ① 2 x P-clips (No.3)
- ① 2 x P-clips (No.4)
- (K) 2 x M5 Black Washer



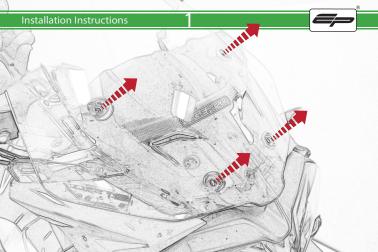


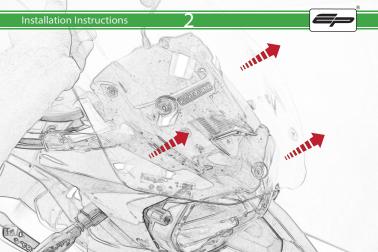


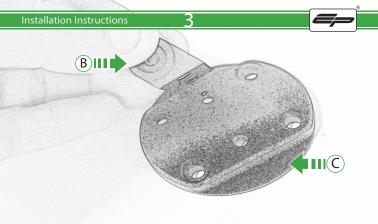








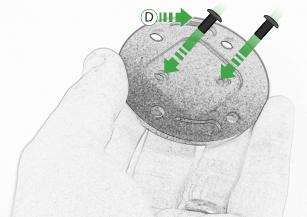


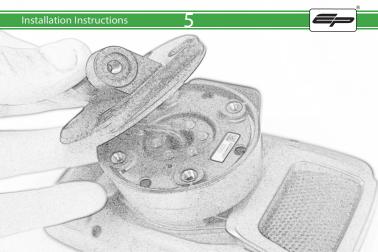


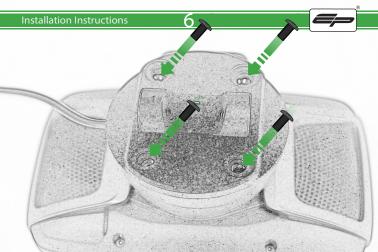


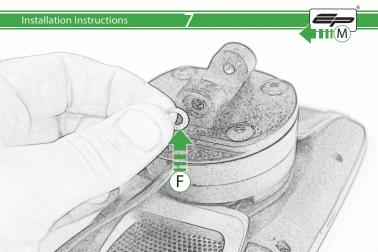


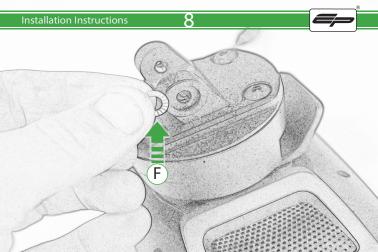


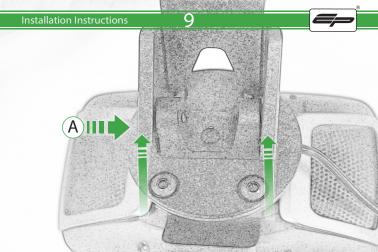


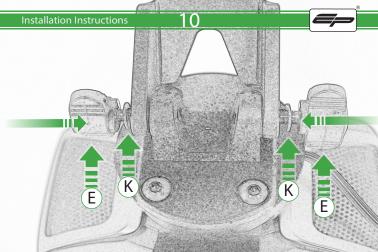

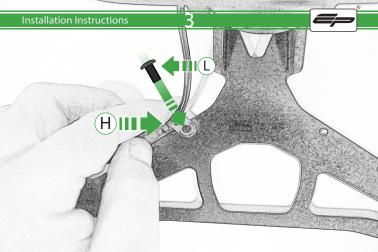

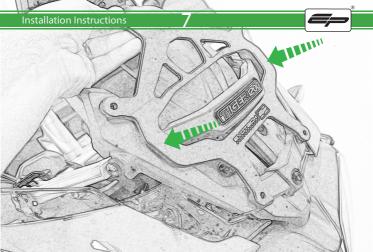

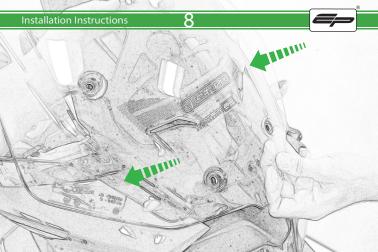

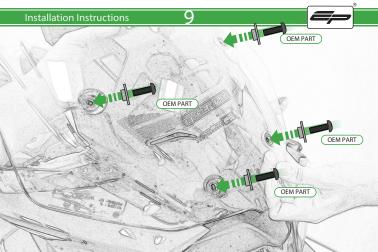





It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced





www.evotech-performance.com