

Ducati Supersport SP Connect Sat Nav Mount

Installation Instructions

Installation Instructions



For SP Connect mirco stem mount alu Part number #53122 follow instructions 1 - 15

For SP Connect anti vibration module Part number #53135 follow instructions 16 - 26



Installation Instructions



Kit Contents

Sub Kit

- (A) 1 x M6 x 16 Countersunk Screw (B) 1 x Pivot Plate
- (AA) 2 x M10 x 45 Caphead


© 1 x SP Connect Plate


® 2 x Spacers


- © 1 x Mounting Bracket


 © 2 x Nord Washer
- © 2 x M5 x 10mm Caphead Bolts
- © 2 x M5 x 12mm Caphead Bolts




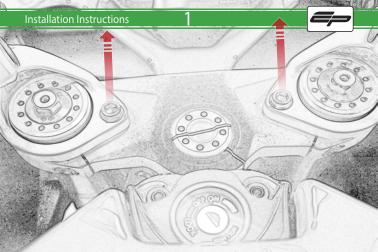

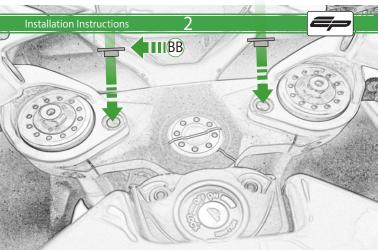

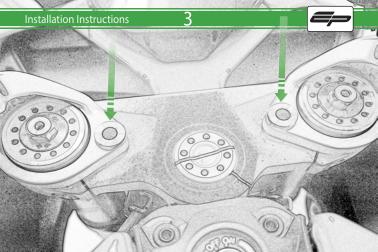


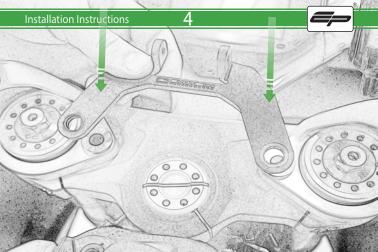


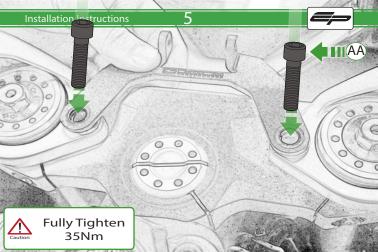






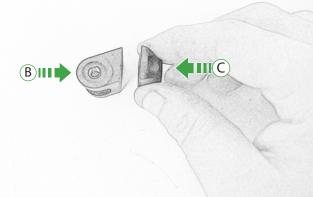

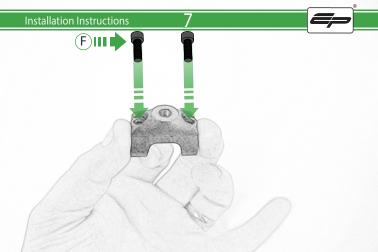






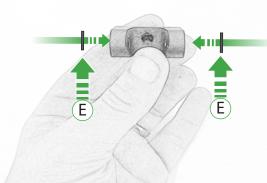









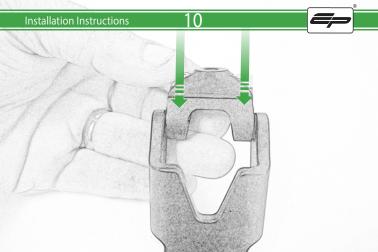

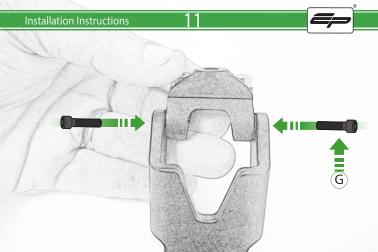





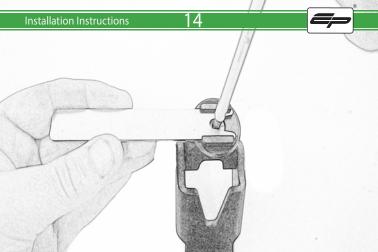





It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



Installation Instructions




Kit Contents


- (A) 1 x M6 x 16 Countersunk Screw (B) 1 x Pivot Plate
- © 1 x M5 Nyloc Nut
- ① 1 x Mounting Bracket
- © 1 x Modifying Bracke
- © 2 x M5 x 10mm Caphead Bolts
- © 2 x M5 x 12mm Caphead Bolts


Sub Kit


- (A) 2 x M10 x 45 Caphead
- (BB) 2 x Spacers




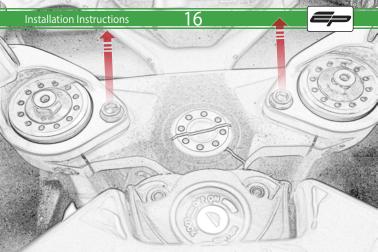

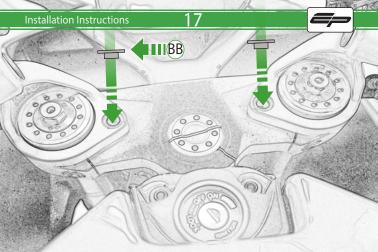

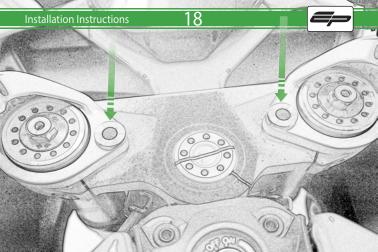

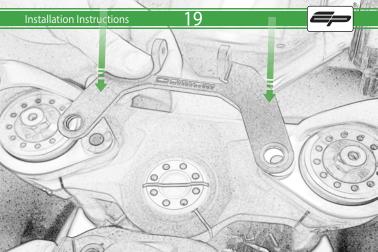


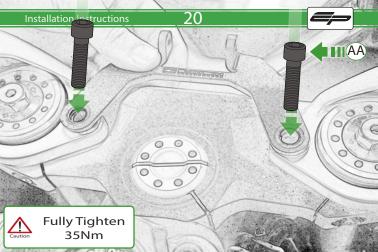







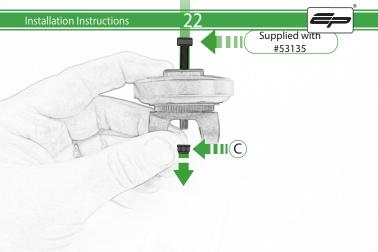












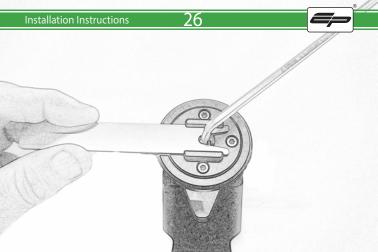





It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced





www.evotech-performance.com