



EVOTECH®
P E R F O R M A N C E

Honda CBR1000RR-R / SP


Paddock Stand Swingarm Plates

Installation Instructions




Kit Contents PRN014806

- (A) 1 x Right Hand Plate
- (B) 1 x Left Hand Plate
- (C) 4 x M6 x 20 Black Caphead
- (D) 4 x M6 x Black Washer

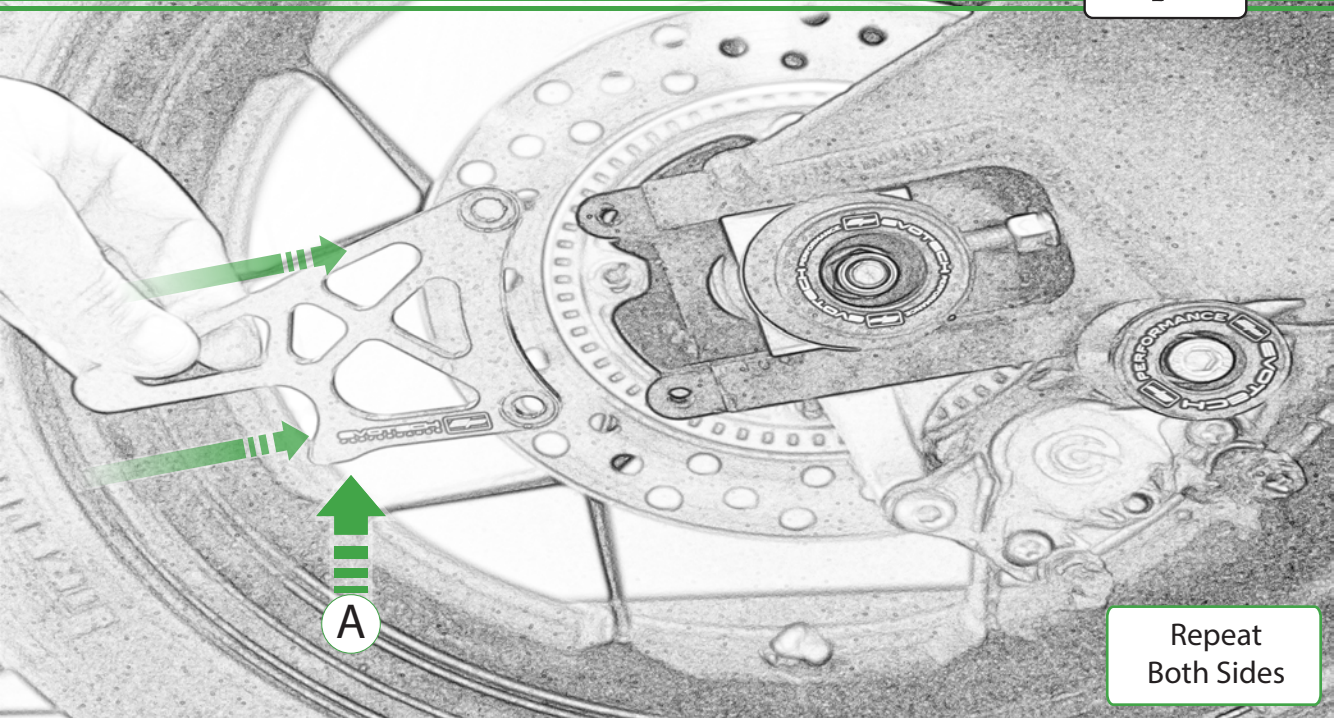


Repeat
Both Sides

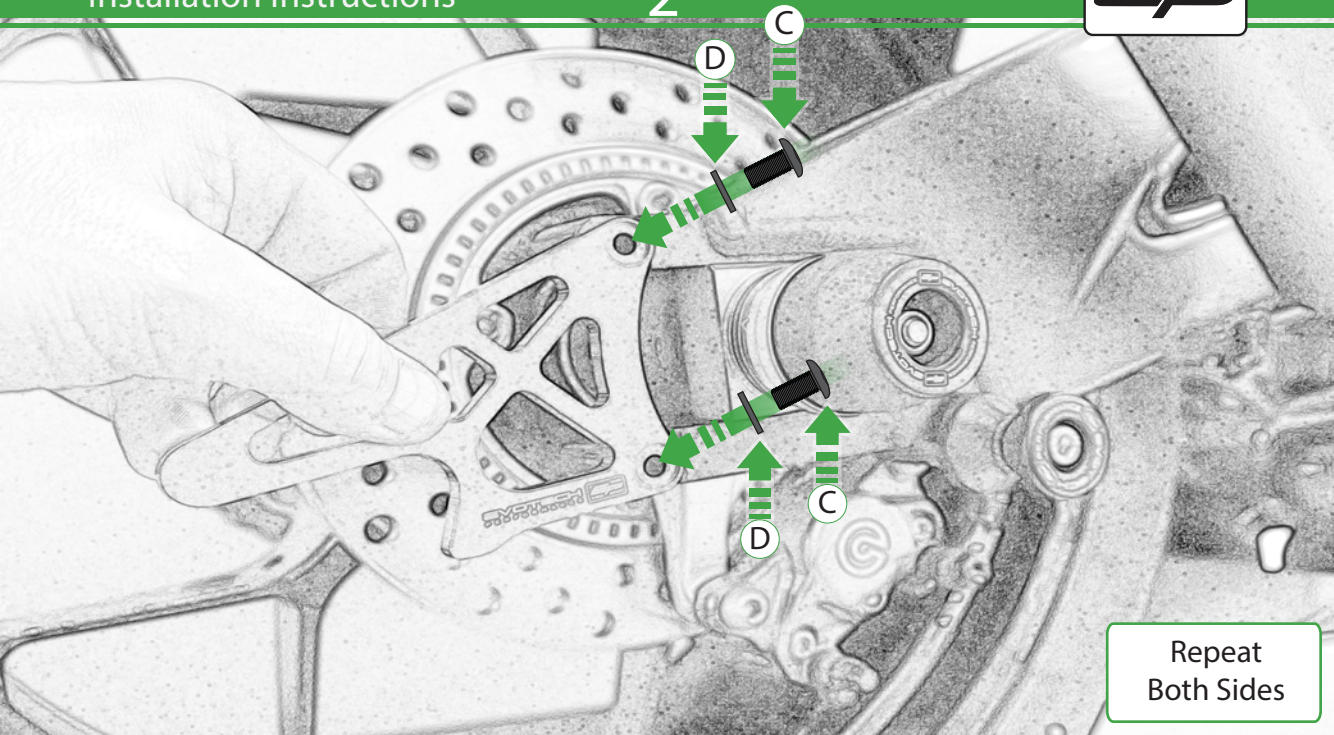

Repeat
Both Sides



Repeat
Both Sides

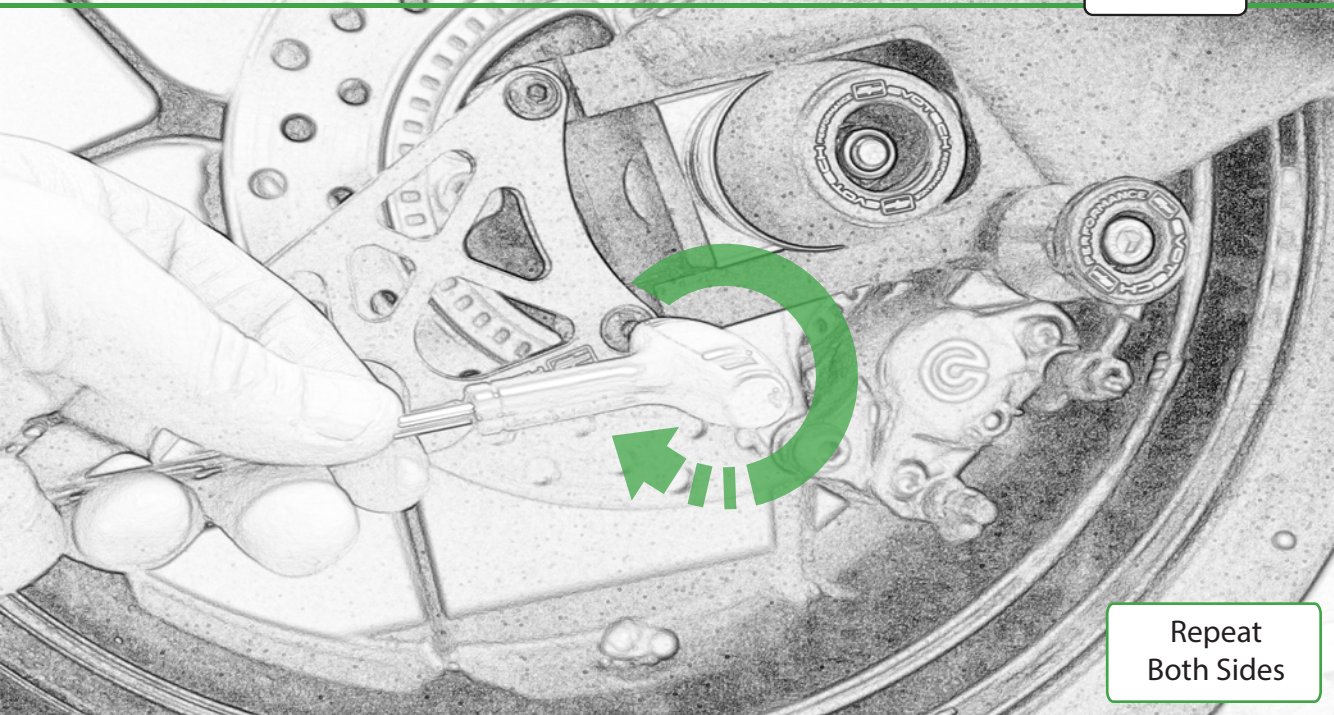

Repeat
Both Sides



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com