



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


BMW F 900 XR / XR TE

Installation Instructions




Kit Contents PRN014919

- (A) 2 x M4 x 12 Button Head Bolts
- (B) 2 x Cable Ties
- (C) 4 x Rubber Bungs

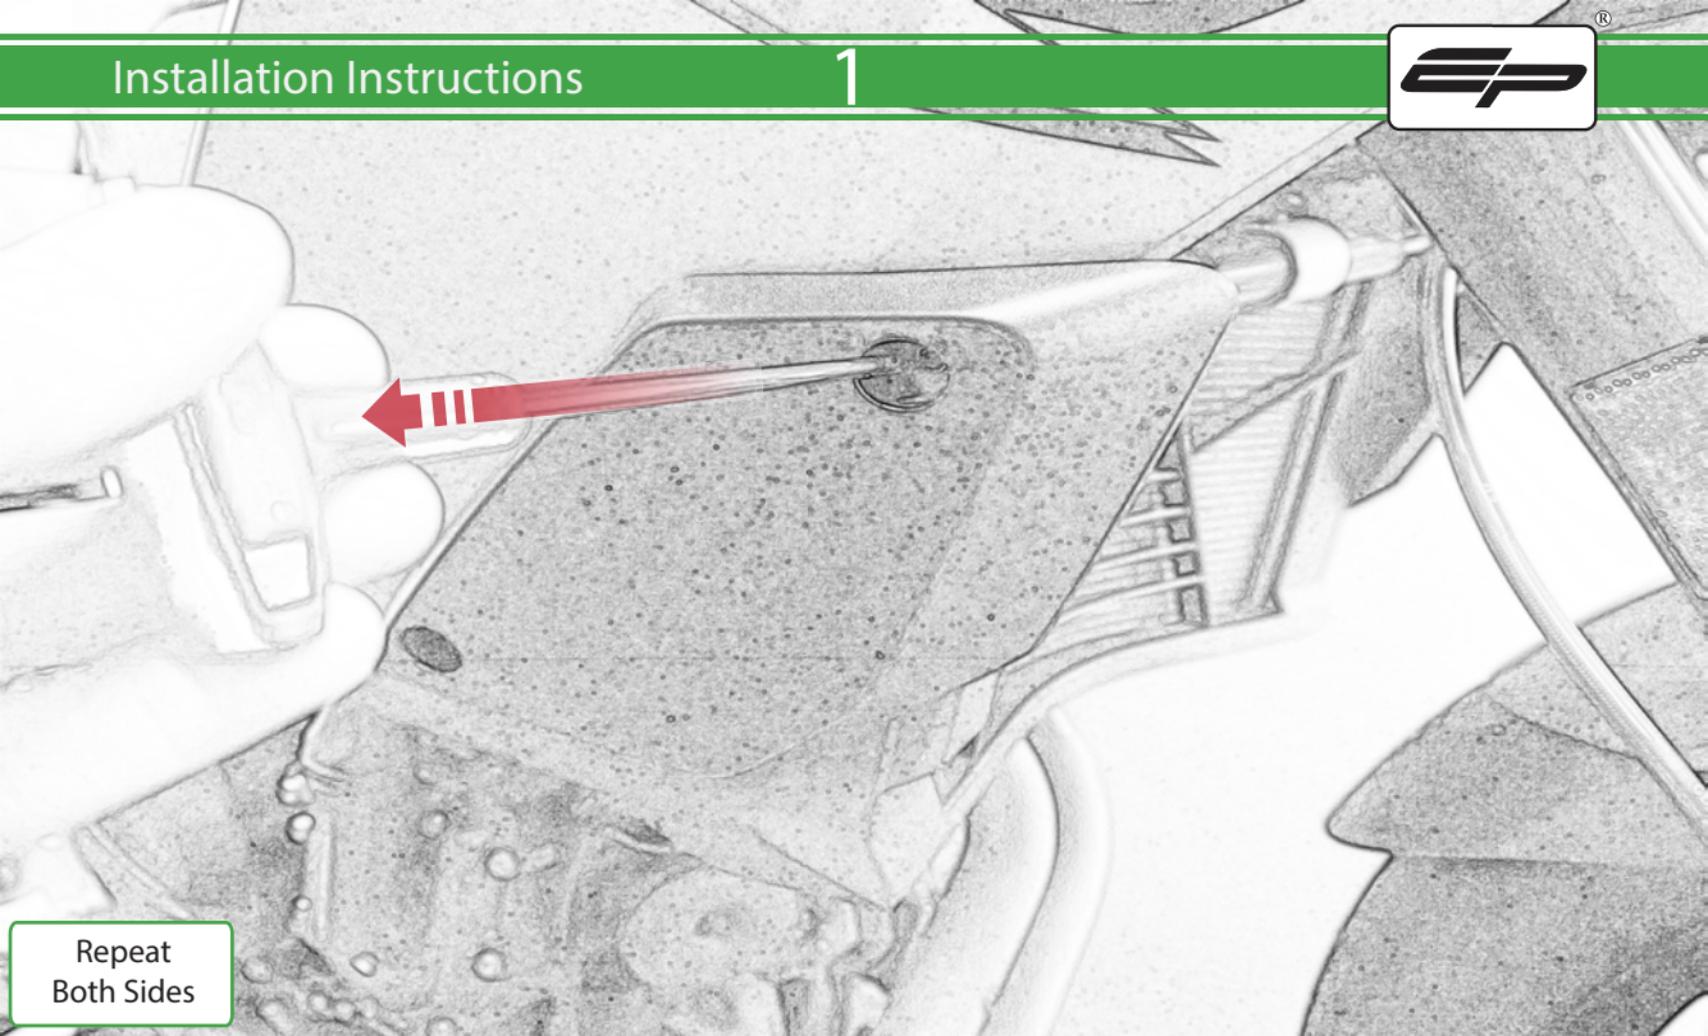


Repeat
Both Sides

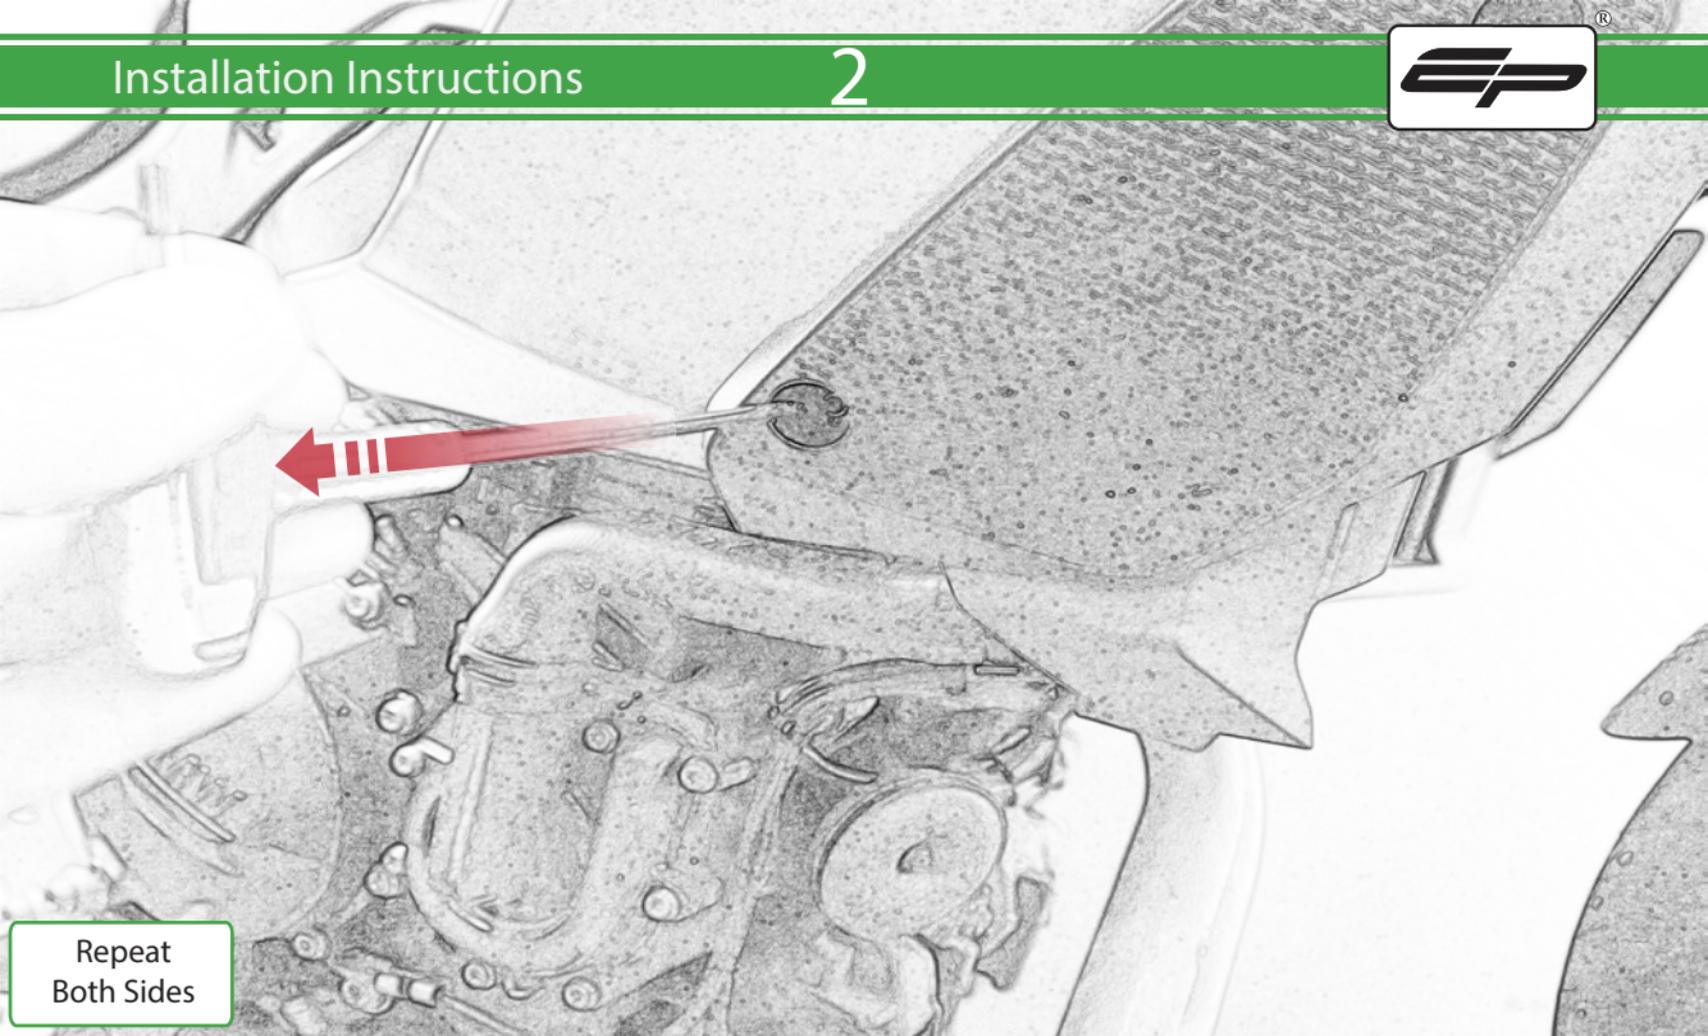


Repeat
Both Sides




Repeat
Both Sides

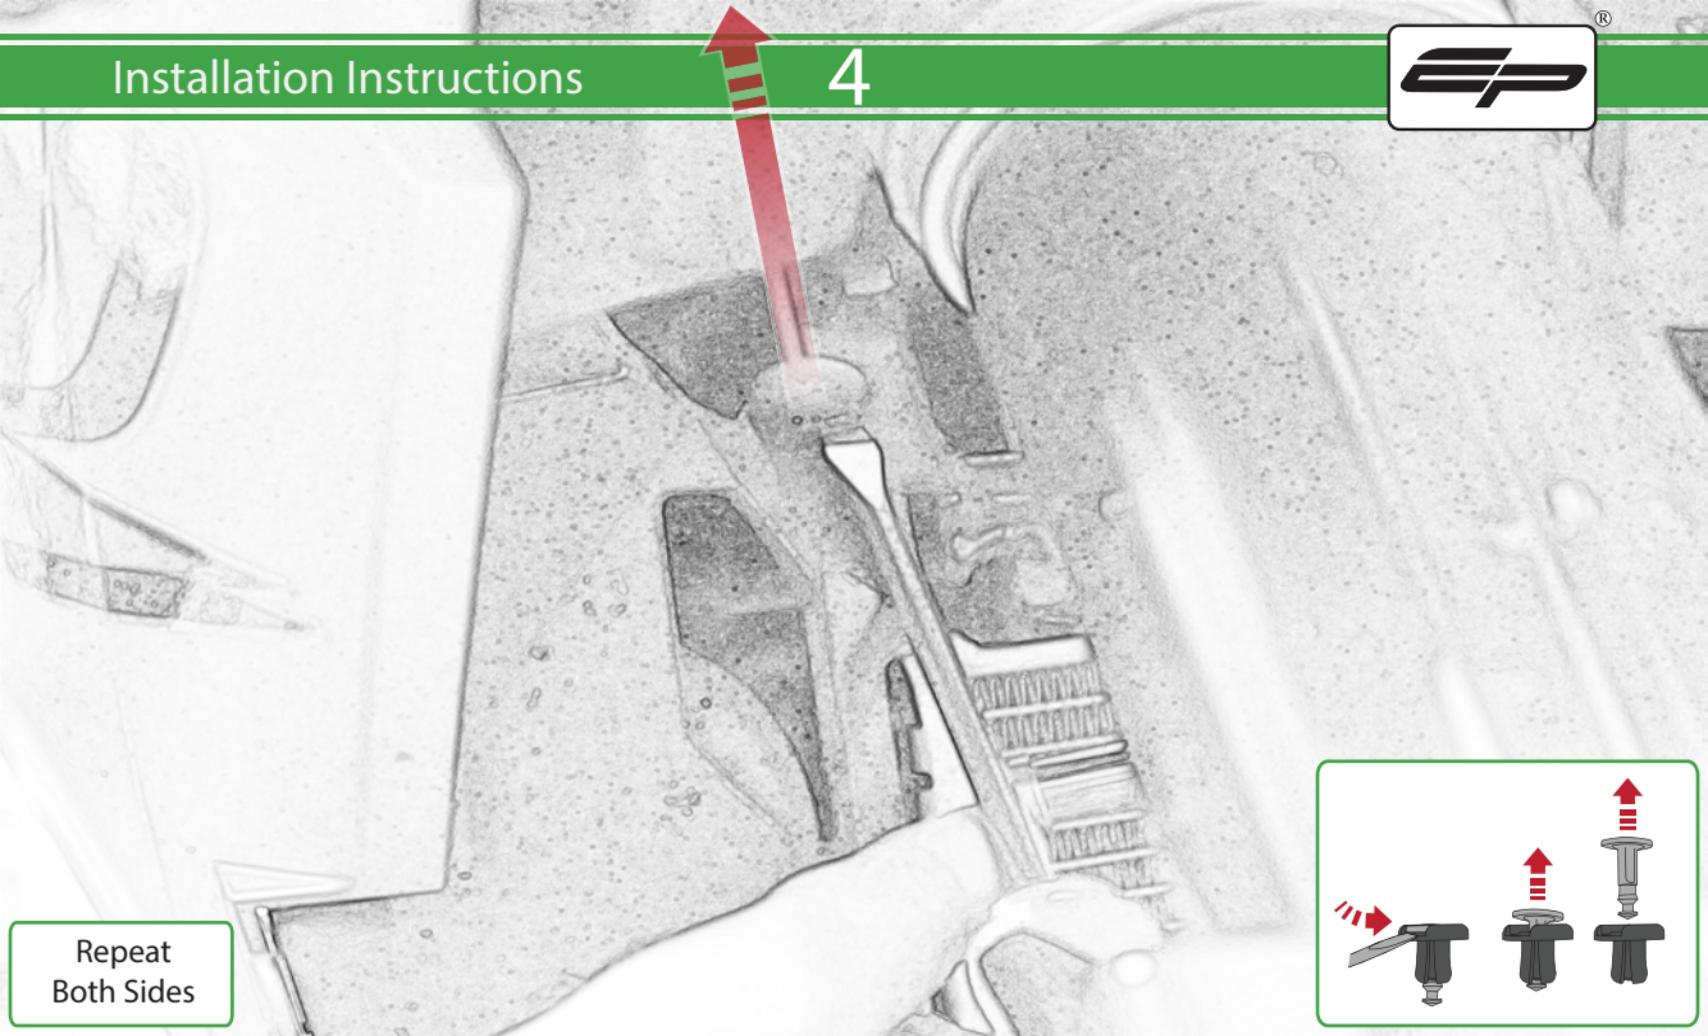


Repeat
Both Sides

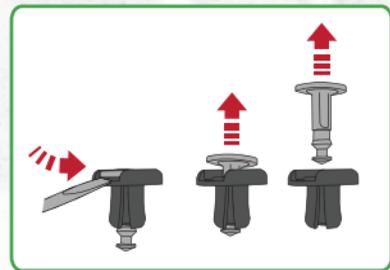

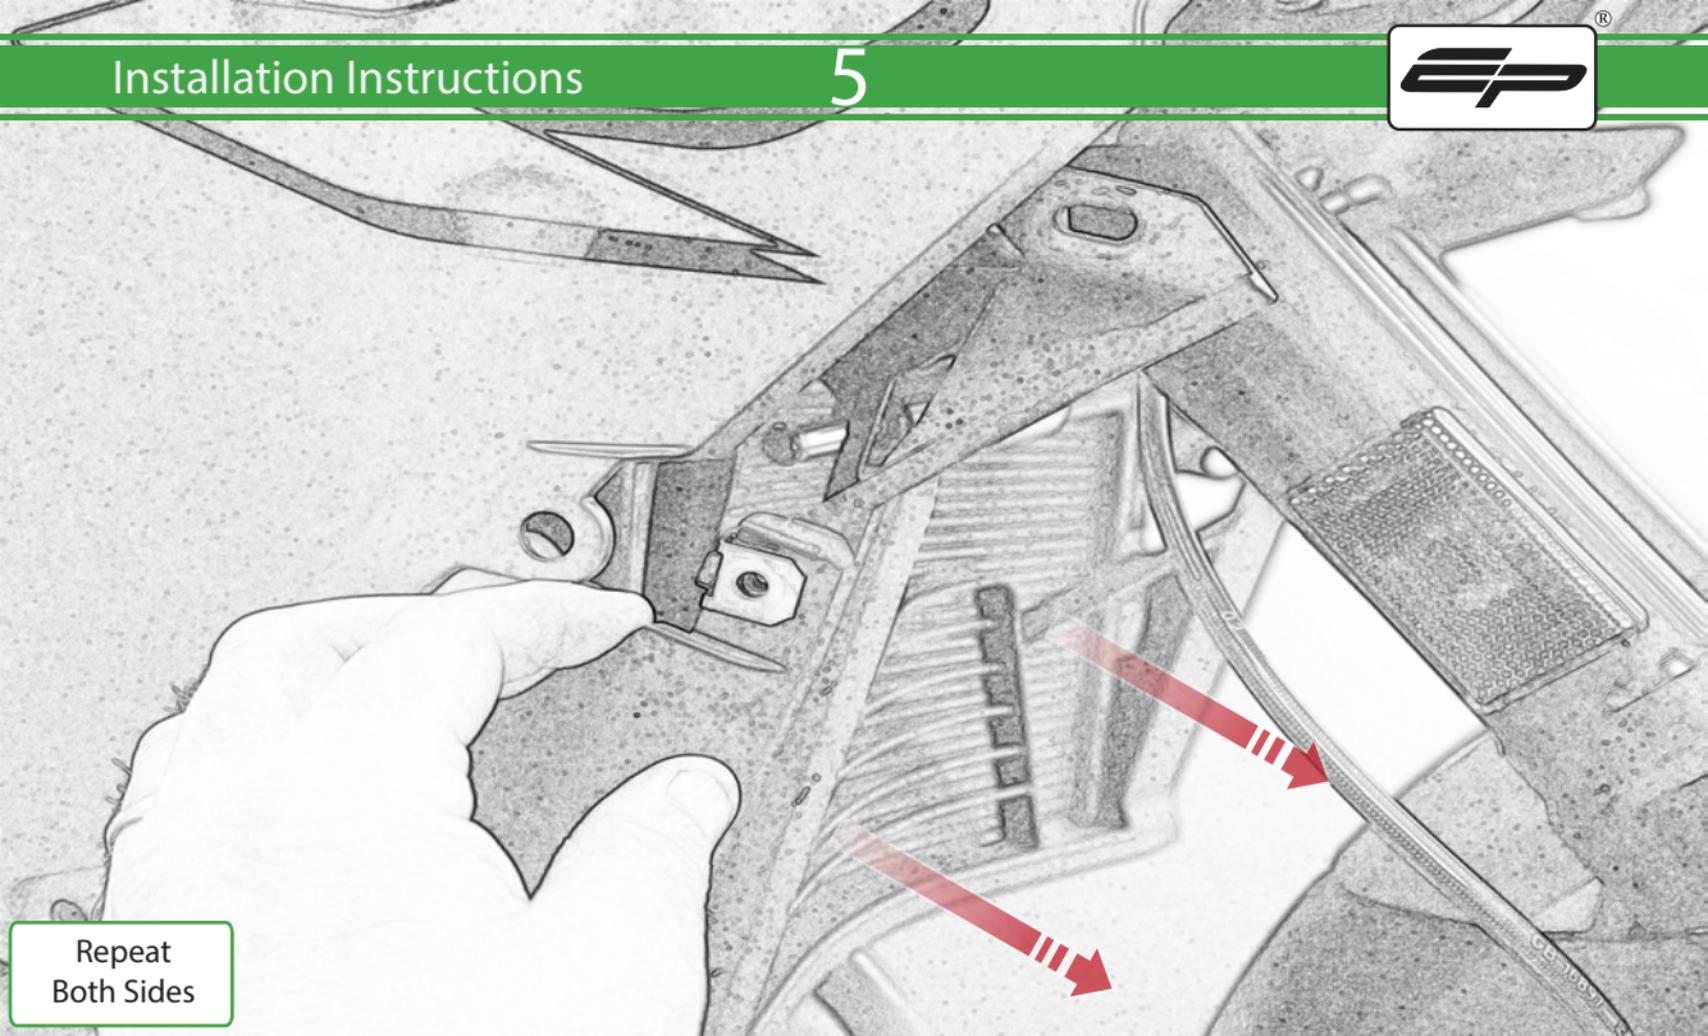



Repeat
Both Sides

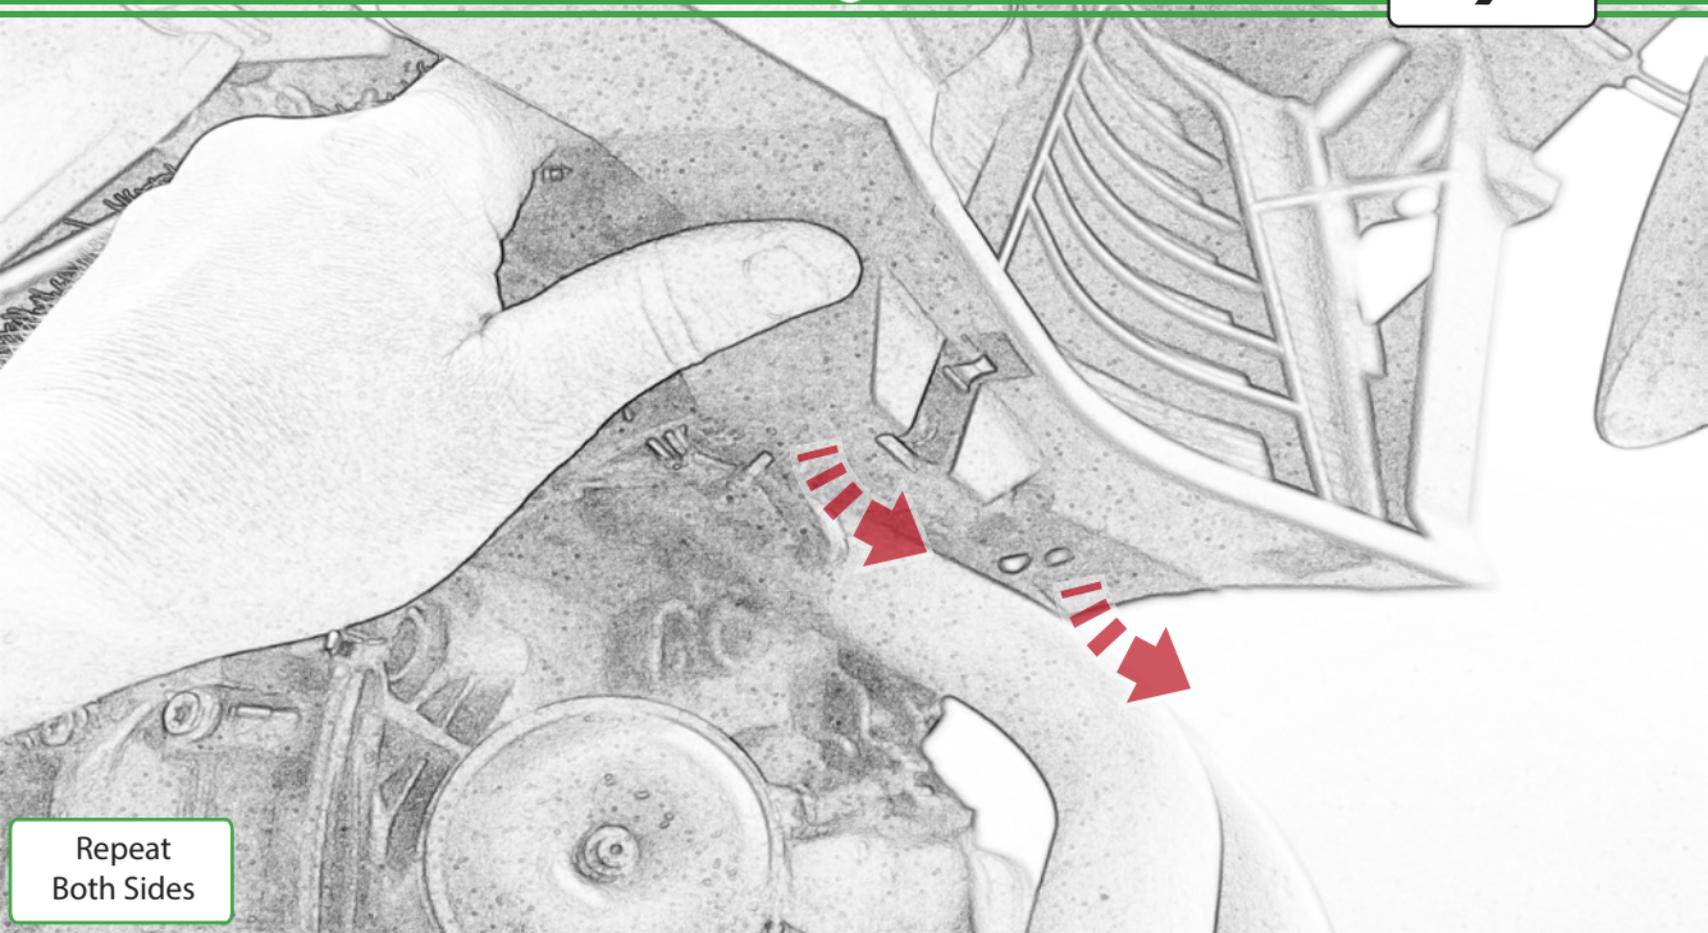


Repeat
Both Sides



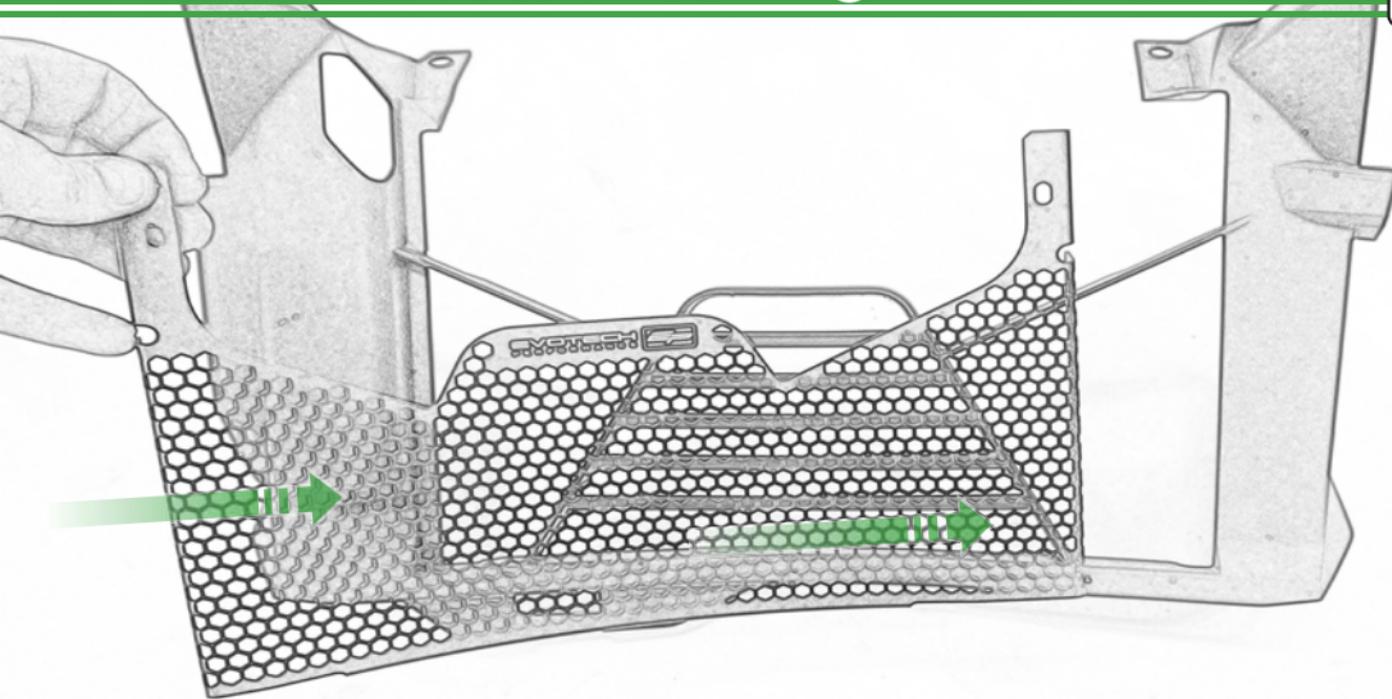

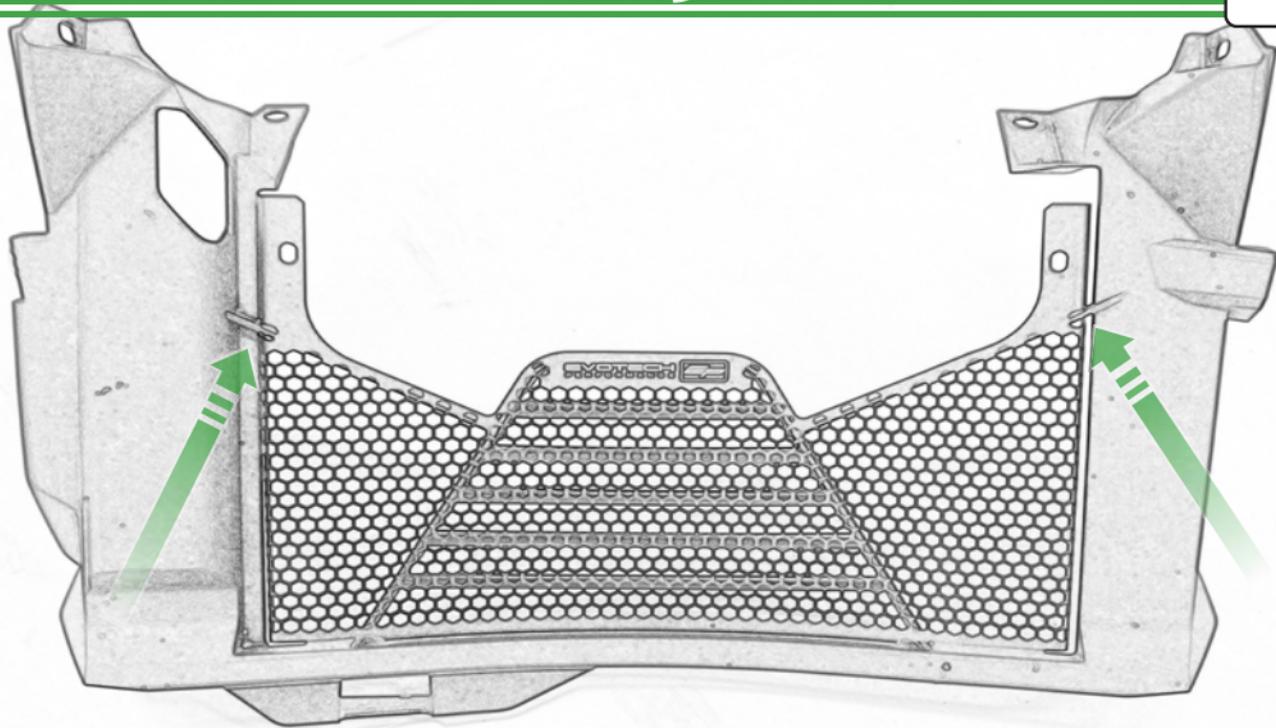

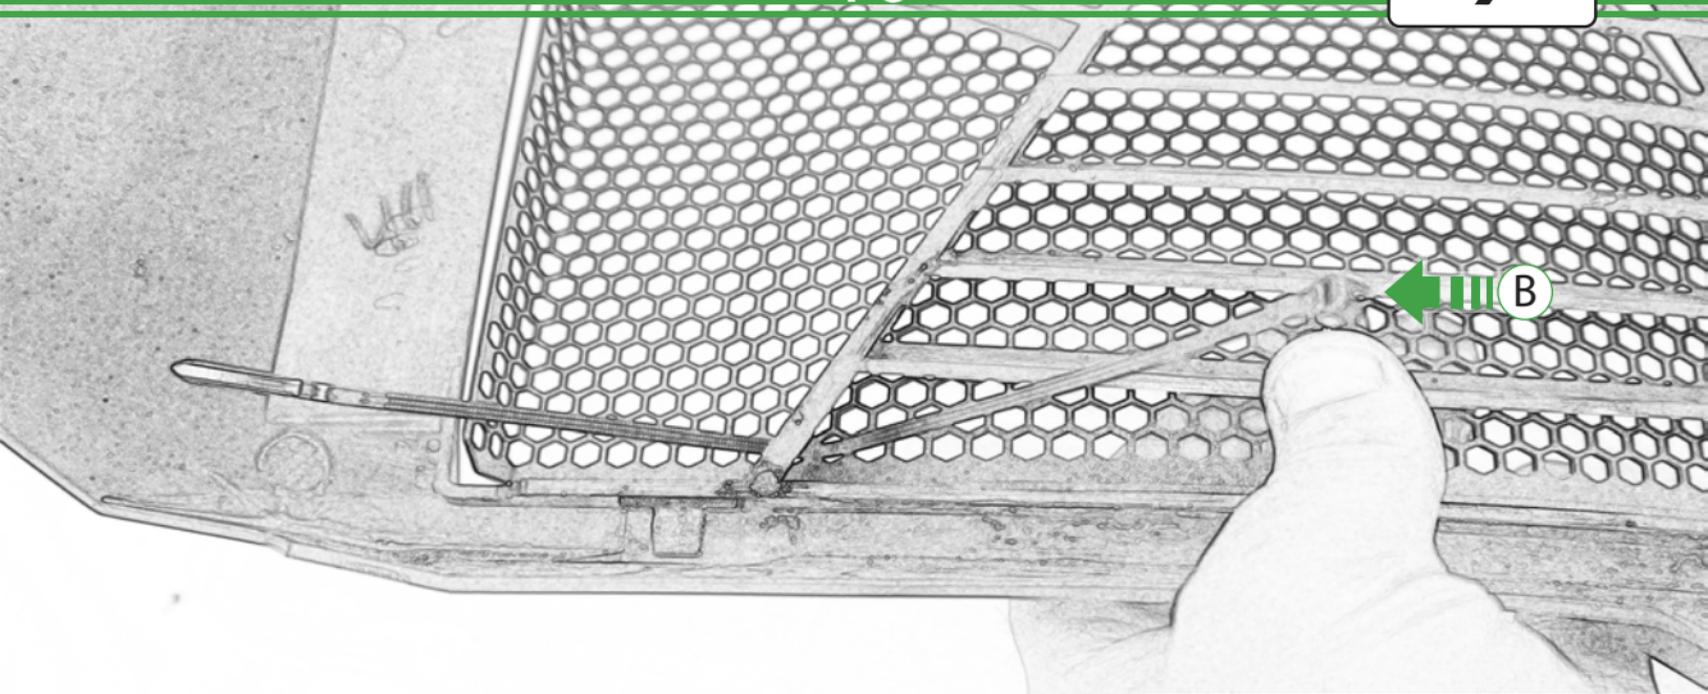


Loop cable ties through to secure guard in position




Caution


The bottom right corner contains a green-bordered box with a white background. On the left, a diagram shows a black cable tie being inserted into a hole in a metal plate. A green arrow points to the left, indicating the direction of insertion. To the right of the diagram, the text reads "Loop cable ties through to secure guard in position". Below this text is a red triangular warning symbol with a black exclamation mark inside. Underneath the symbol, the word "Caution" is written in a black, sans-serif font.


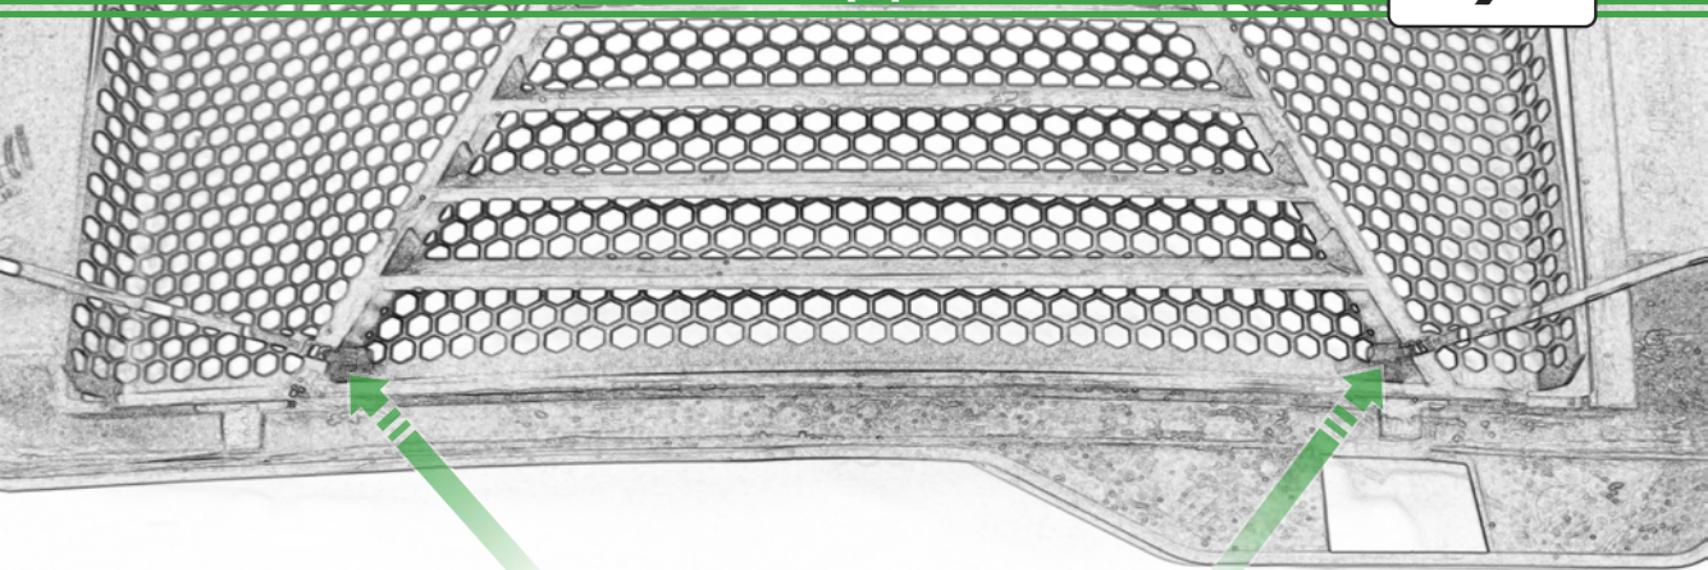


Repeat
Both Sides

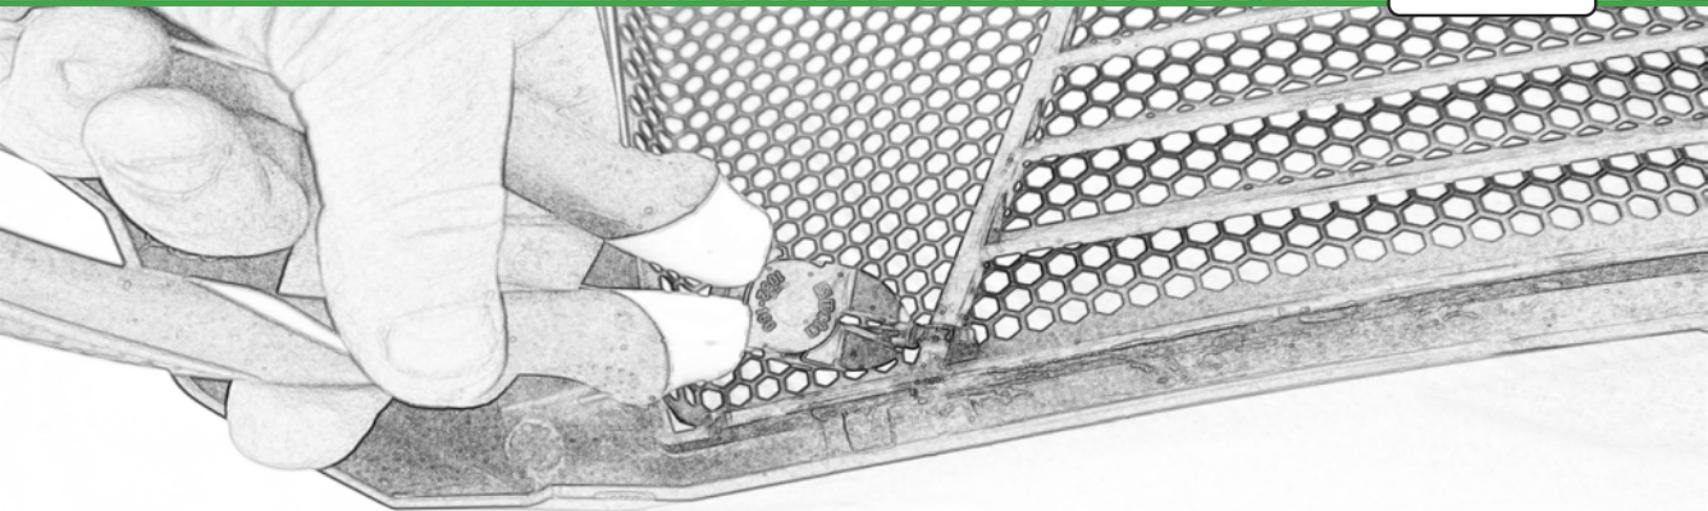


Repeat
Both Sides

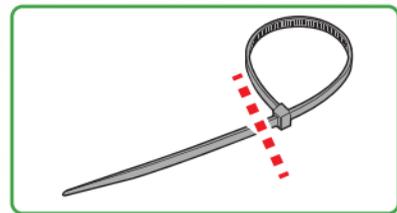


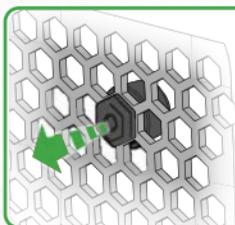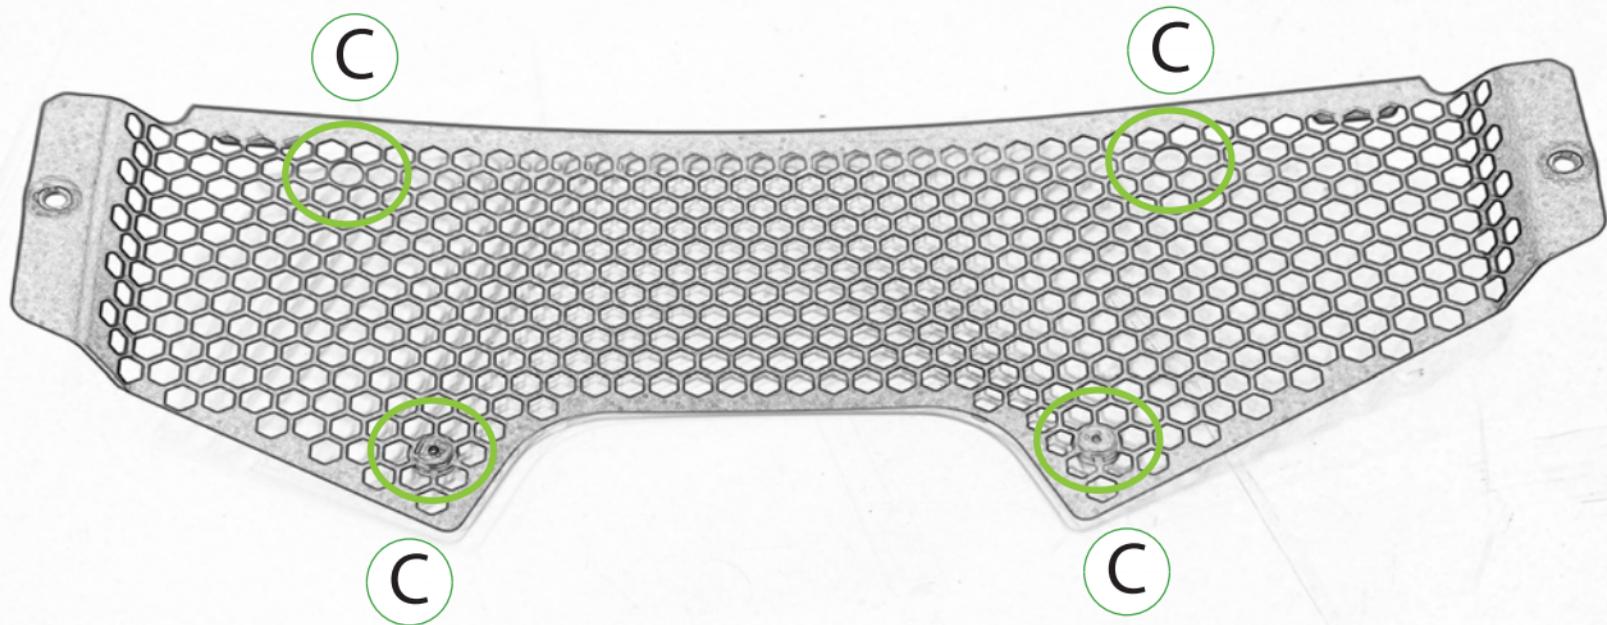

Locate round holes amongst hexagons.


Push Rubber Spacer through from the back of the guard so Hexagonal shape sits on the front face

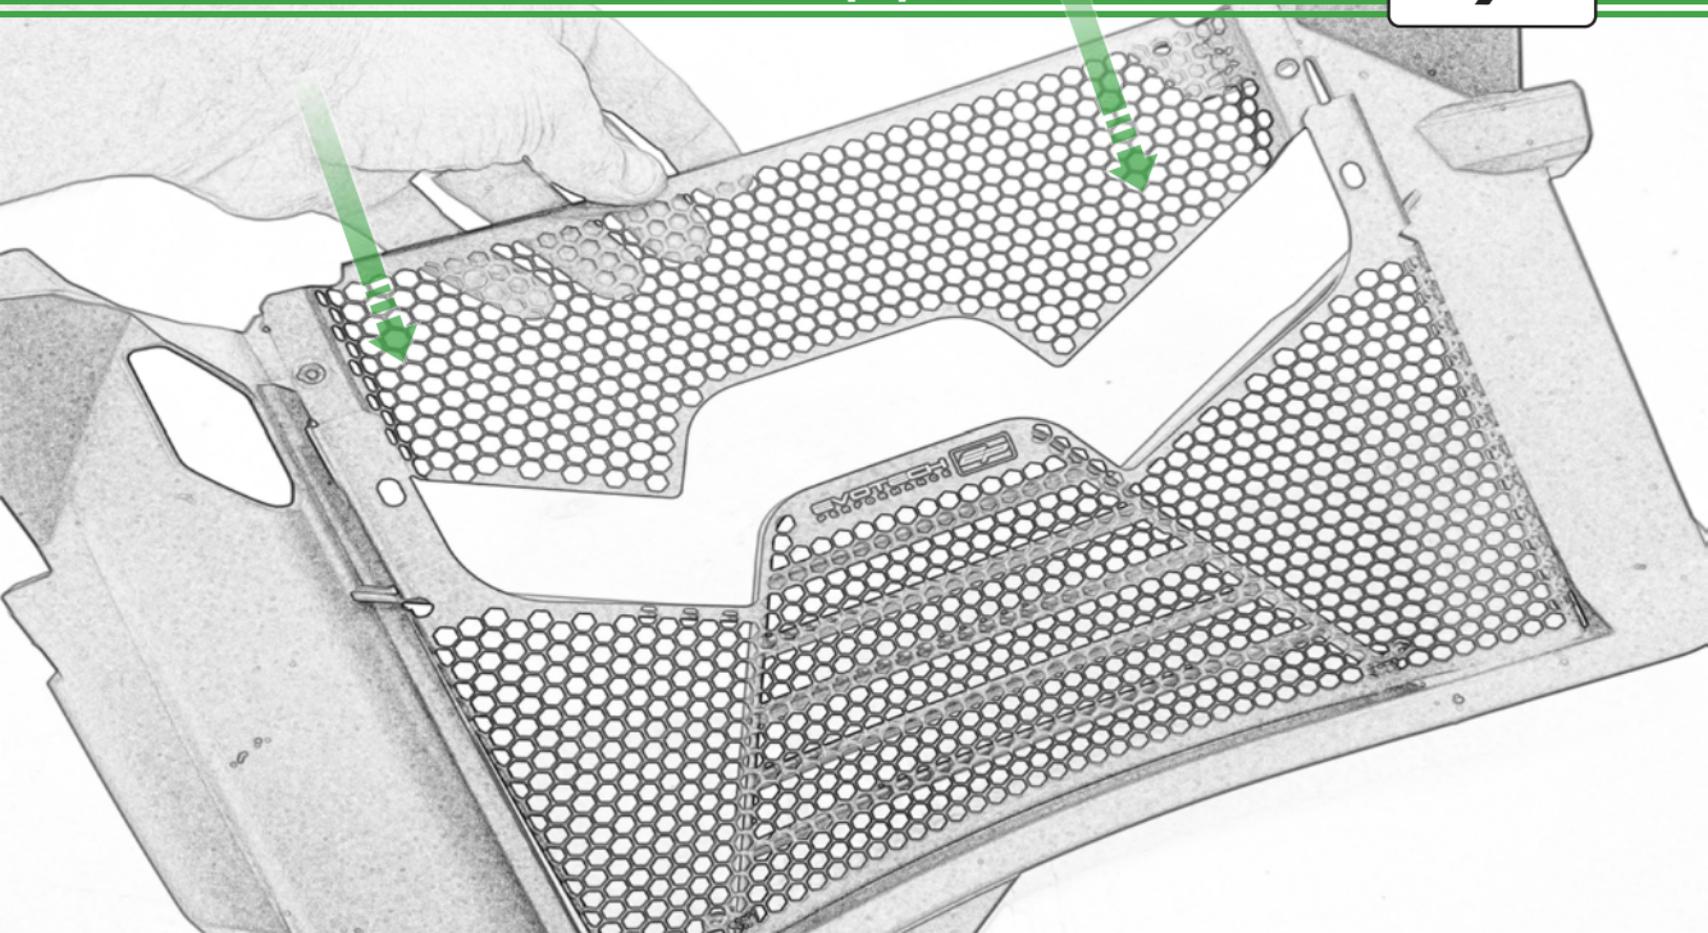


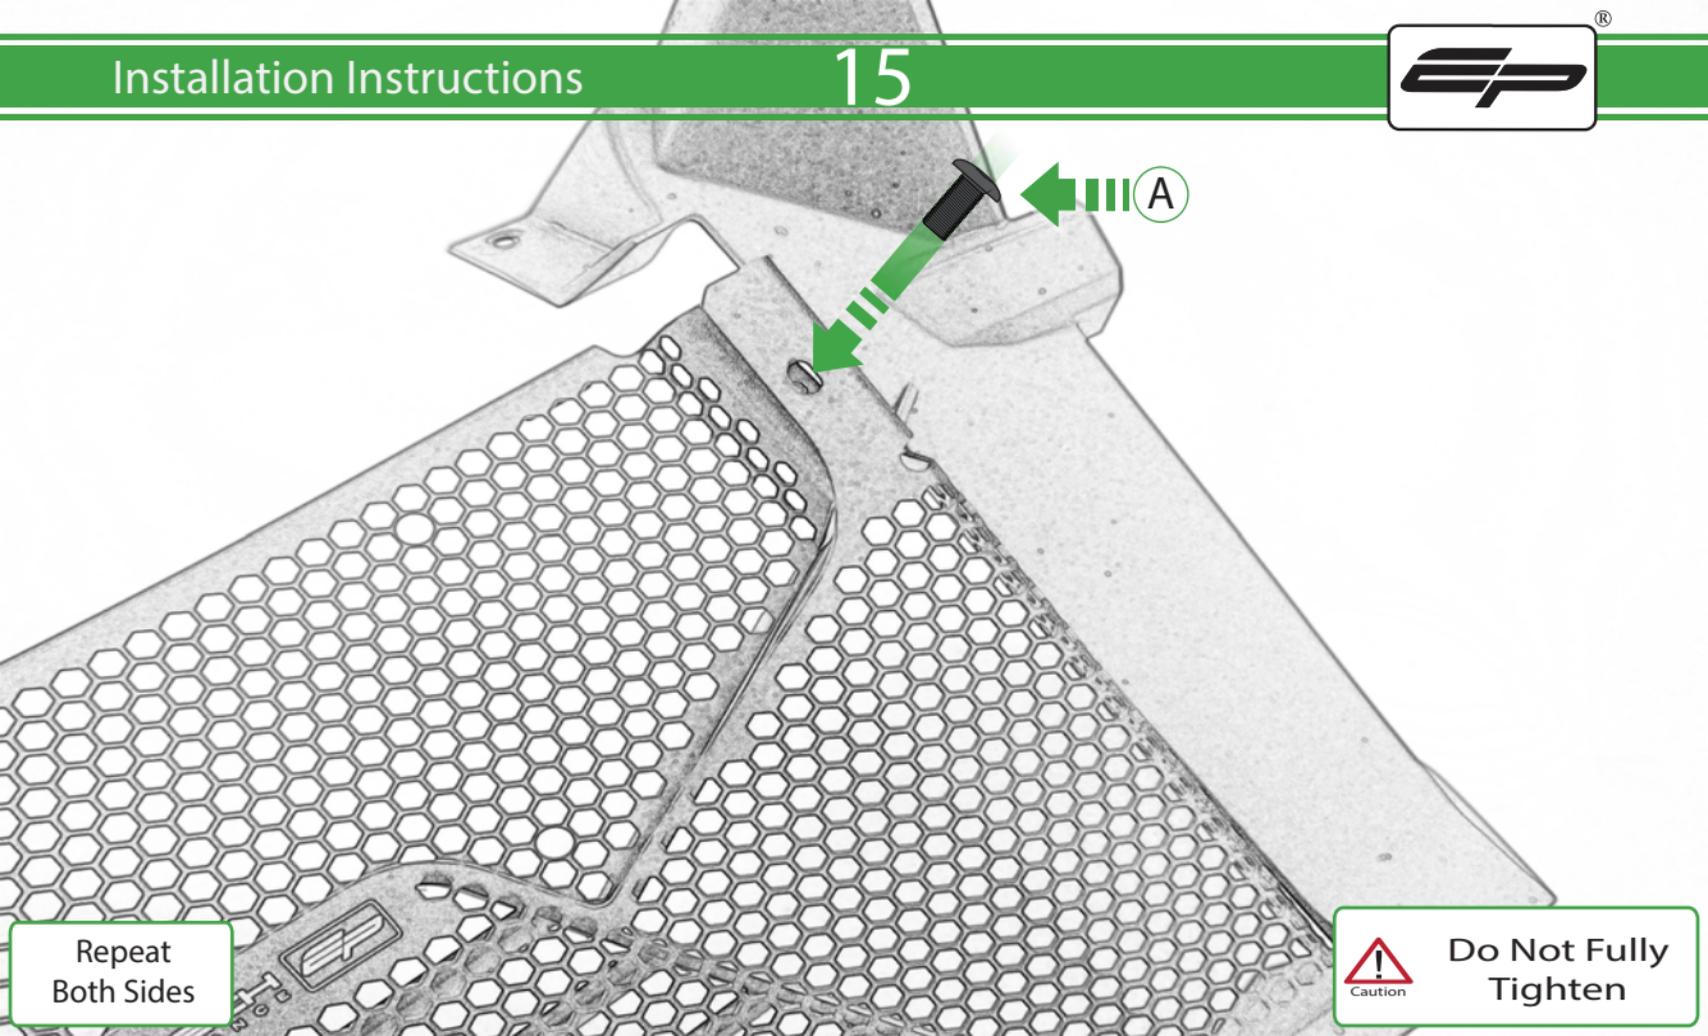

Repeat
Both Sides


 **Do Not Fully Tighten**

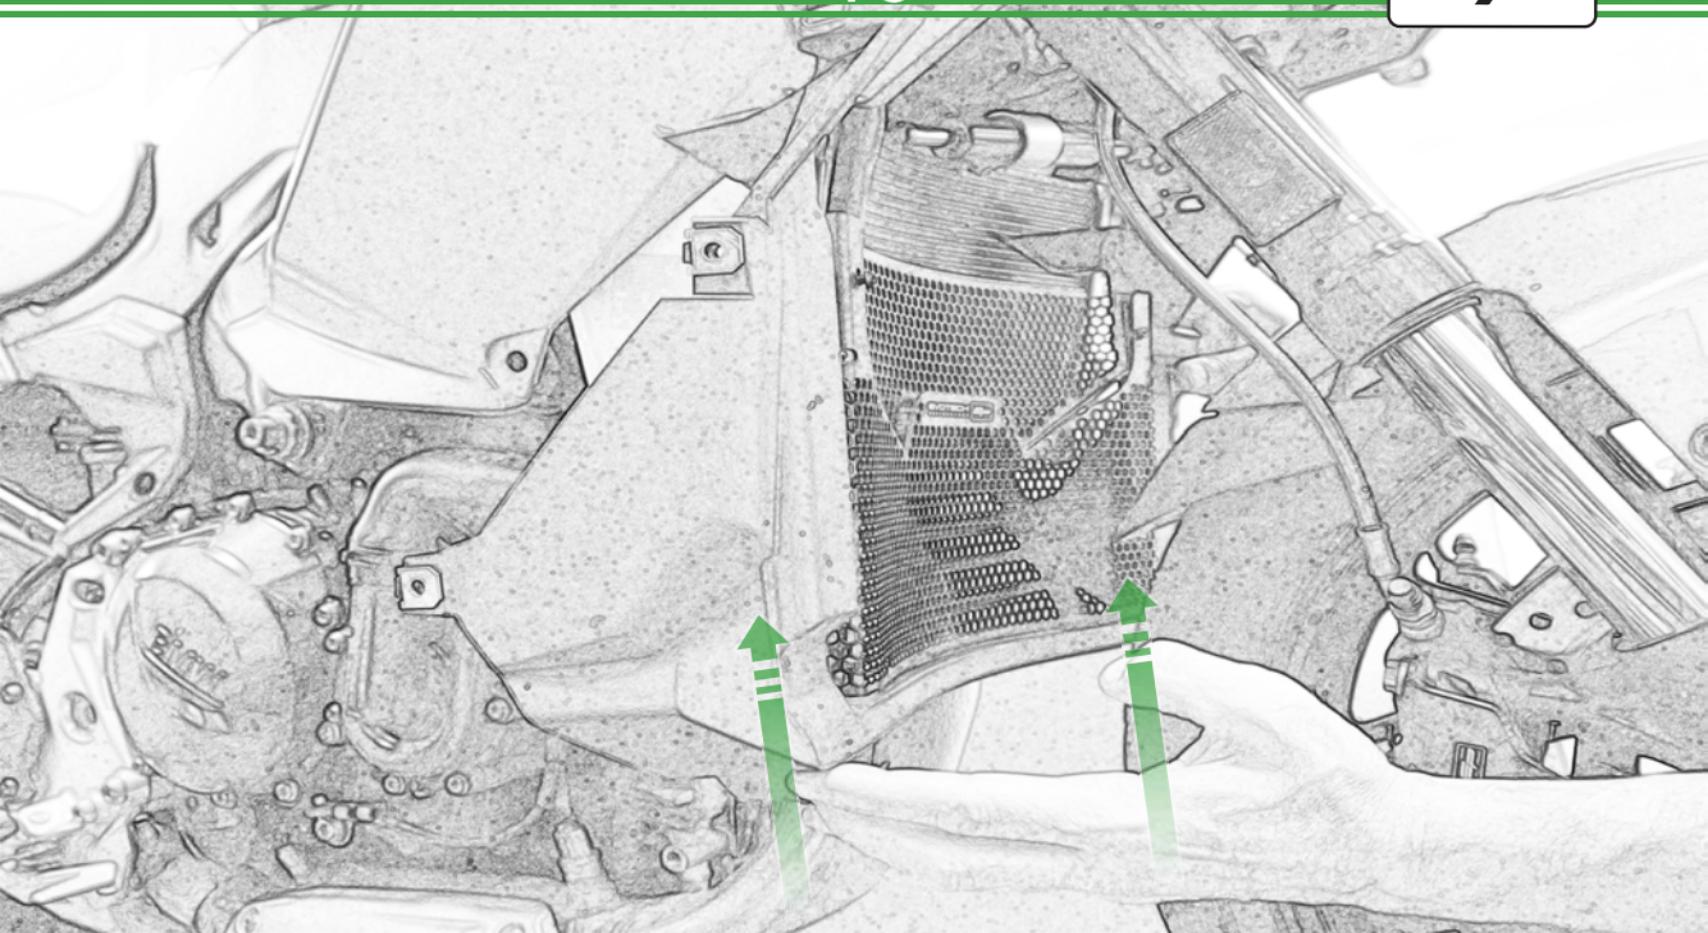

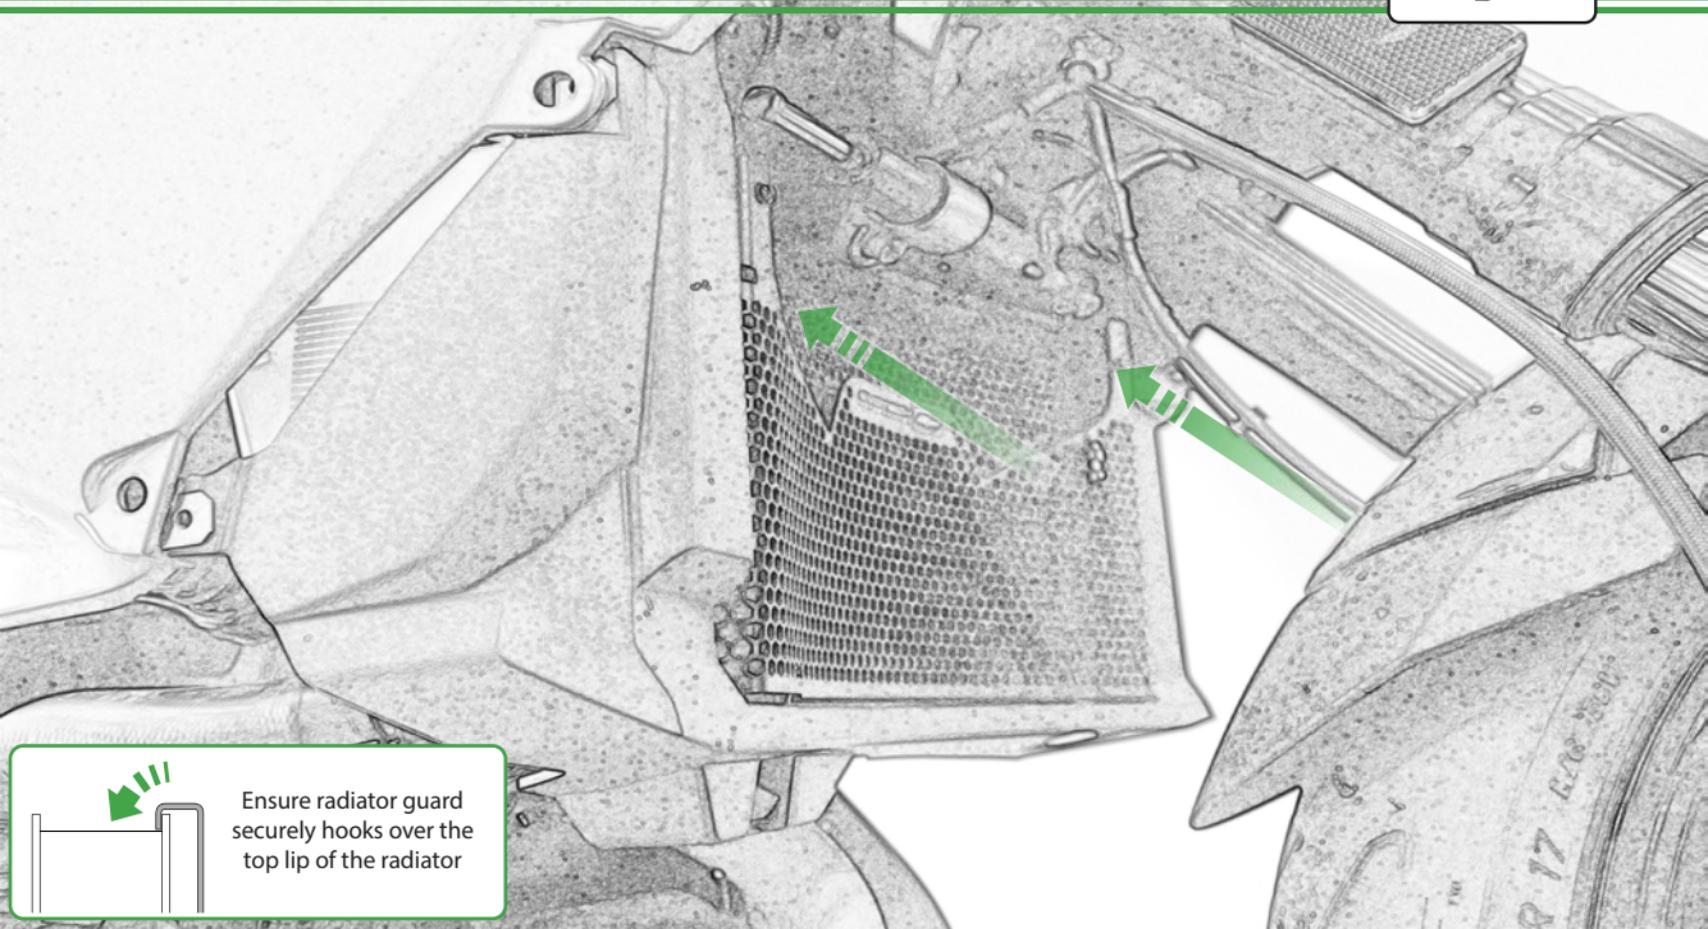


Ensure radiator guard securely hooks over the top lip of the radiator



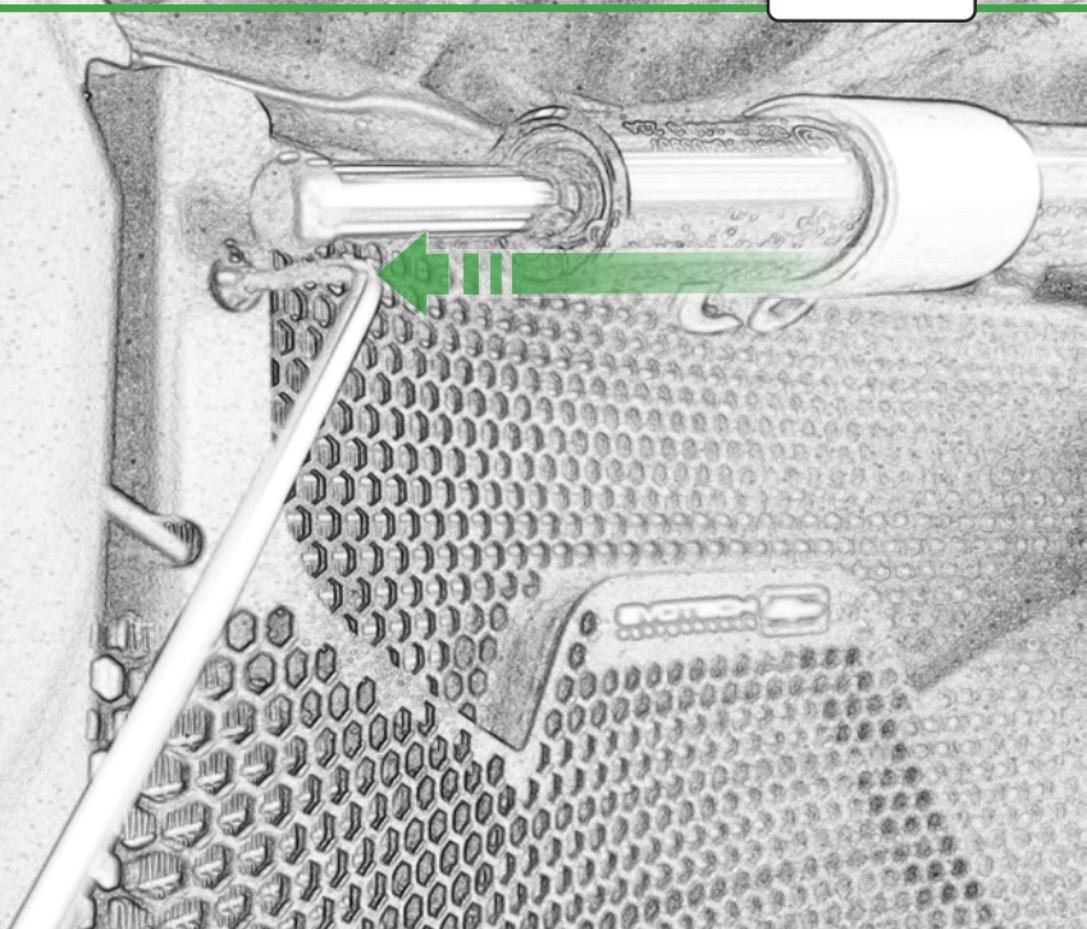

Repeat
Both Sides

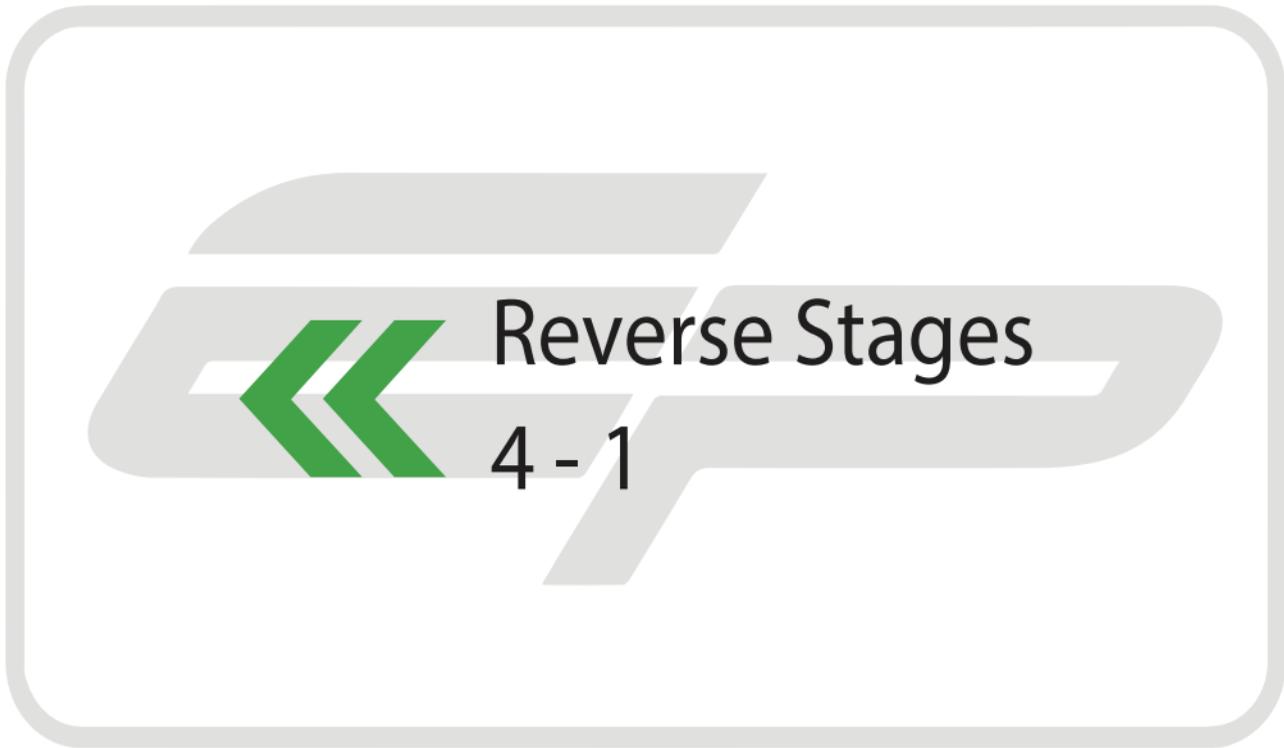



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that dirt and debris have not become trapped between the guard and the radiator/oil cooler. Such dirt and debris would reduce the cooling efficiency of the radiator/oil cooler.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightened.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com