



EVOTECH®
P E R F O R M A N C E


www.evotech-performance.com


Triumph Trident Crash Protection Installation Instructions

Kit Contents PRN015353


- | | |
|------------------------------|---------------------|
| Ⓐ 1 x L/H Front Frame Spacer | Ⓜ R/H Bobbin Spacer |
| Ⓑ 1 x L/H Bracket | Ⓝ 2 x Poly Washer |
| Ⓒ 1 x M12 x 85mm x 1.25mm | Ⓞ 2 x Bobbin Head |
| Ⓓ 1 x M10 x 110mm x 1.25mm | Ⓟ 2 x M12 Washer |
| Ⓔ 1 x M10 x 40mm x 1.25mm | |
| Ⓕ 1 x L/H Bobbin Spacer | |
| Ⓖ 1 x R/H Bracket | |
| Ⓗ 1 x R/H Front Frame Spacer | |
| Ⓘ 1 x R/H Rear Frame Spacer | |
| Ⓙ 1 x M12 x 70mm x 1.25mm | |
| Ⓚ 1 x M10 x 85mm x 1.25mm | |
| Ⓛ 1 x M10 x 60mm x 1.25mm | |




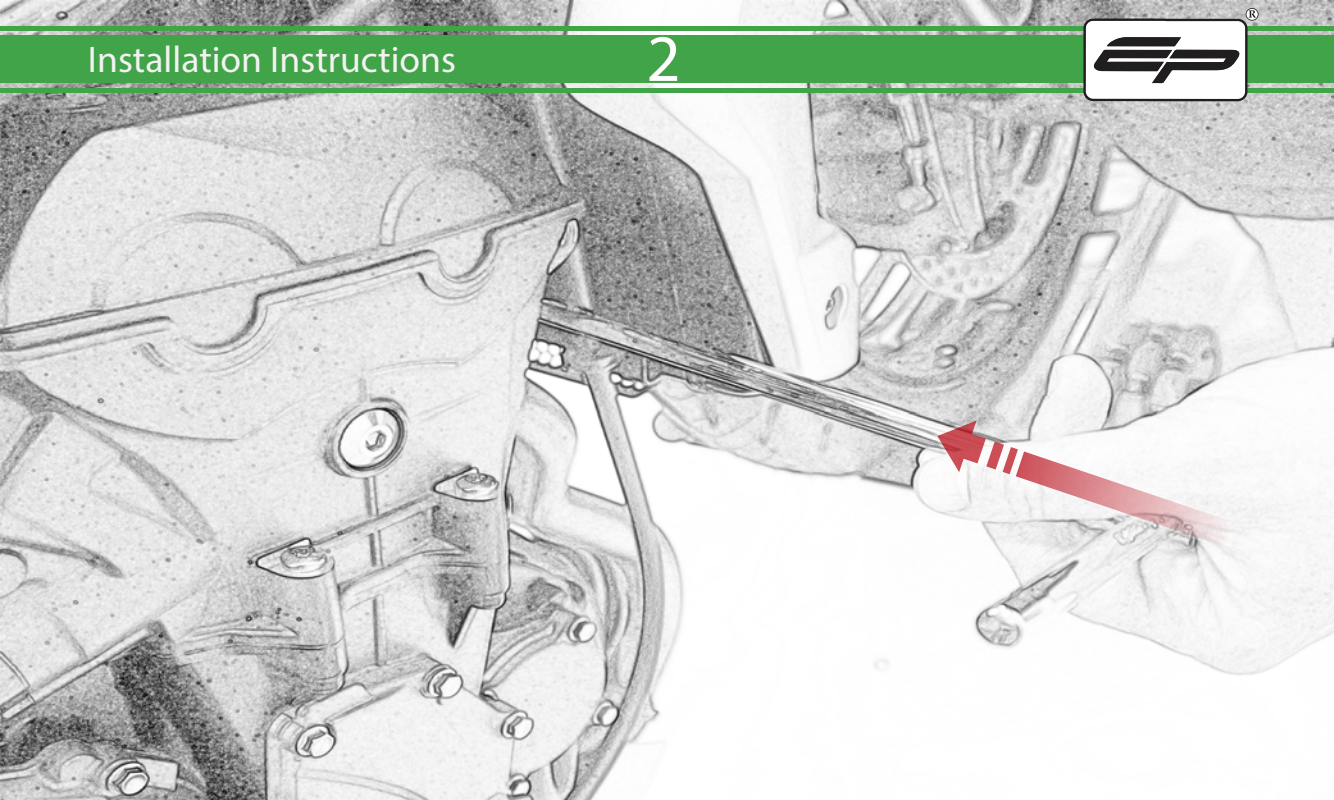


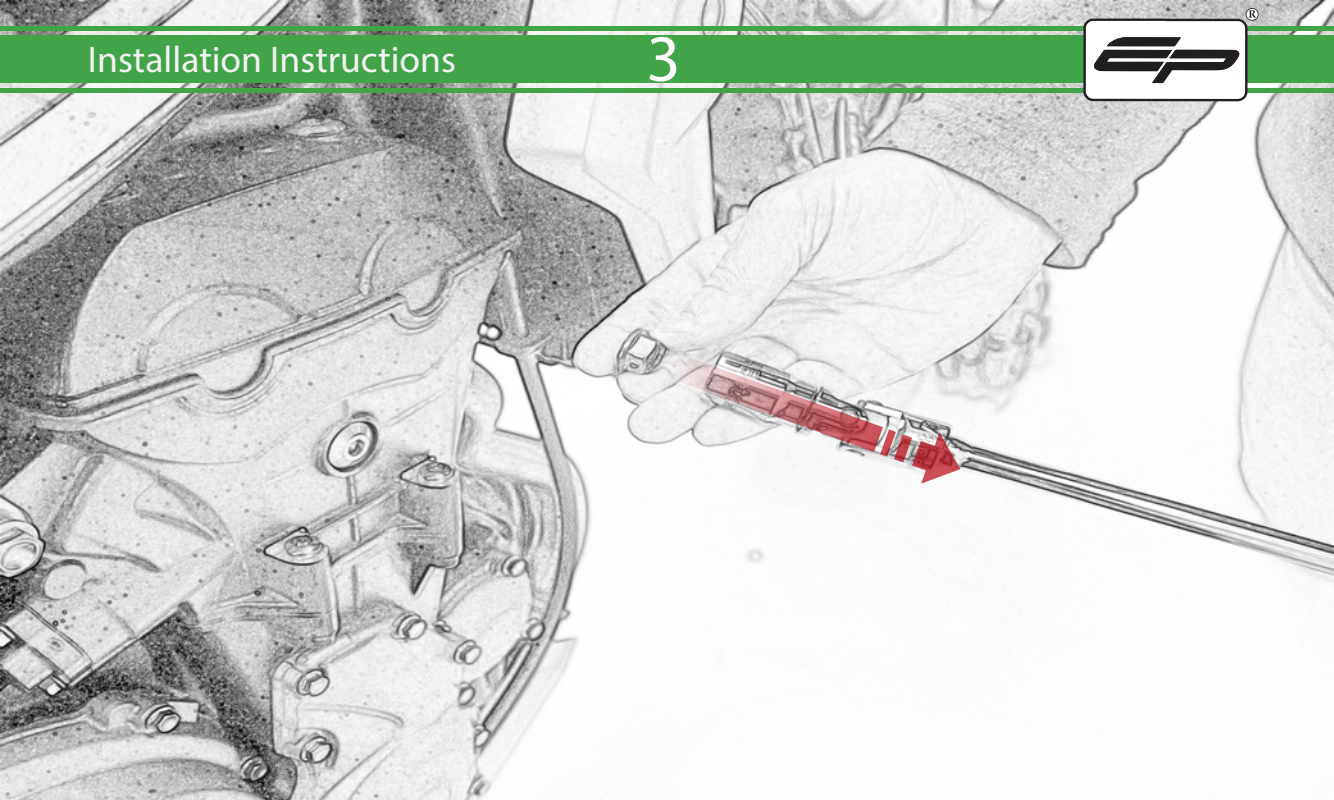




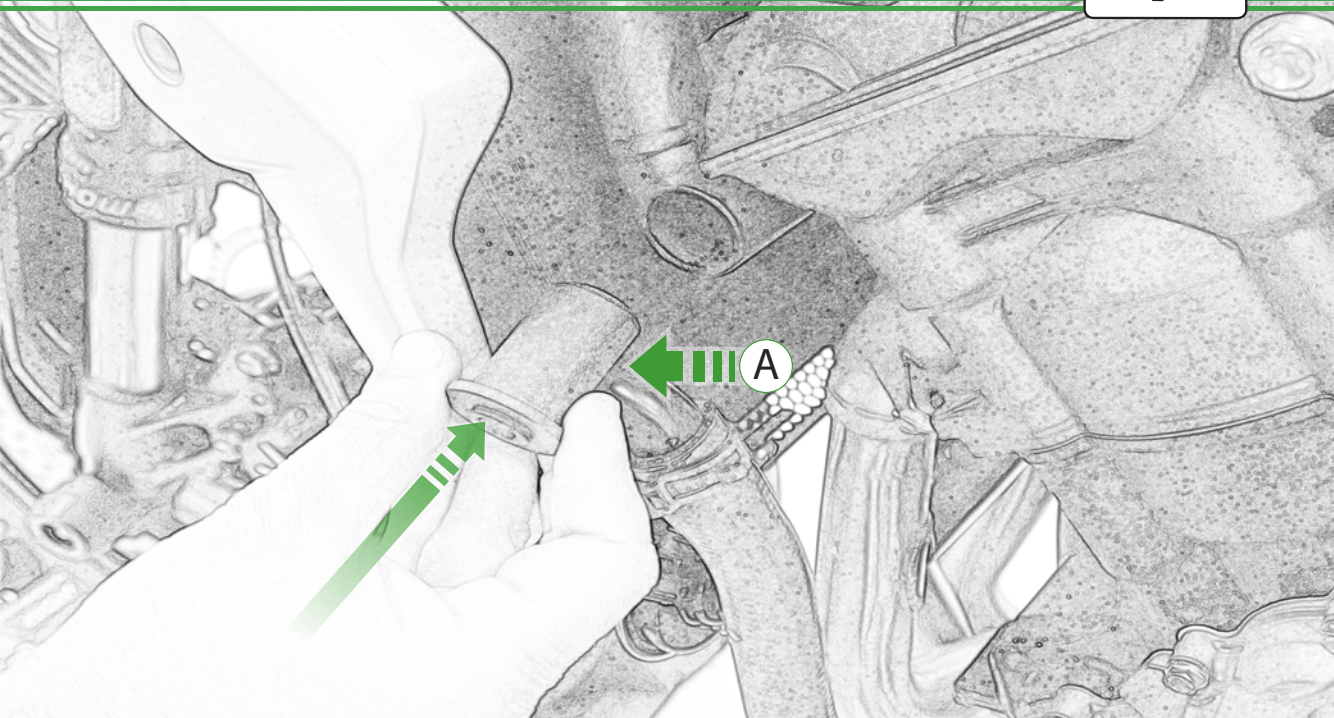


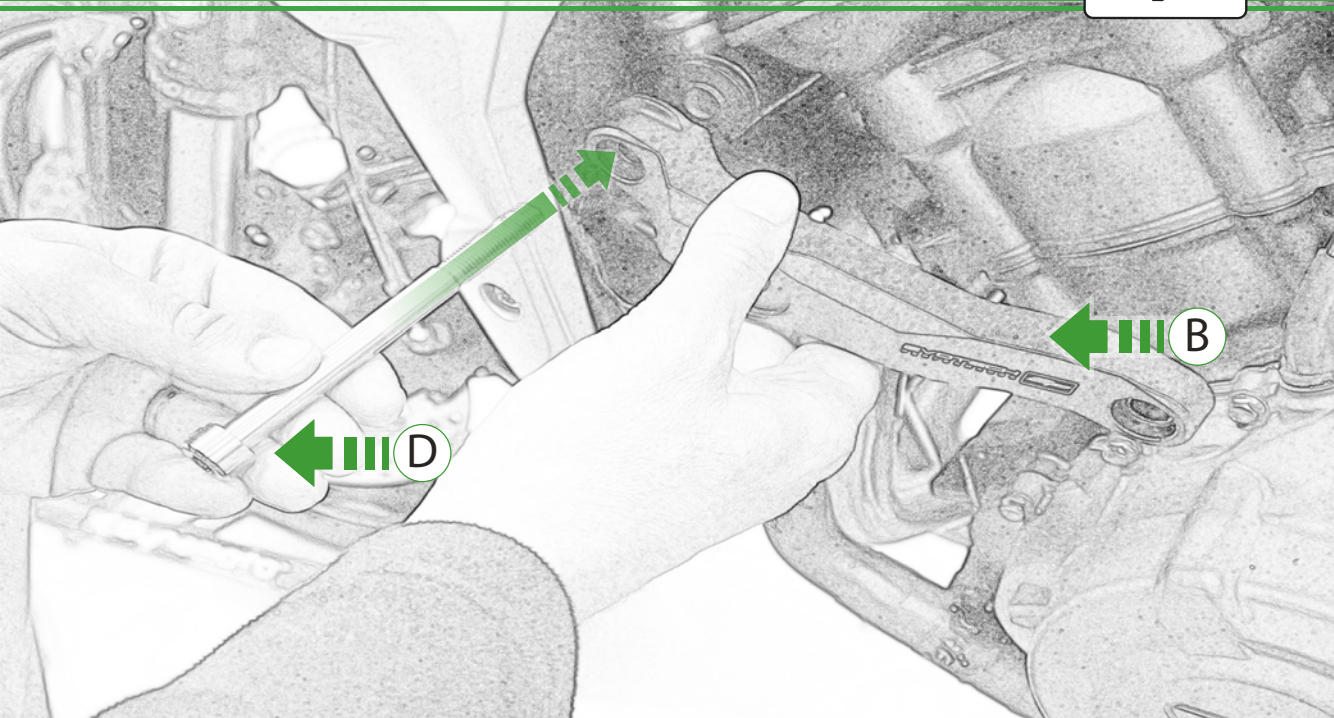

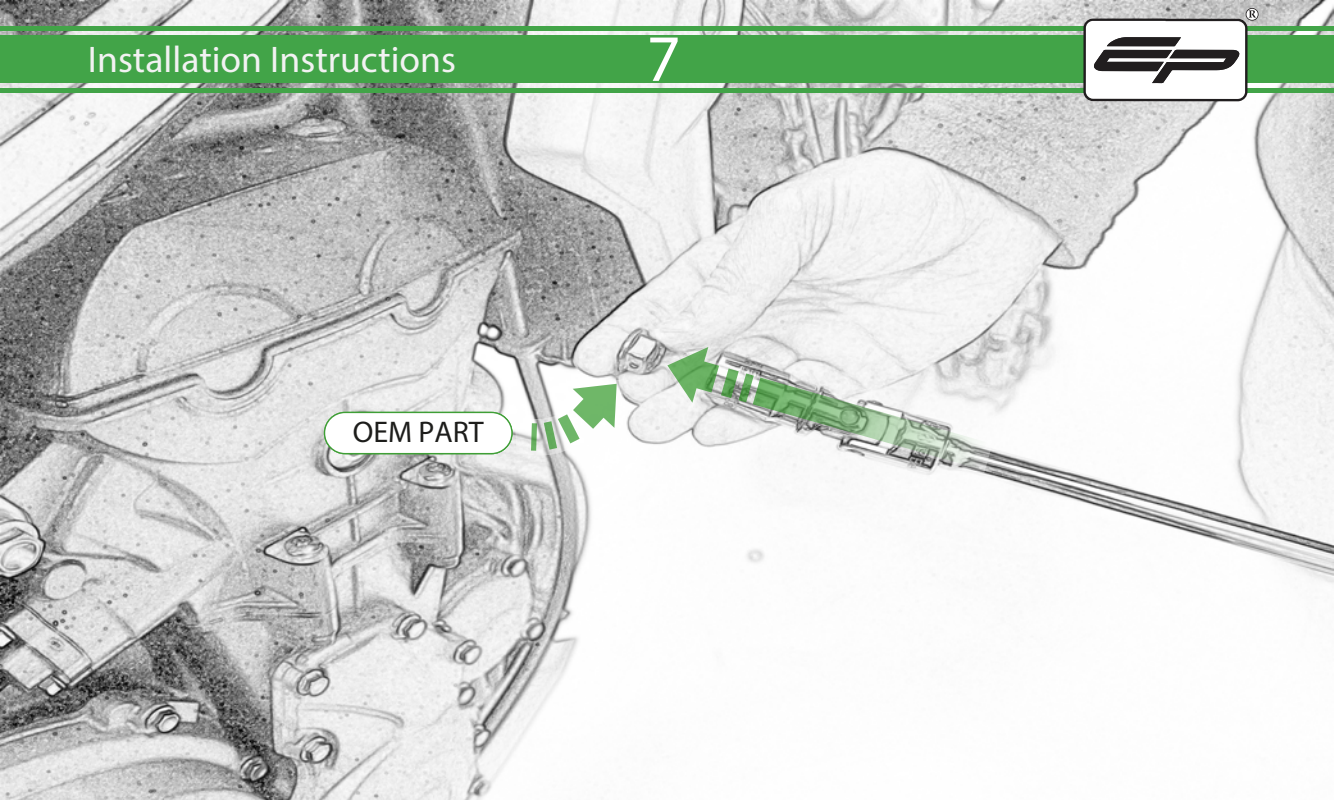



OEM PART

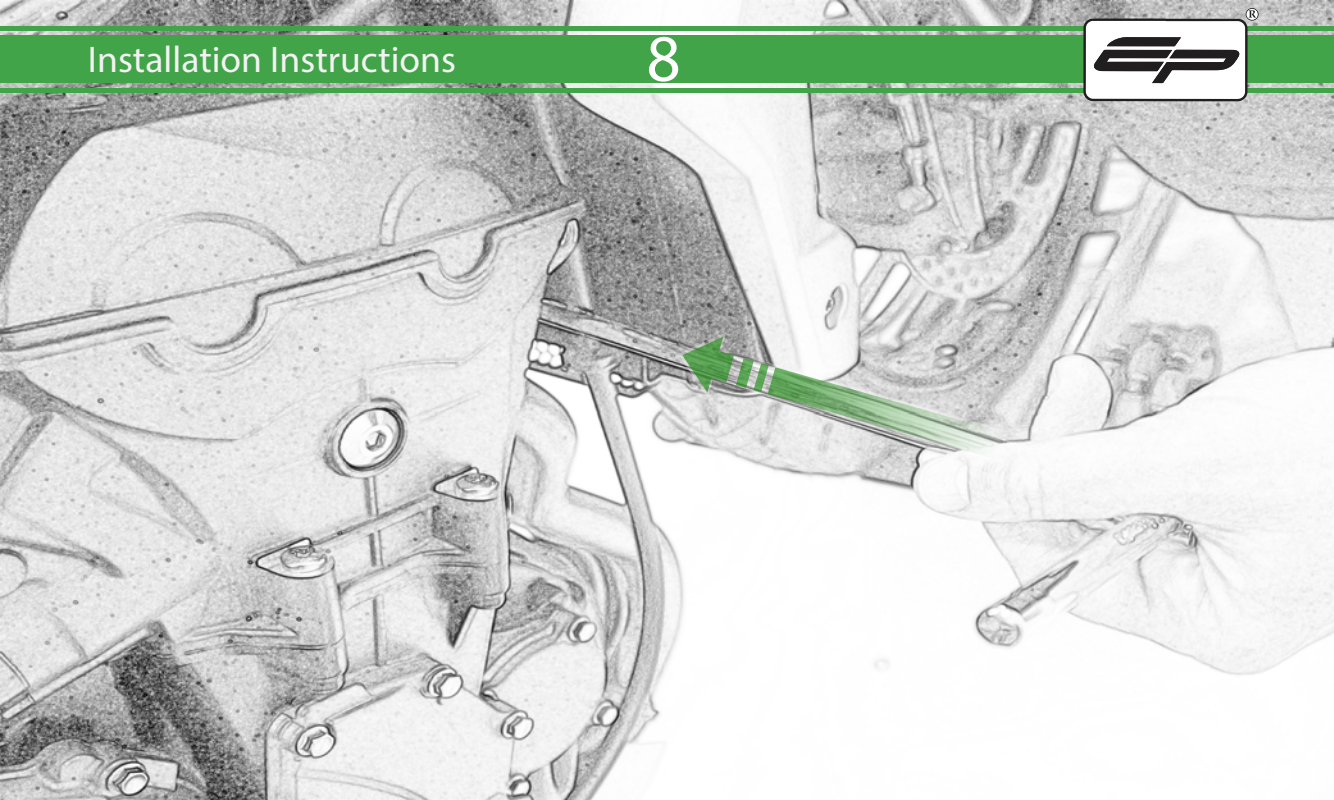


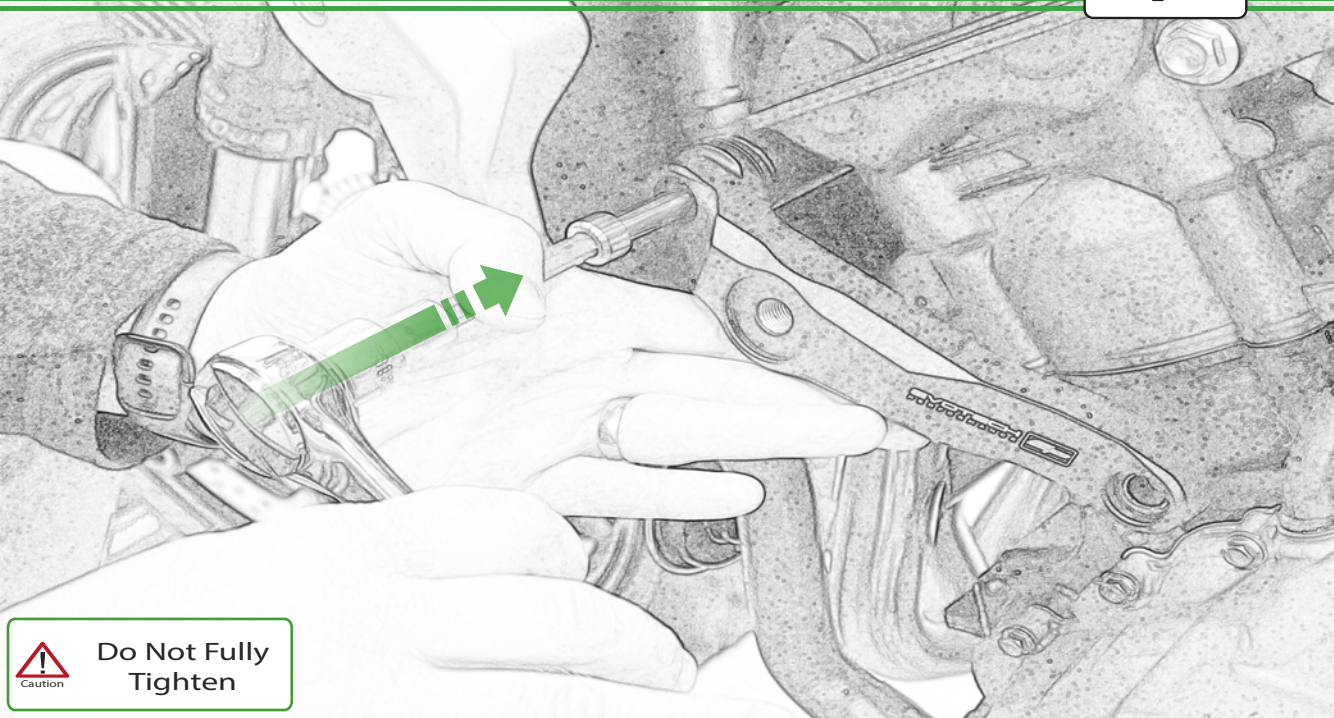


**Do Not Fully
Tighten**

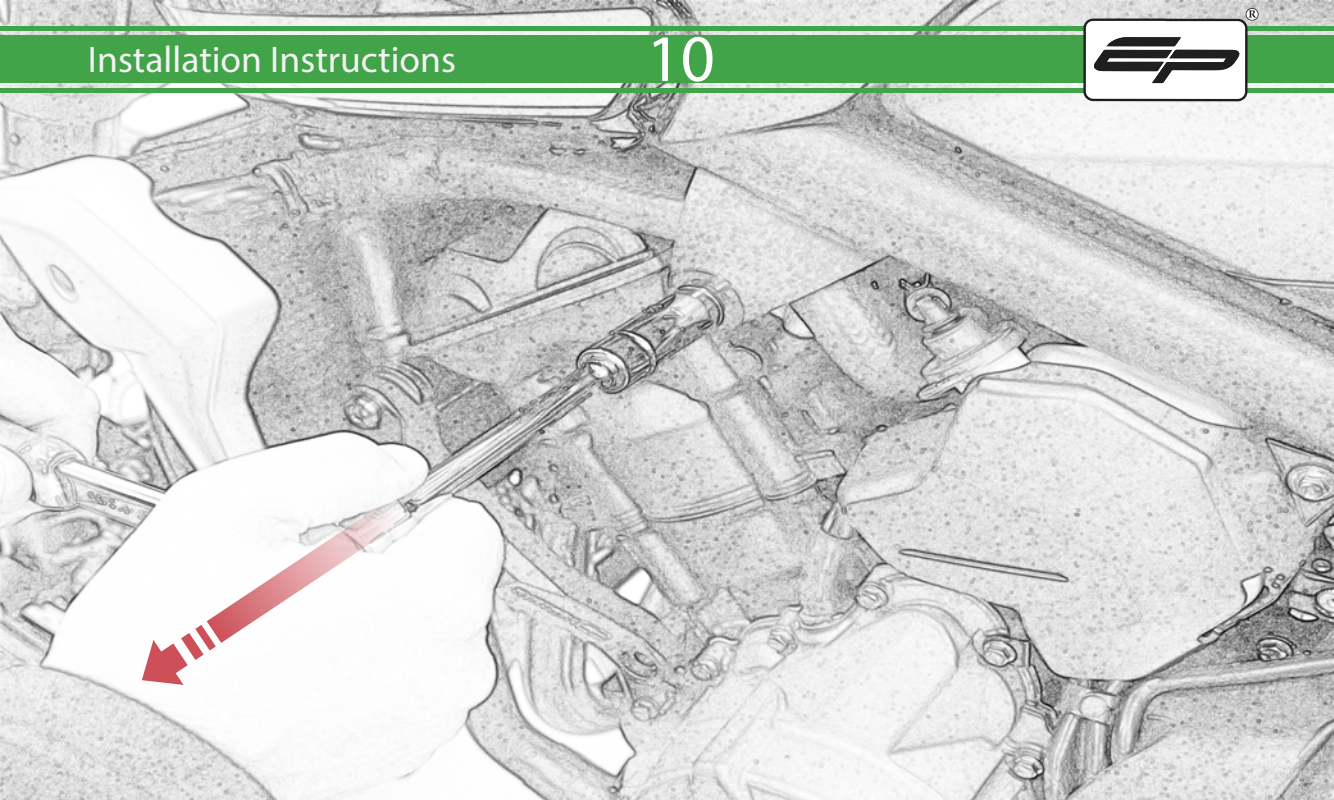


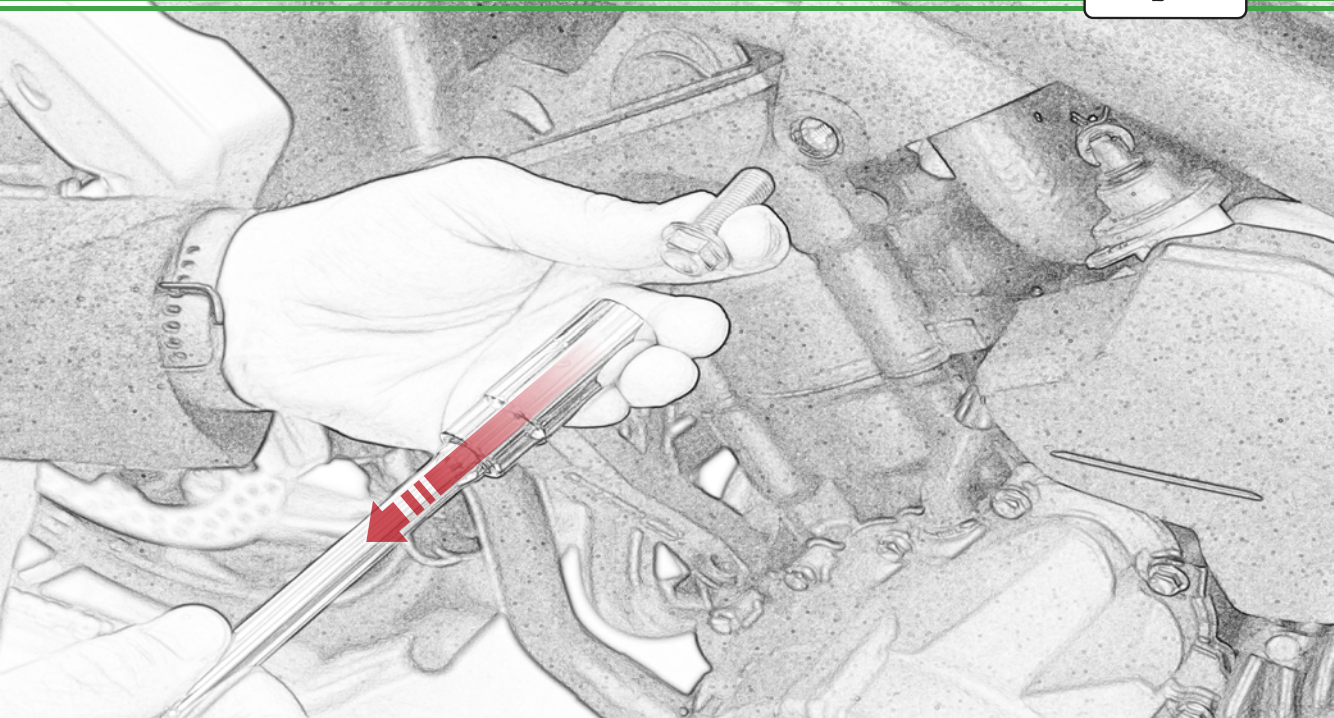

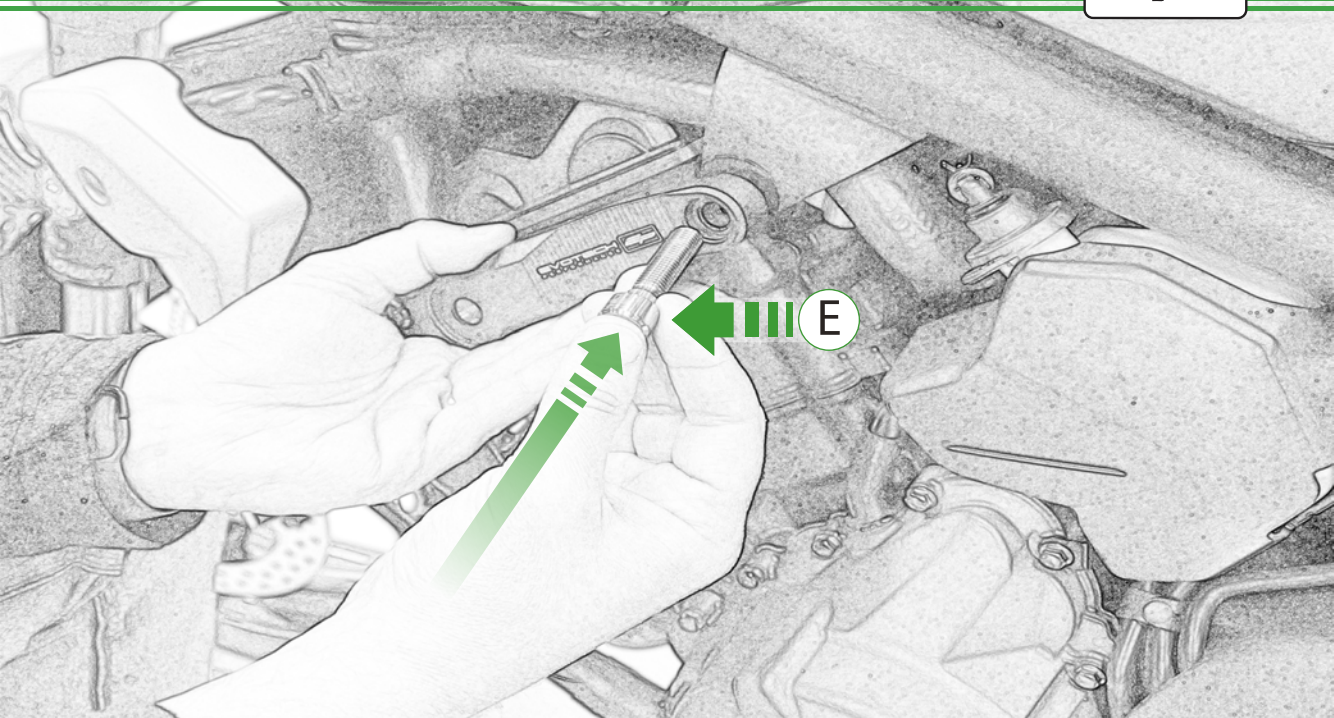

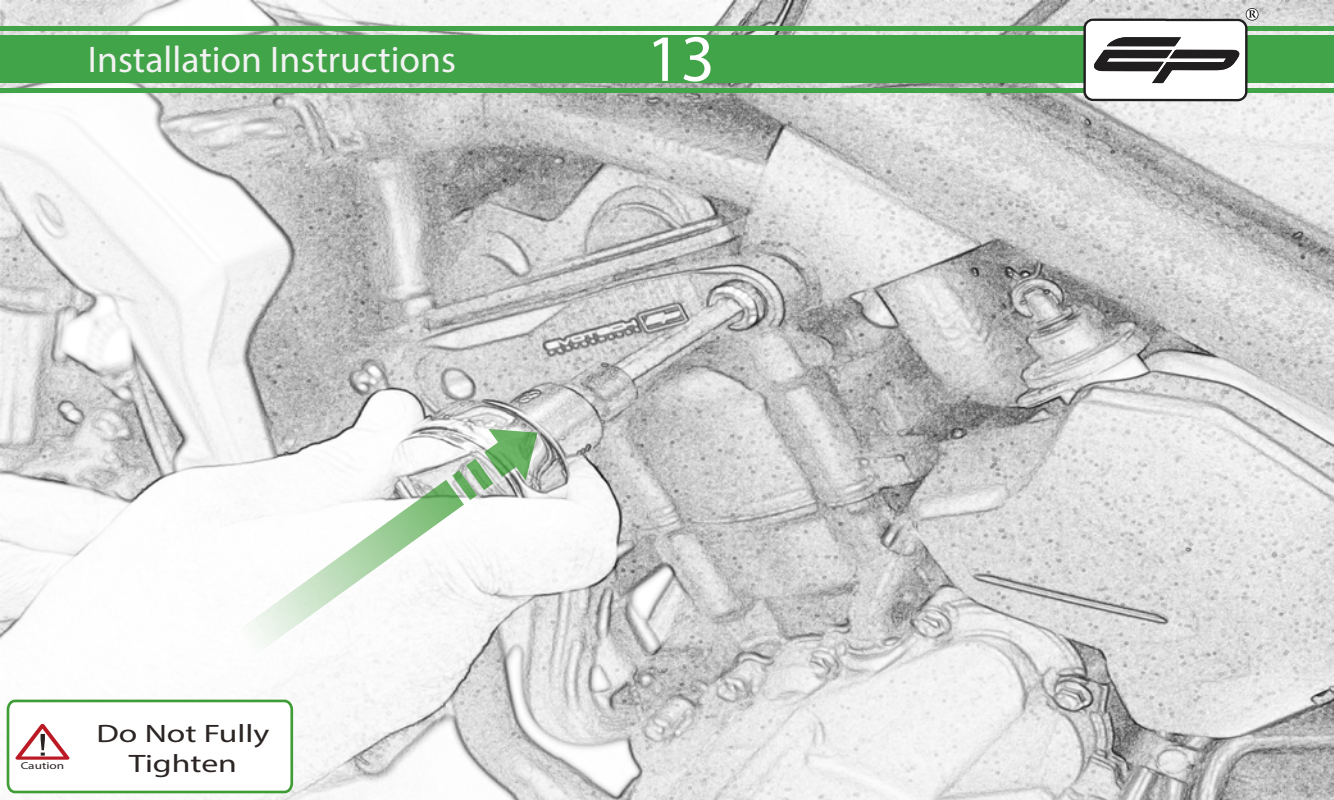


Do Not Fully
Tighten

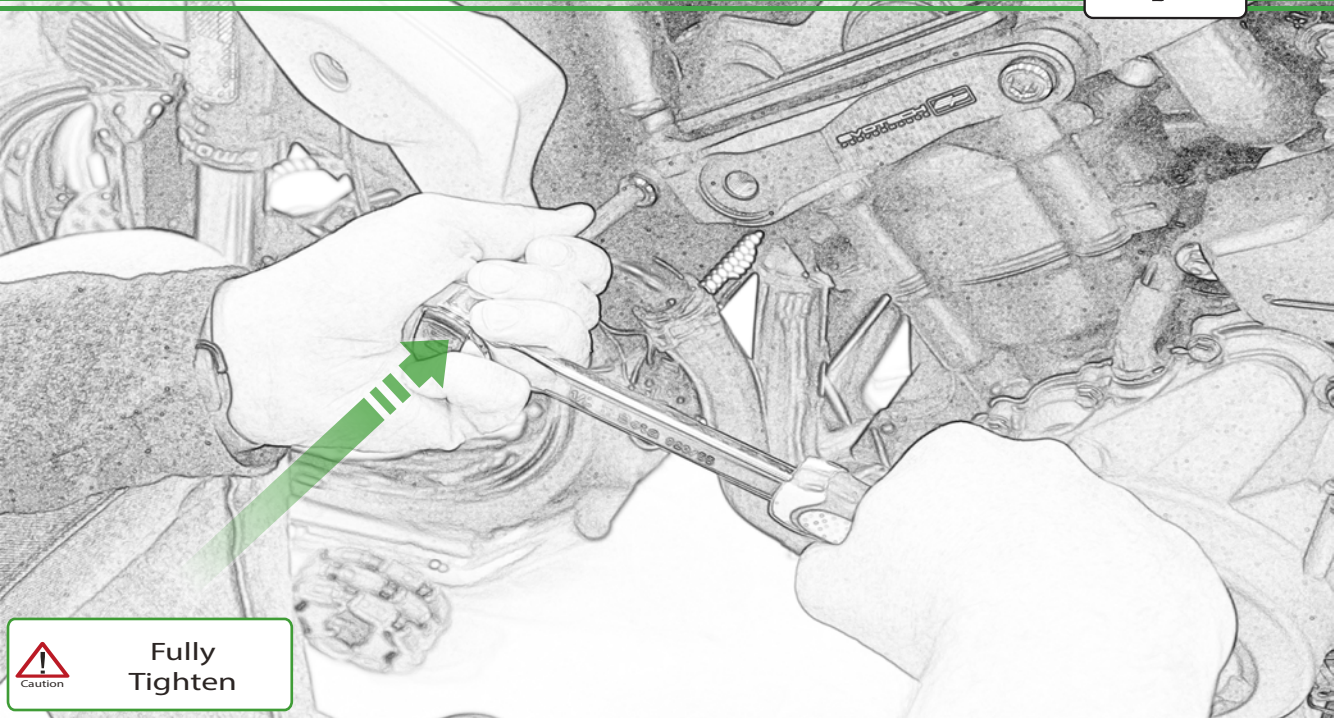


Caution


Fully
Tighten

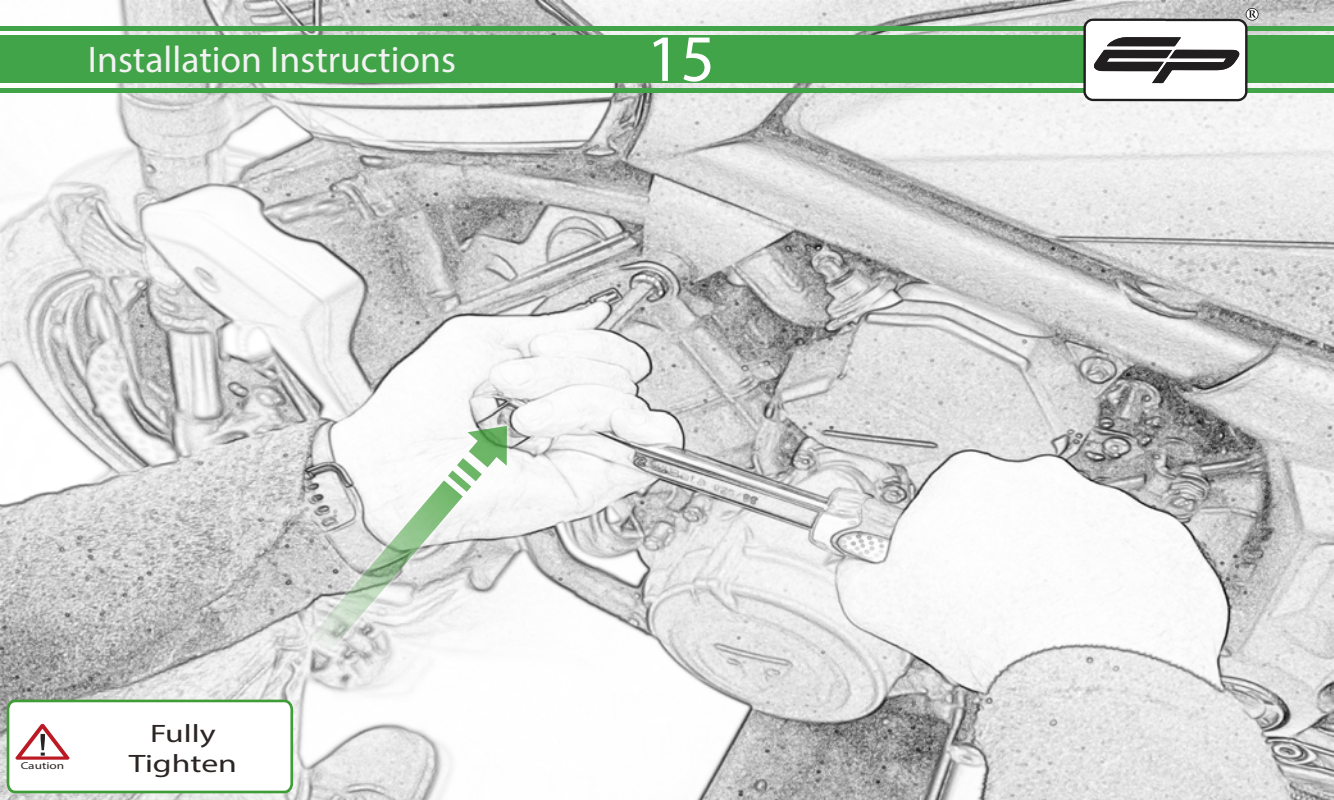



Caution


Fully
Tighten

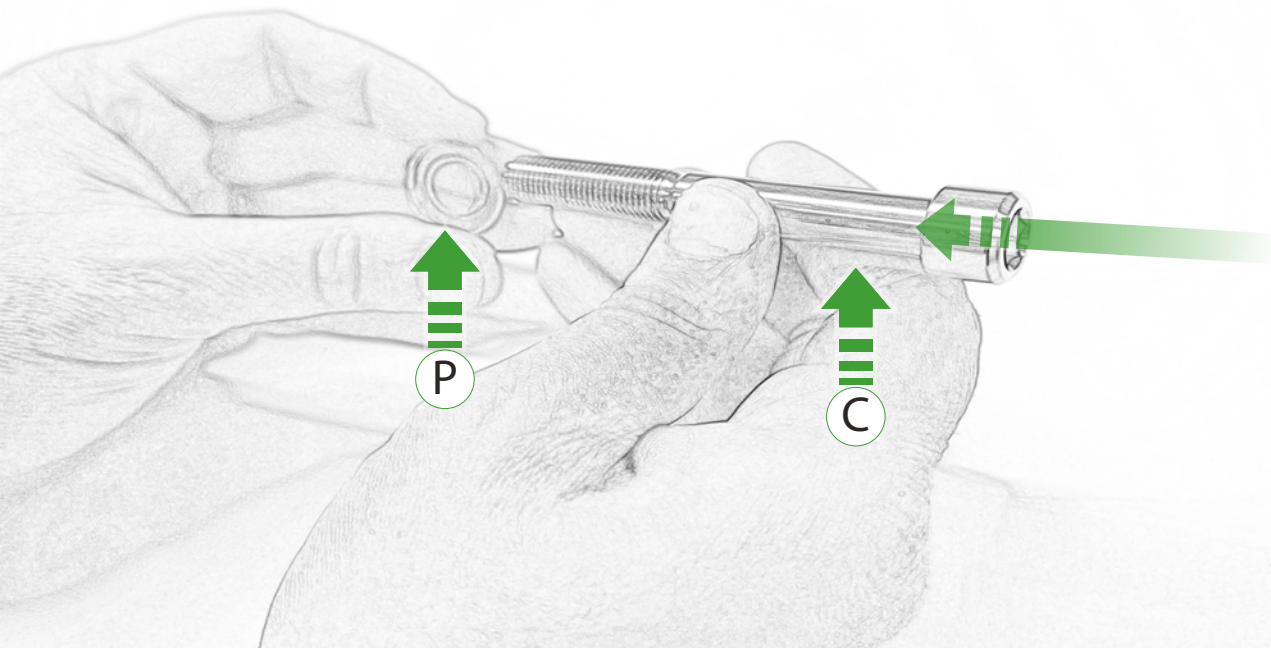

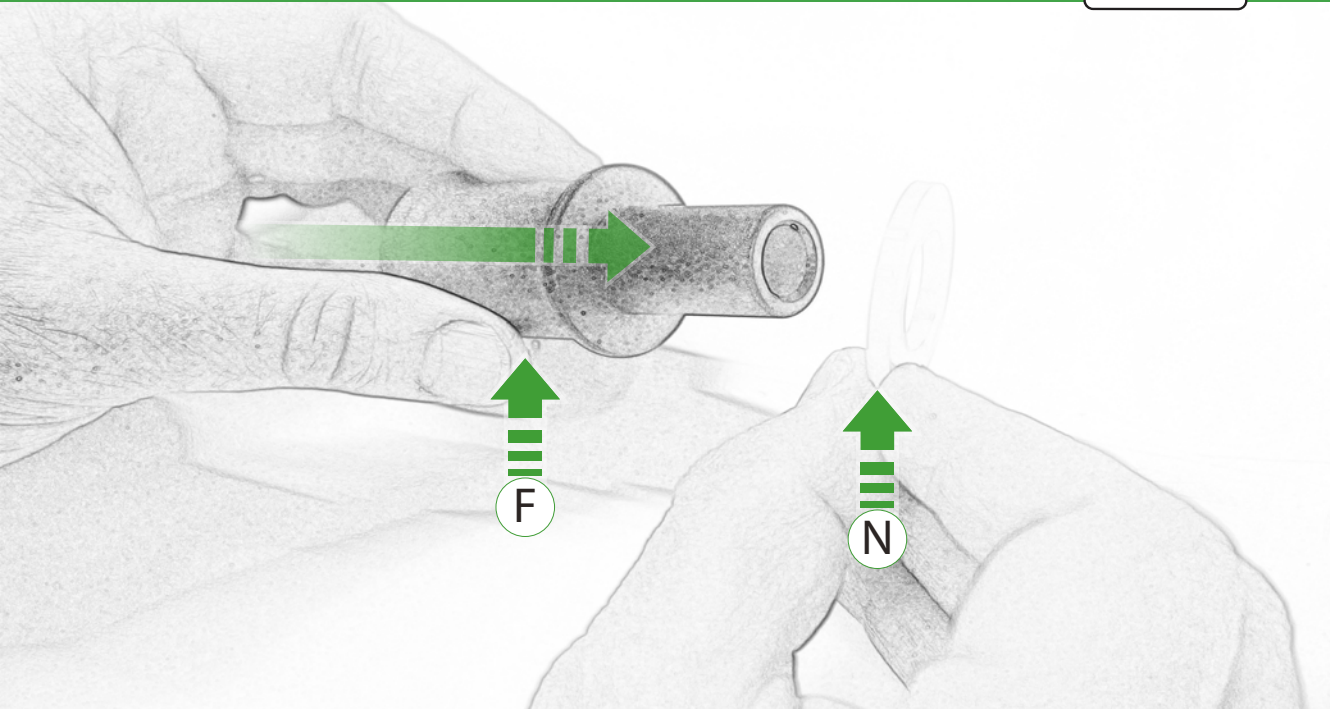

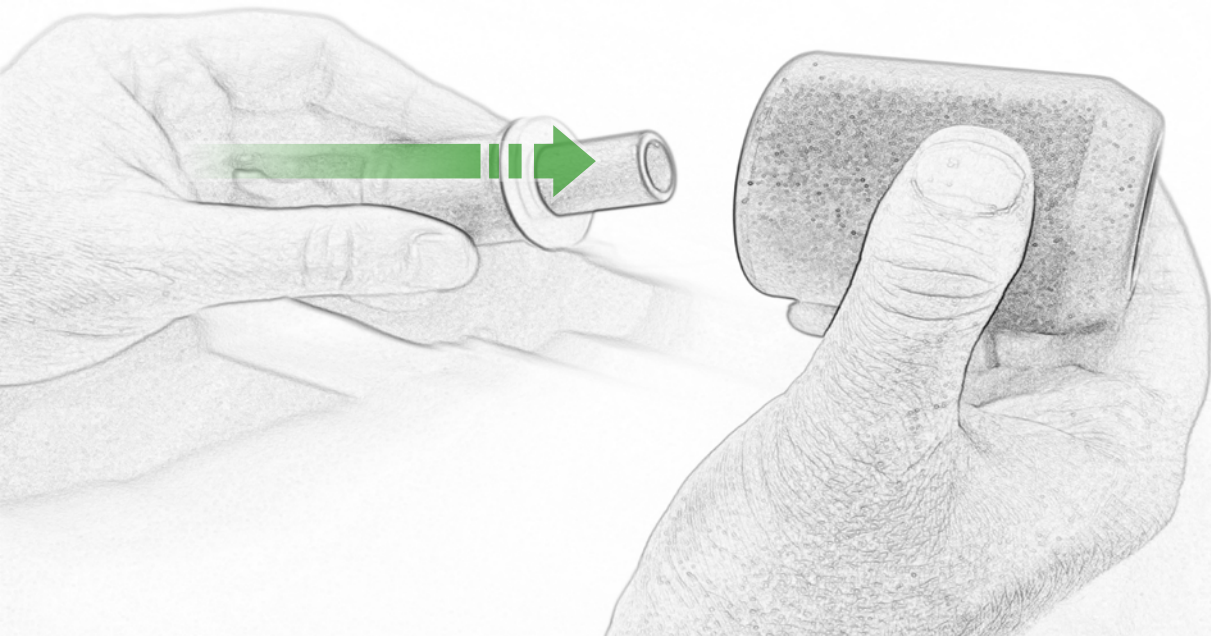


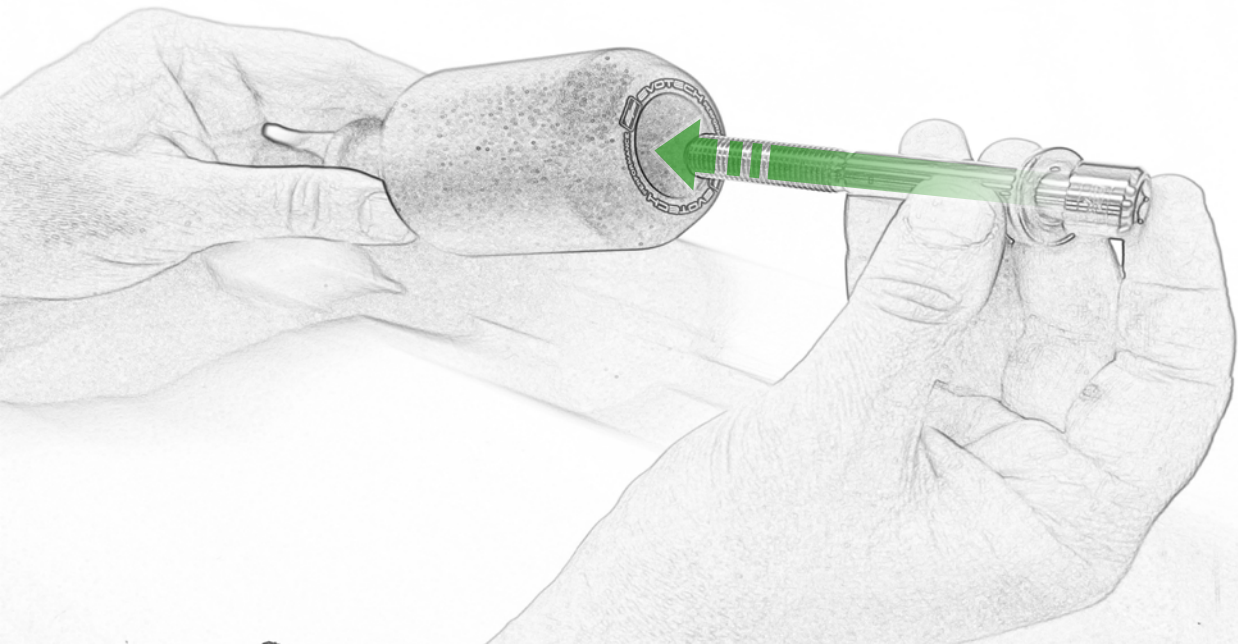


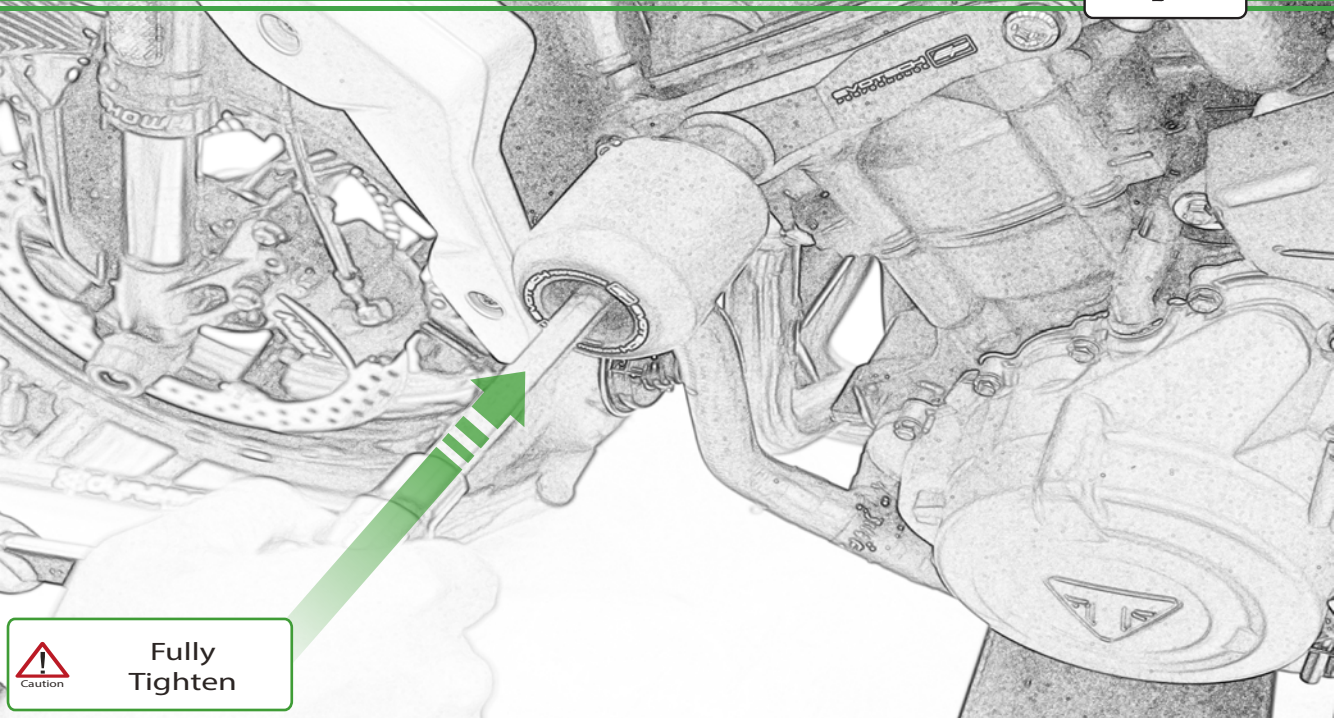



Caution


Fully
Tighten

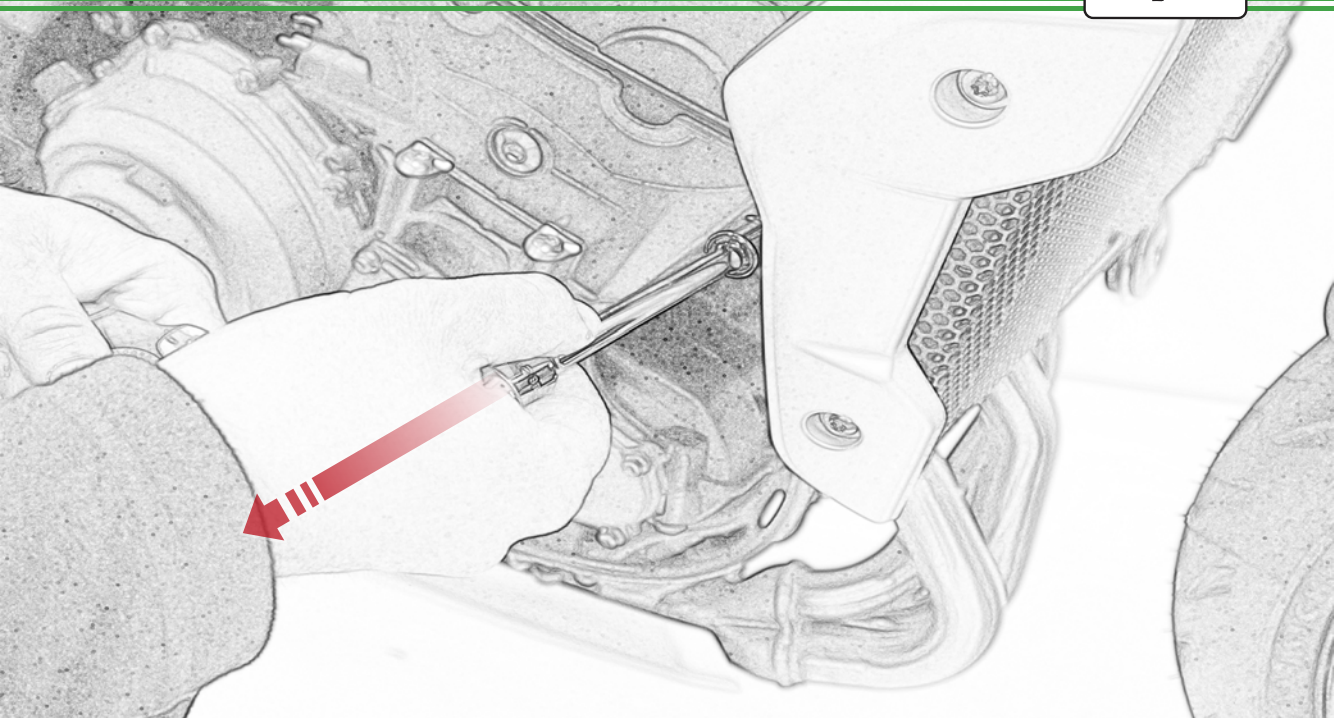


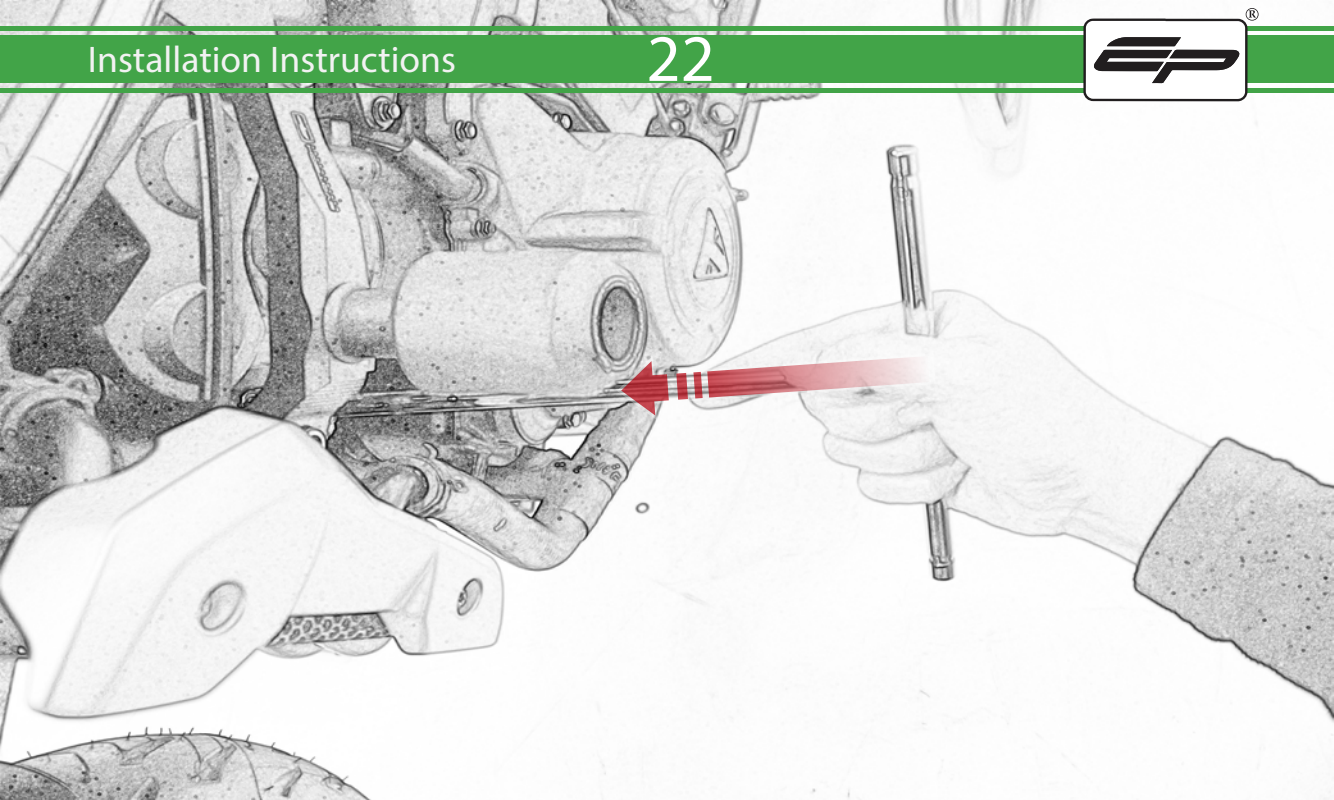

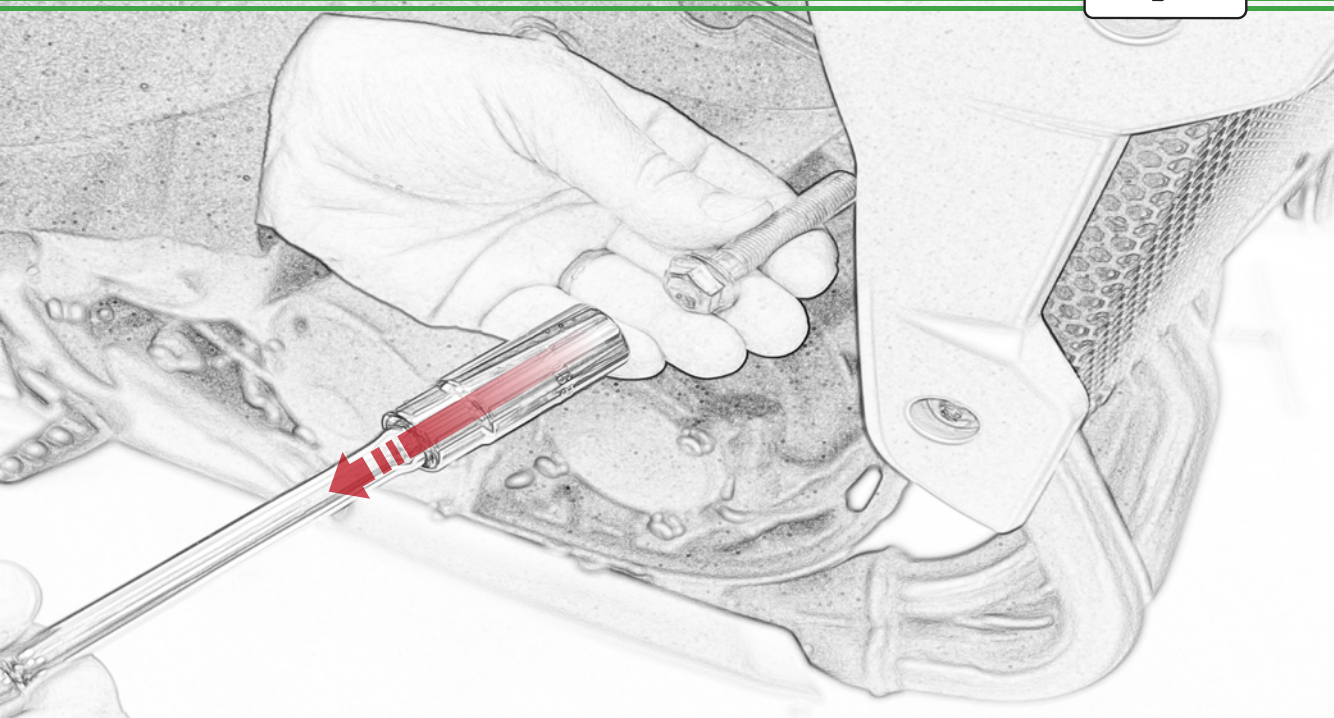

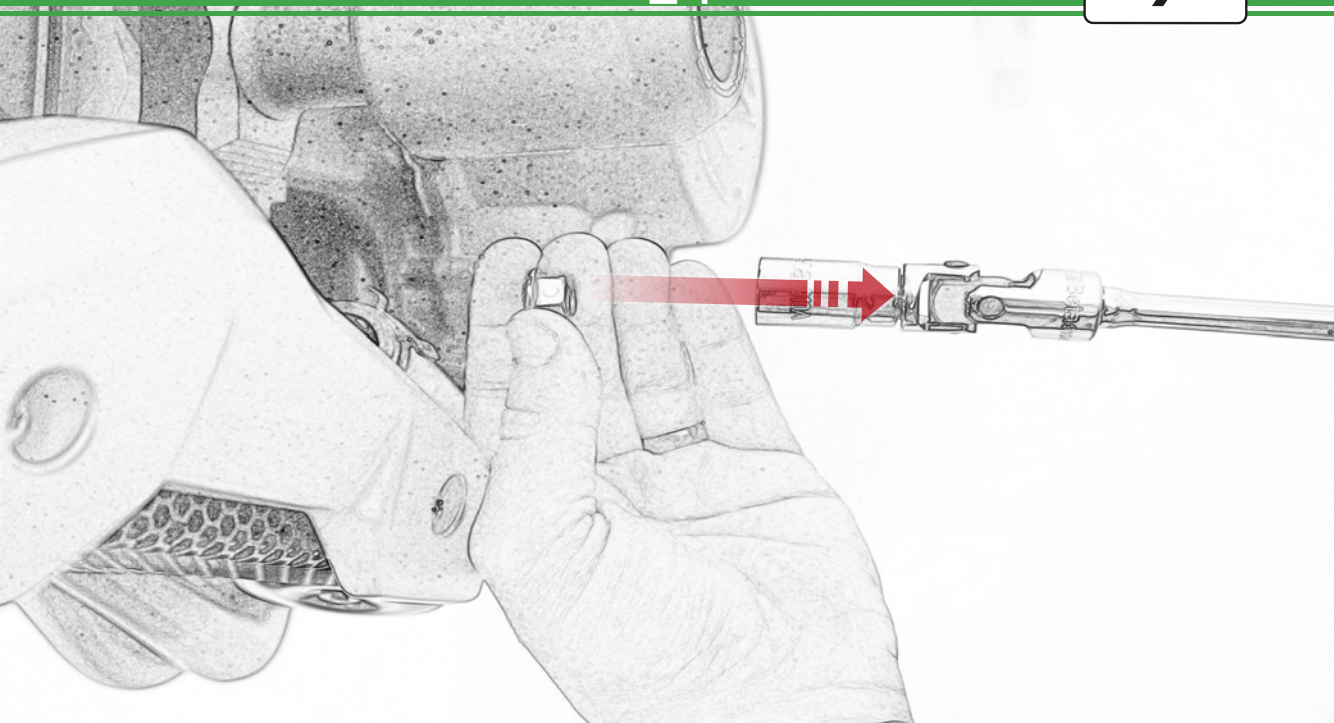


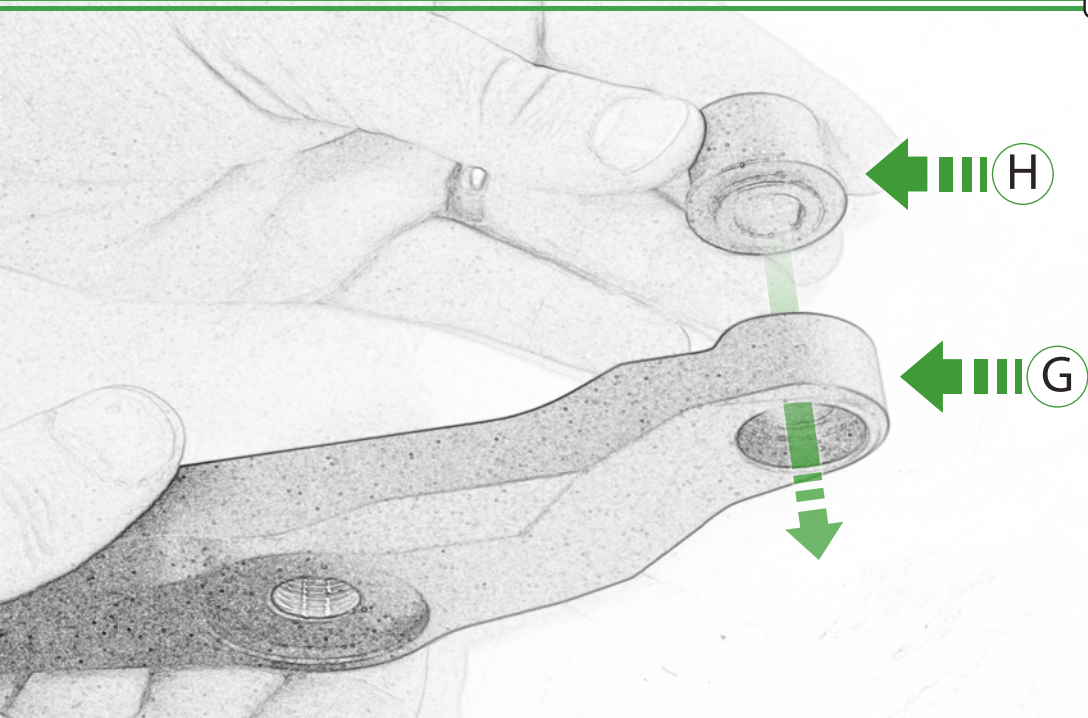


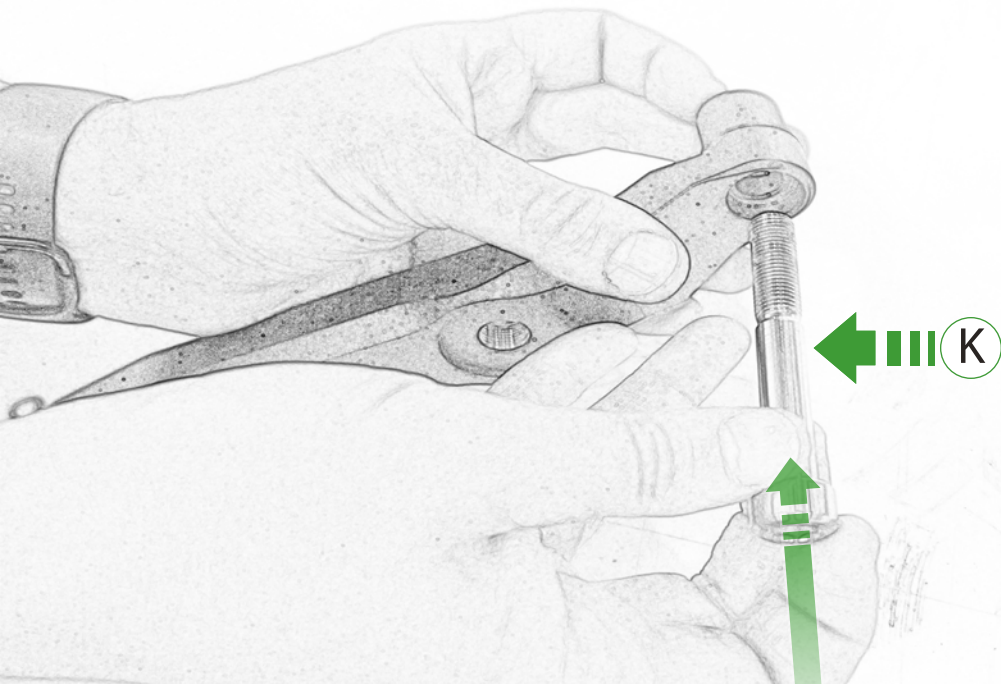






**Do Not Fully
Tighten**

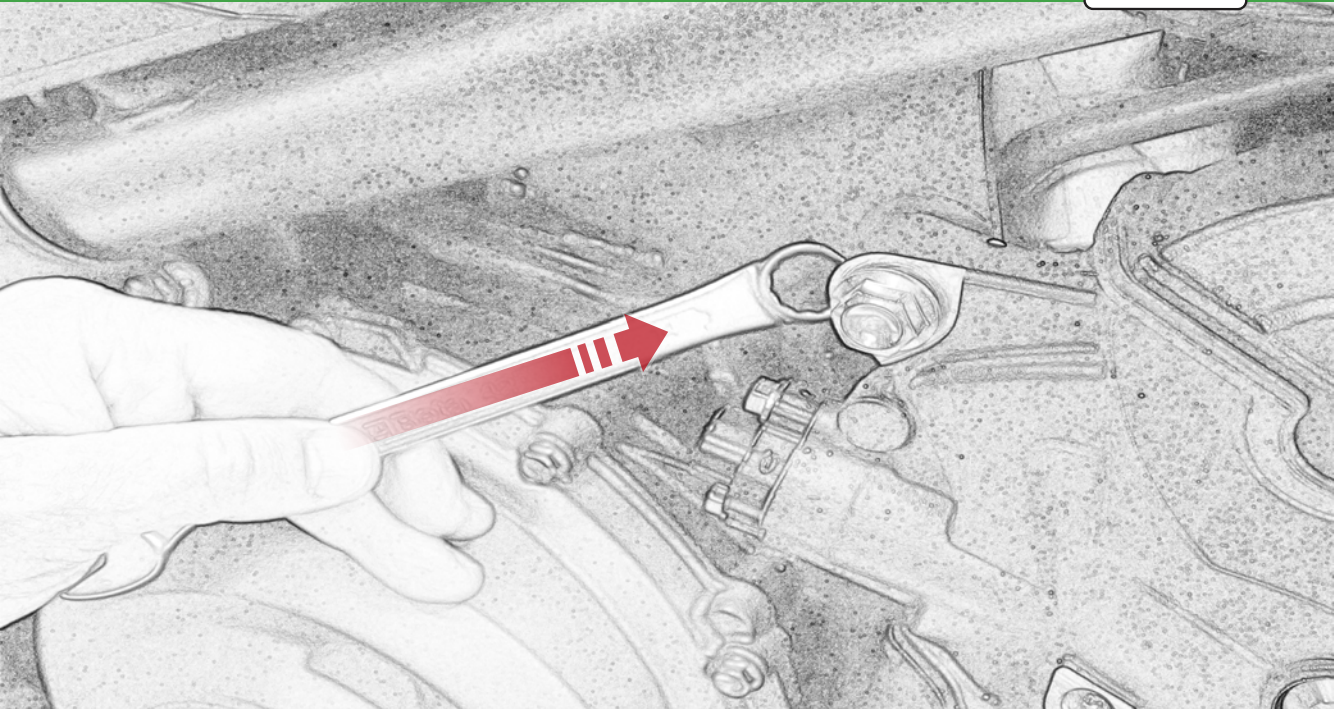


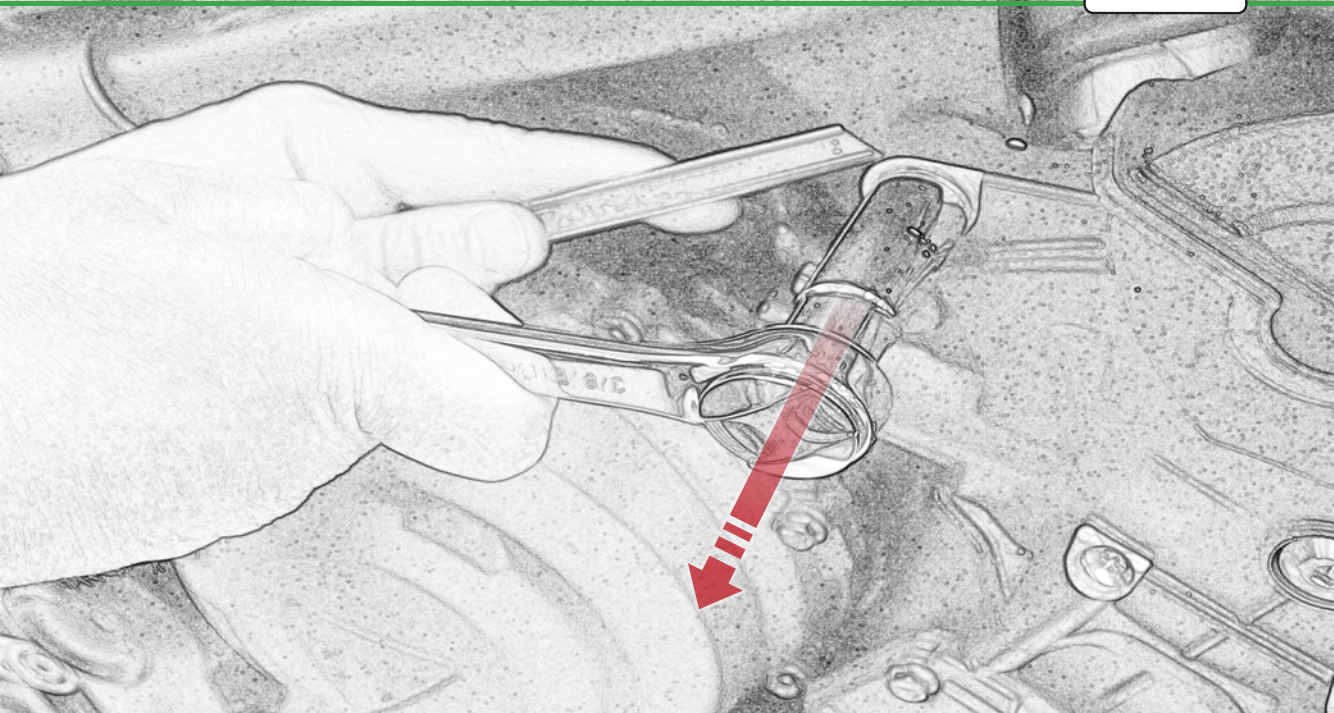

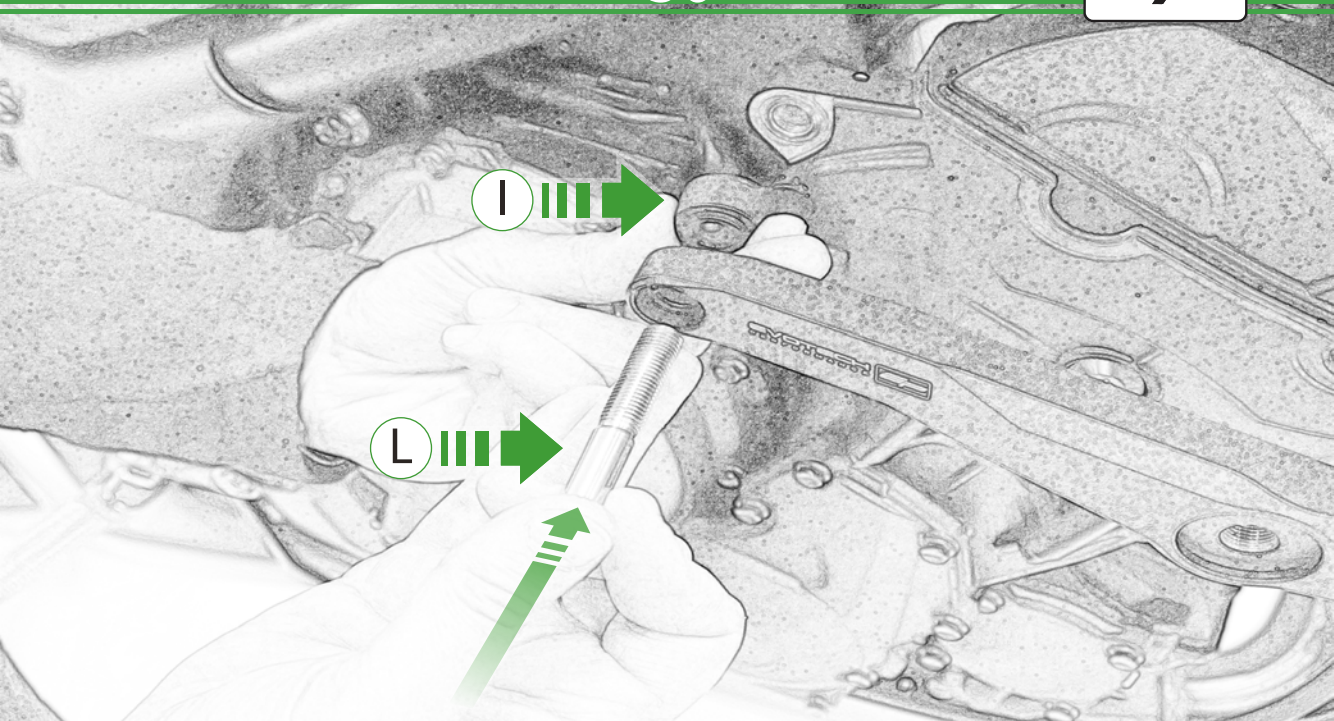

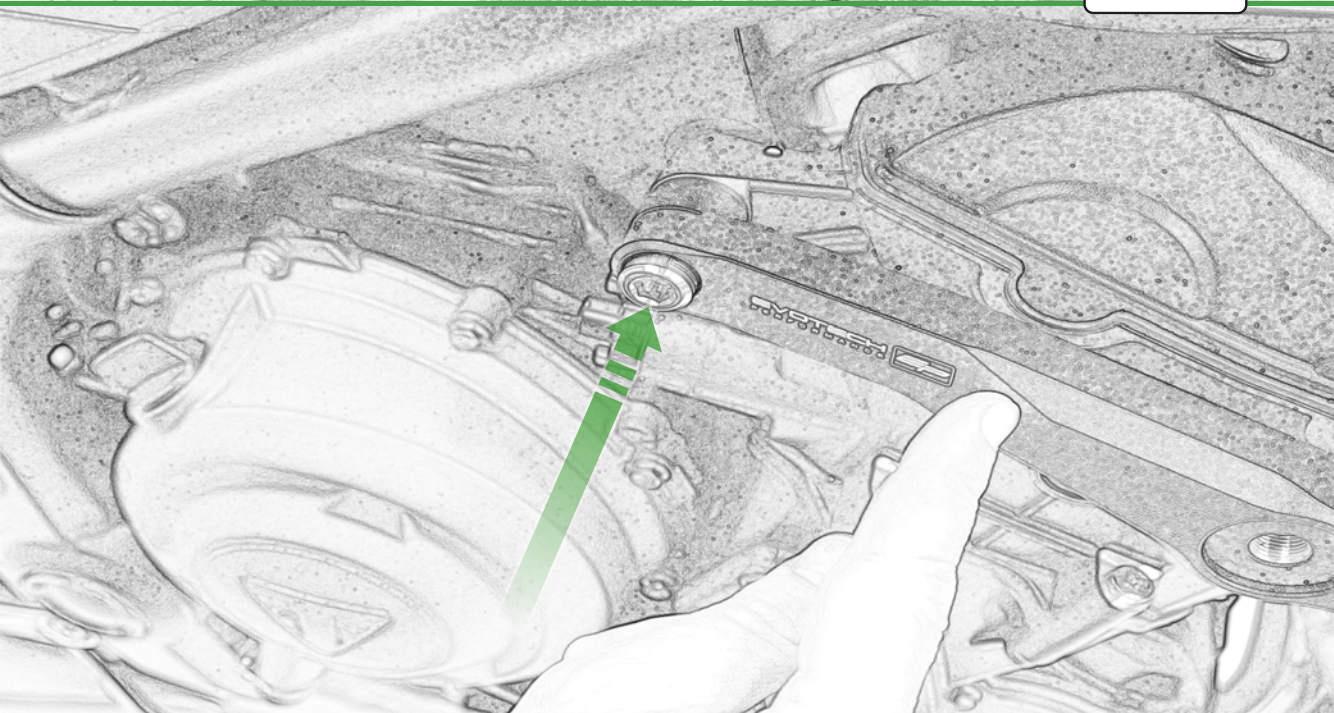

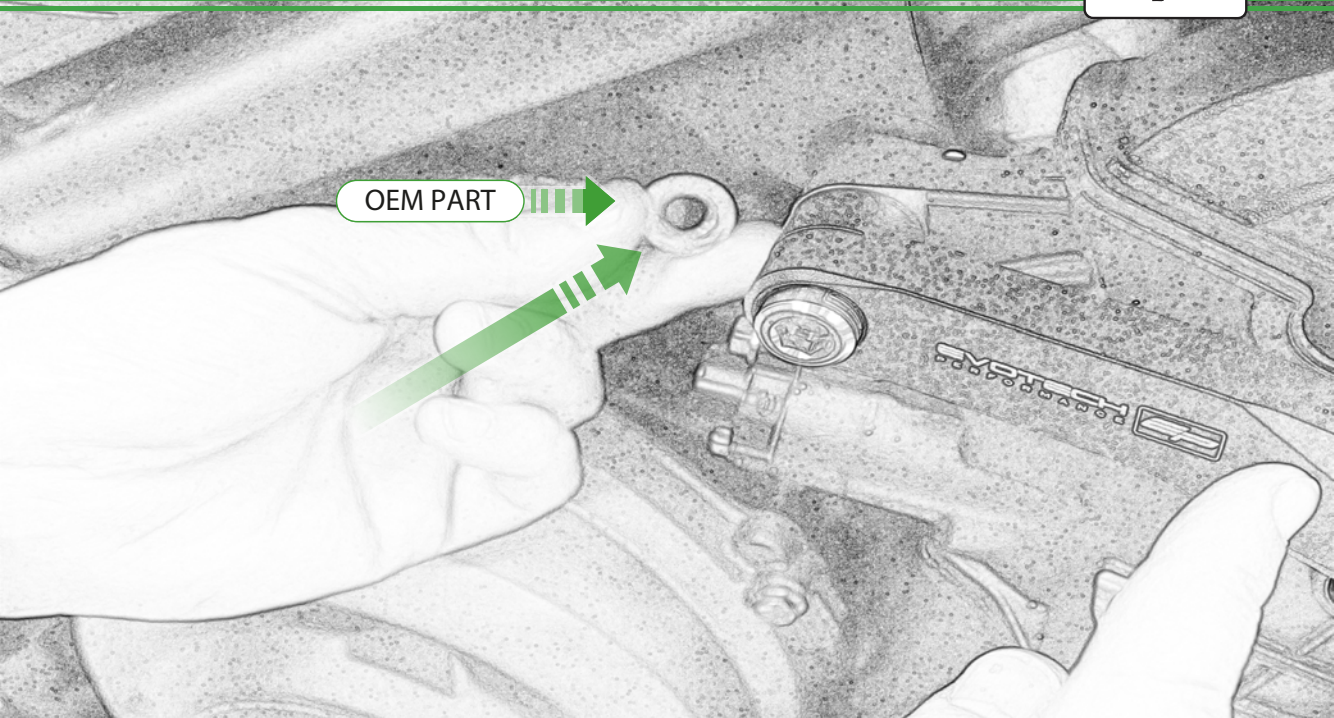

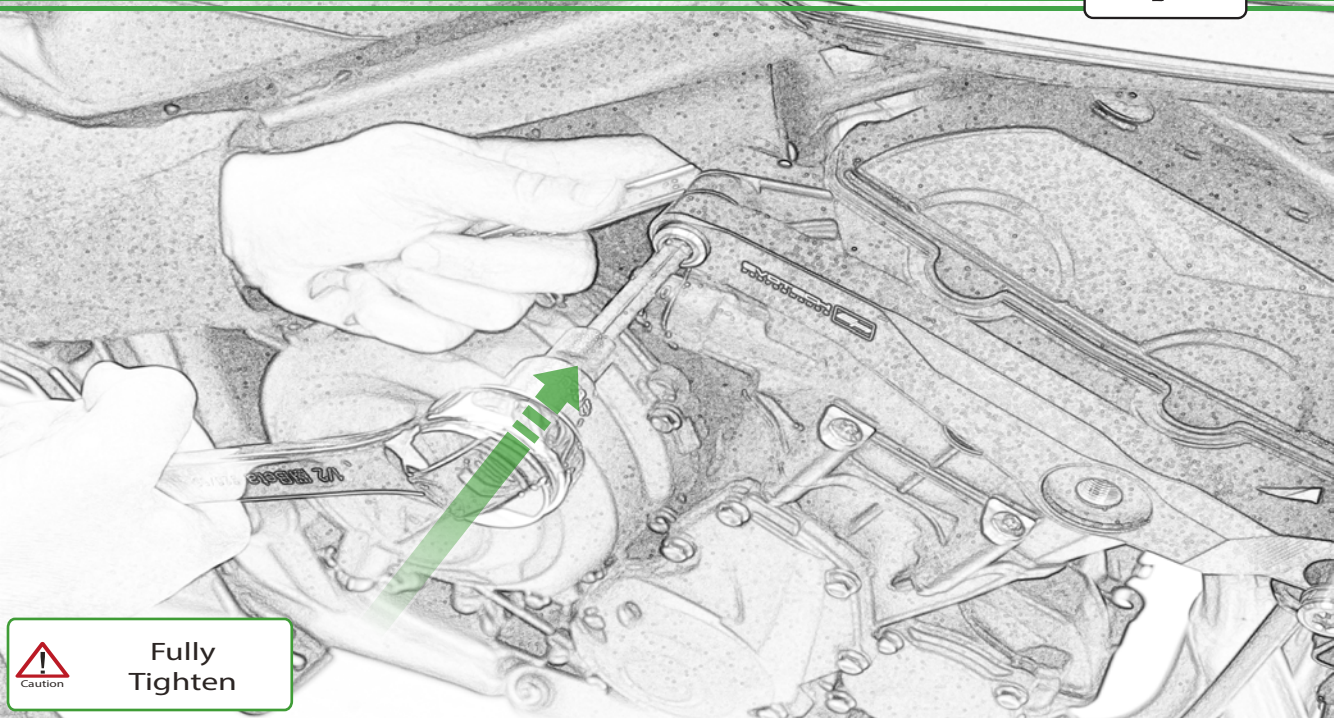


Caution


**Fully
Tighten**




Caution


Fully
Tighten

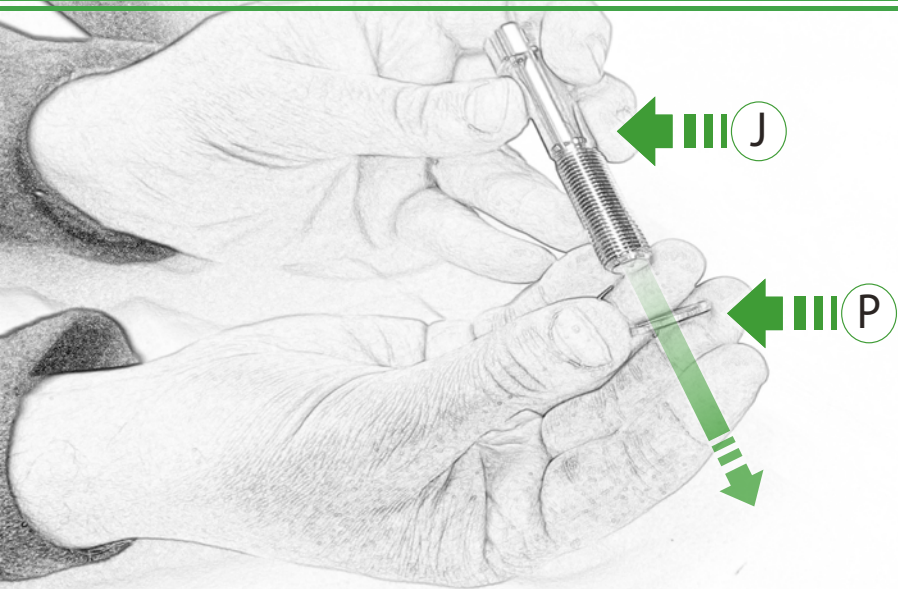


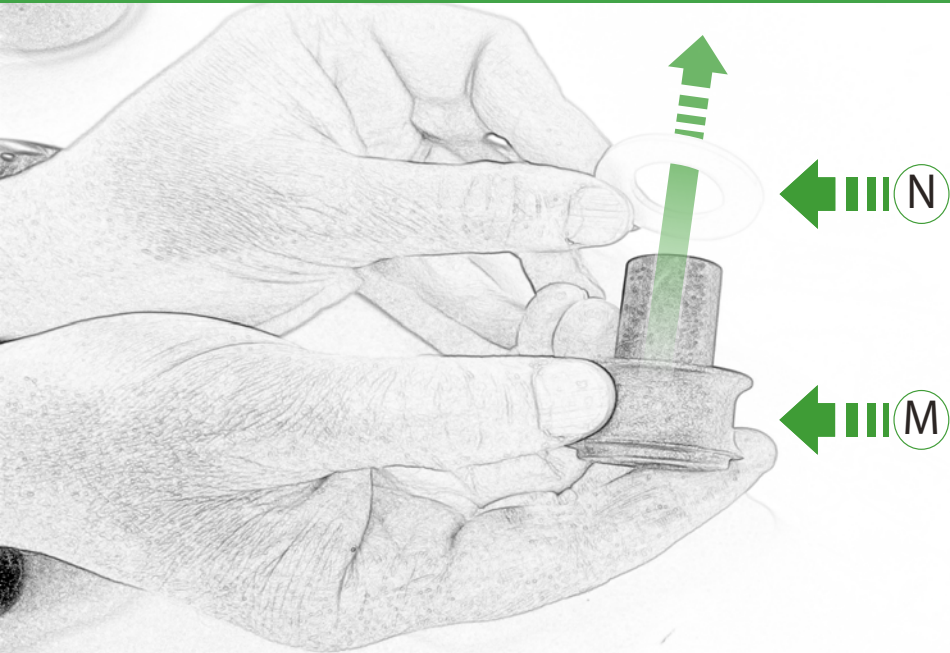

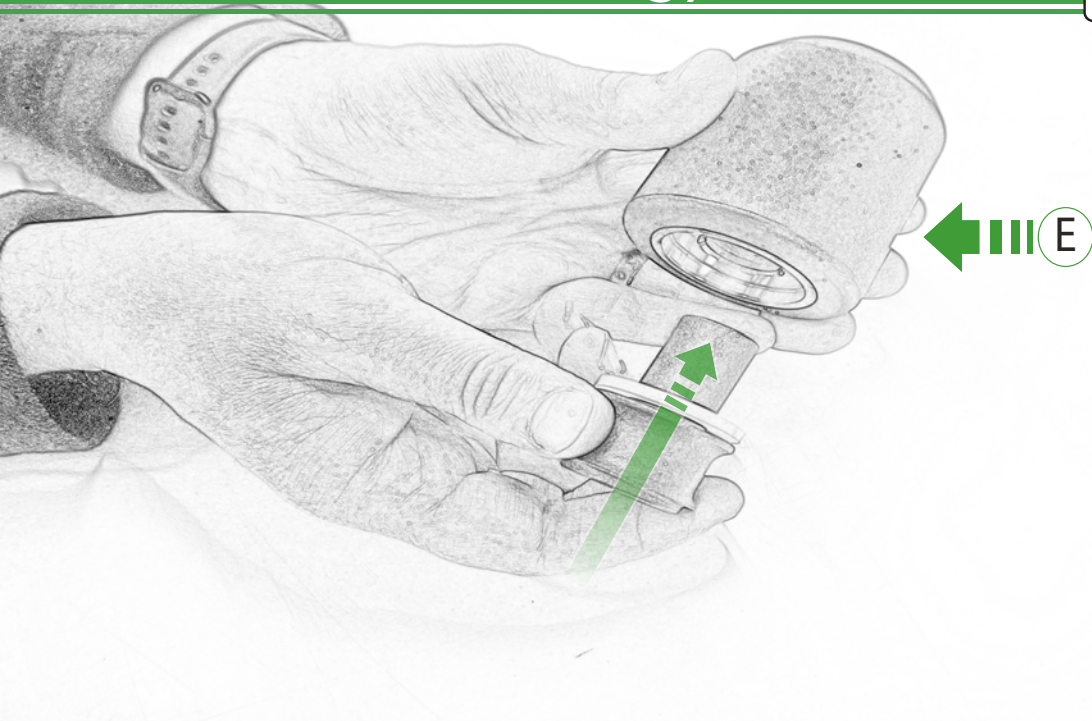



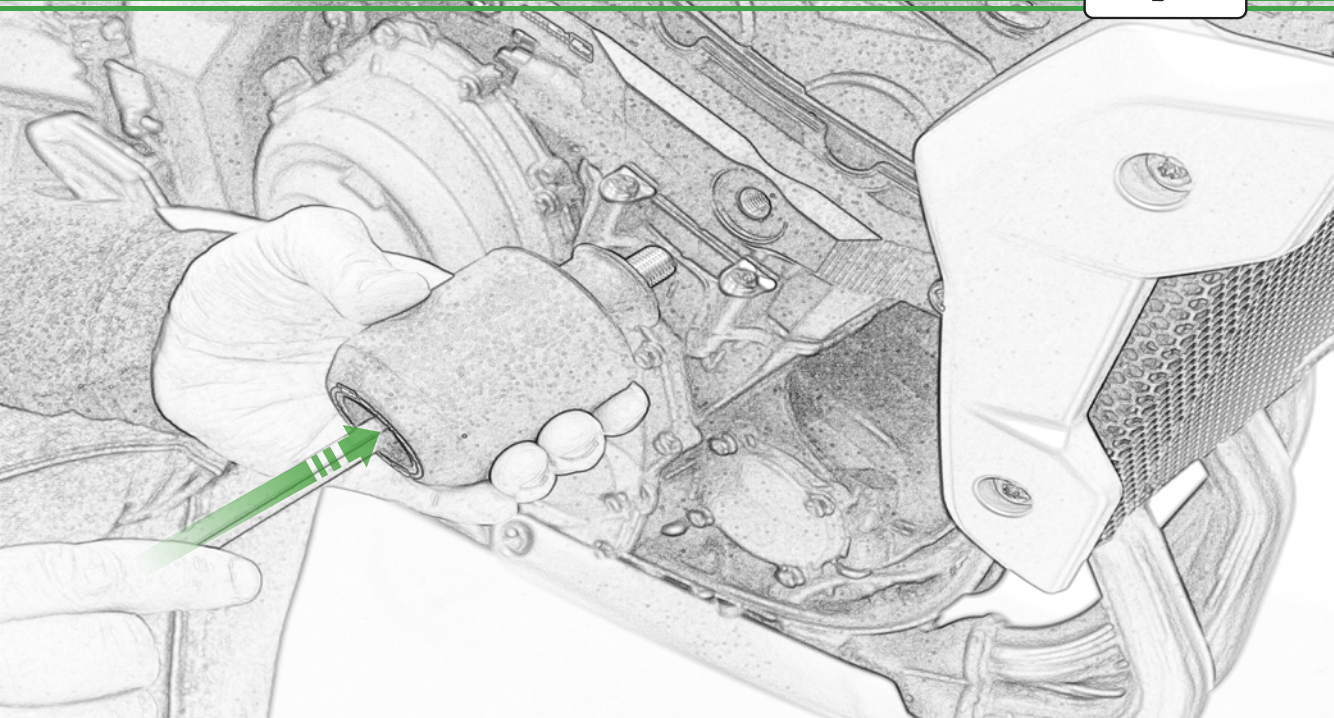

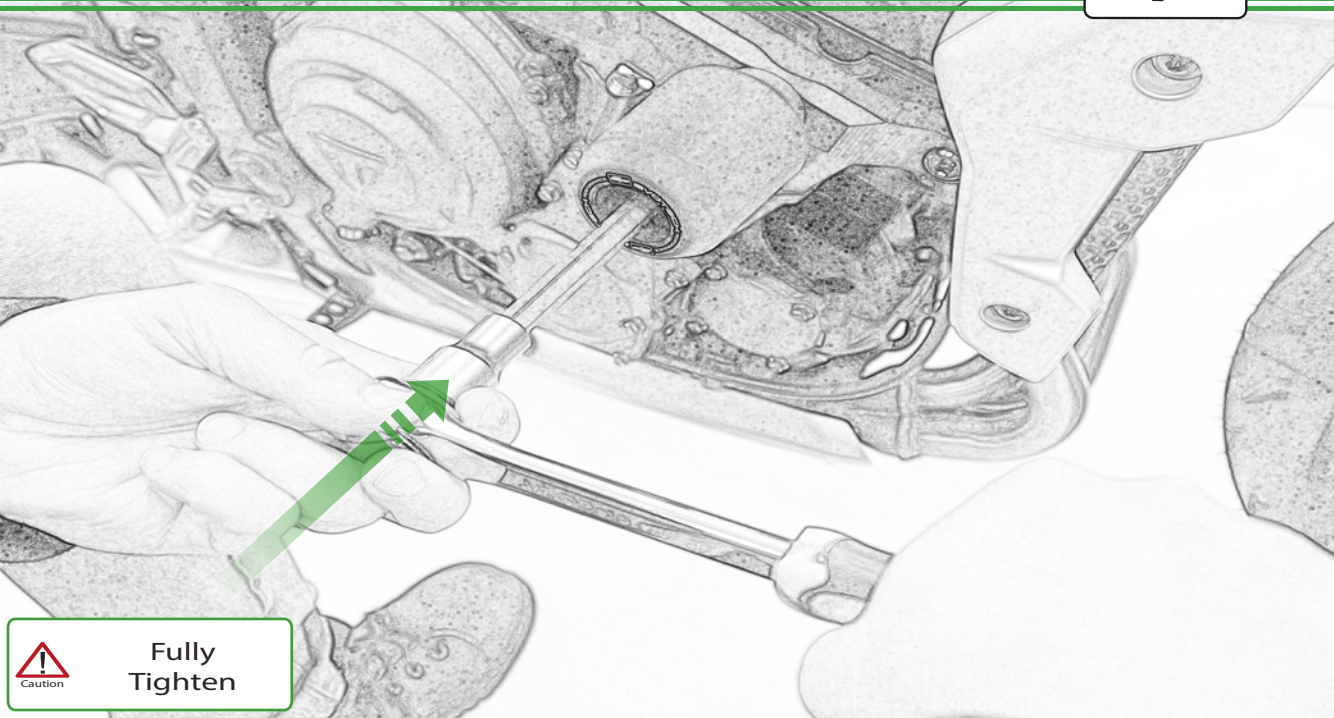

Caution

Fully
Tighten



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com