

EVOTECH®
P E R F O R M A N C E


www.evotech-performance.com


Triumph Trident Tail Tidy
Installation Instructions




Kit Contents PRN015396


- (A) 1 x BMW Light
- (B) 1 x Connector Type 25
- (C) 1 x Connector Type 23
- (D) 1 x M8 x 20mm Button Head Bolts
- (E) 1 x M5 x 16mm Button Head Bolts
- (F) 1 x M5 Washer
- (G) 1 x Back Spacer
- (H) 1 x Front Spacer
- (I) 1 x Support Bracket
- (J) 1 x Number Plate Bracket
- (K) 1 x Main Right Body
- (L) 1 x Main Left Body
- (M) 4 x M6 Flange Nut
- (N) 6 x M6 x 16 Button Head Bolts


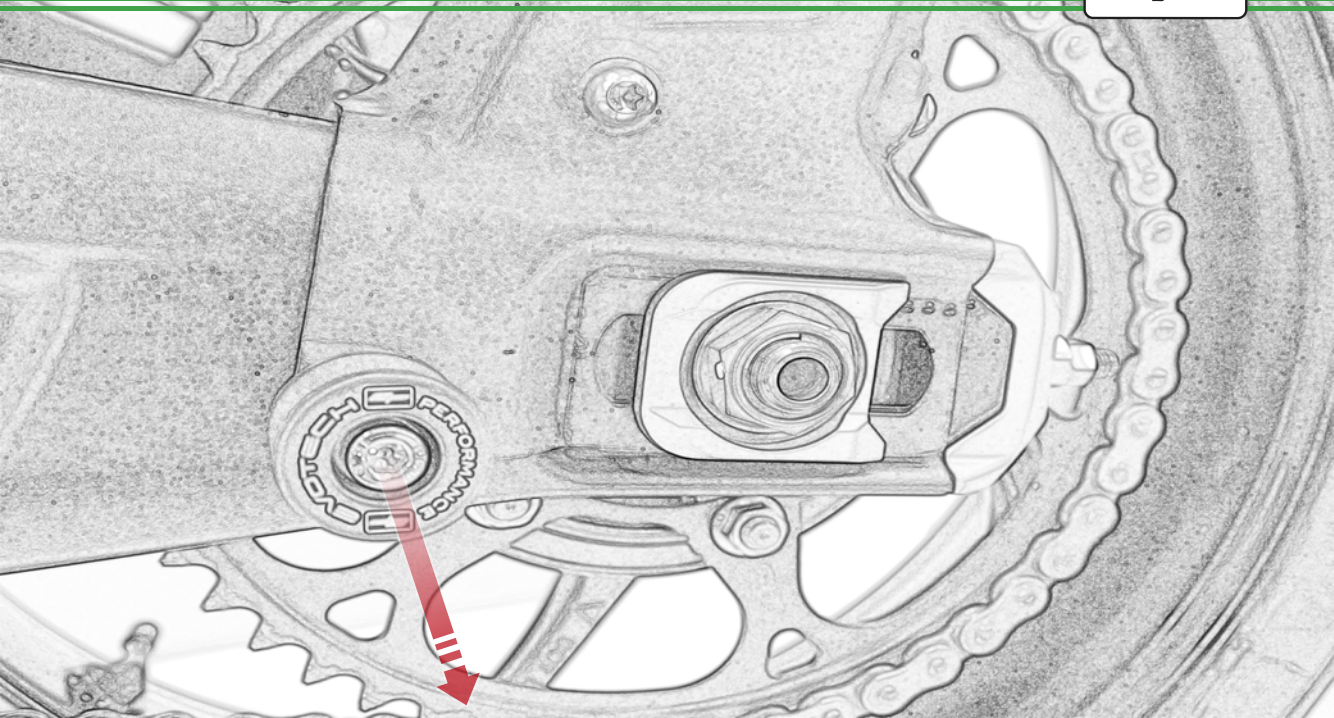



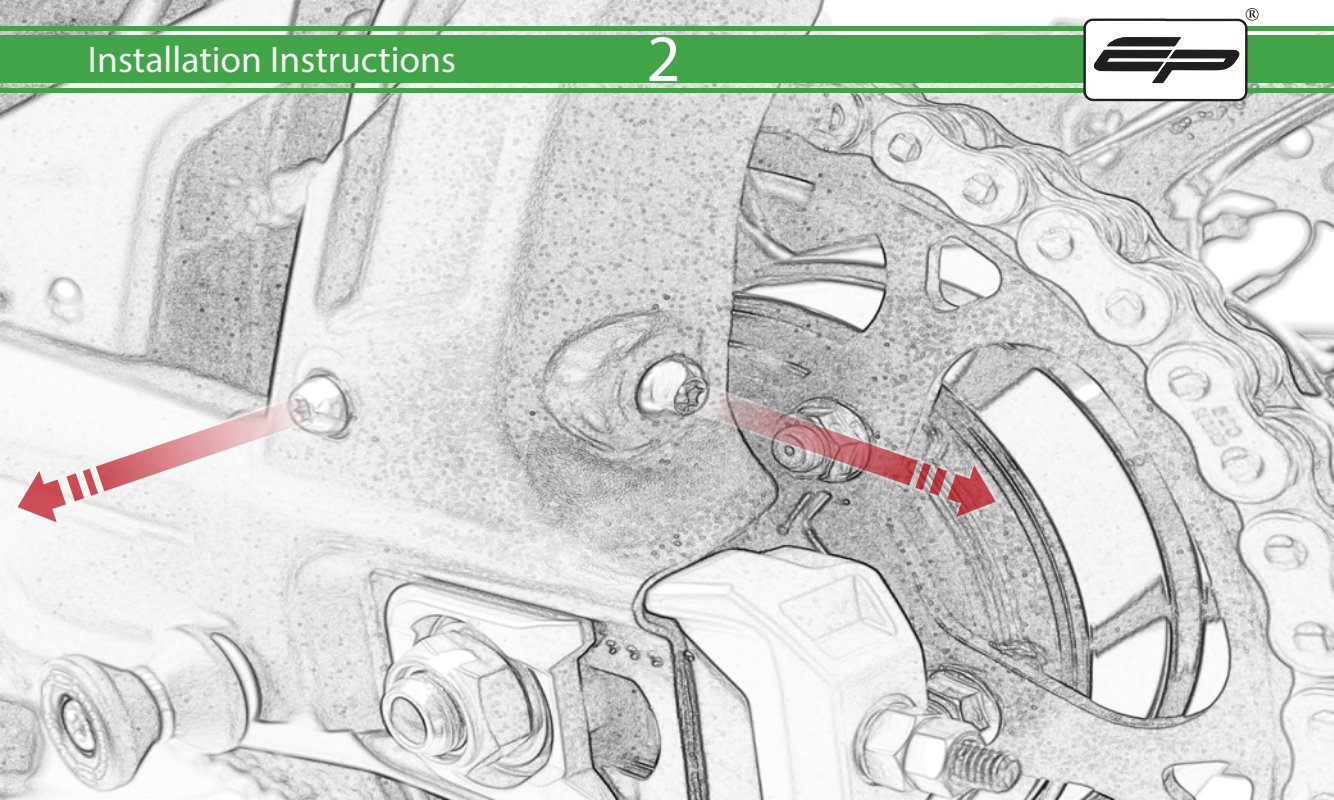





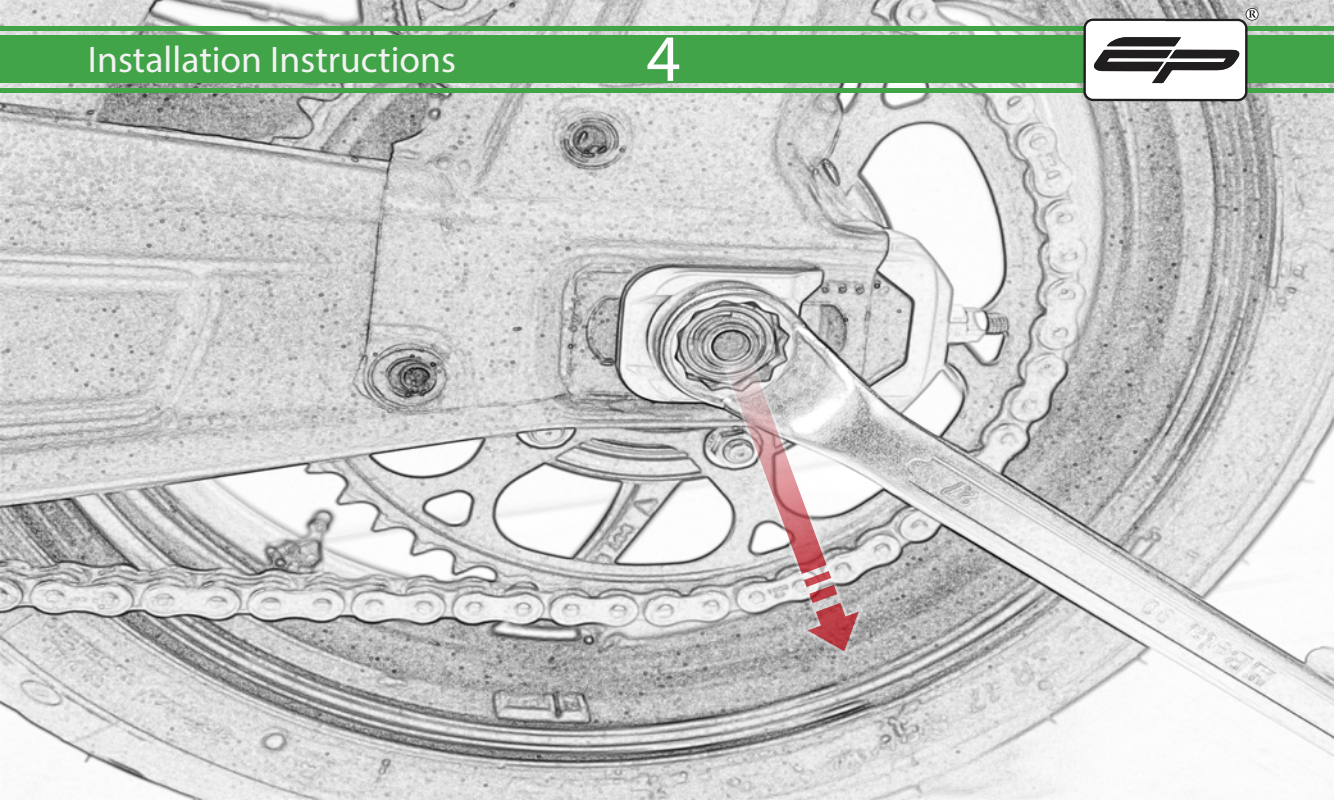


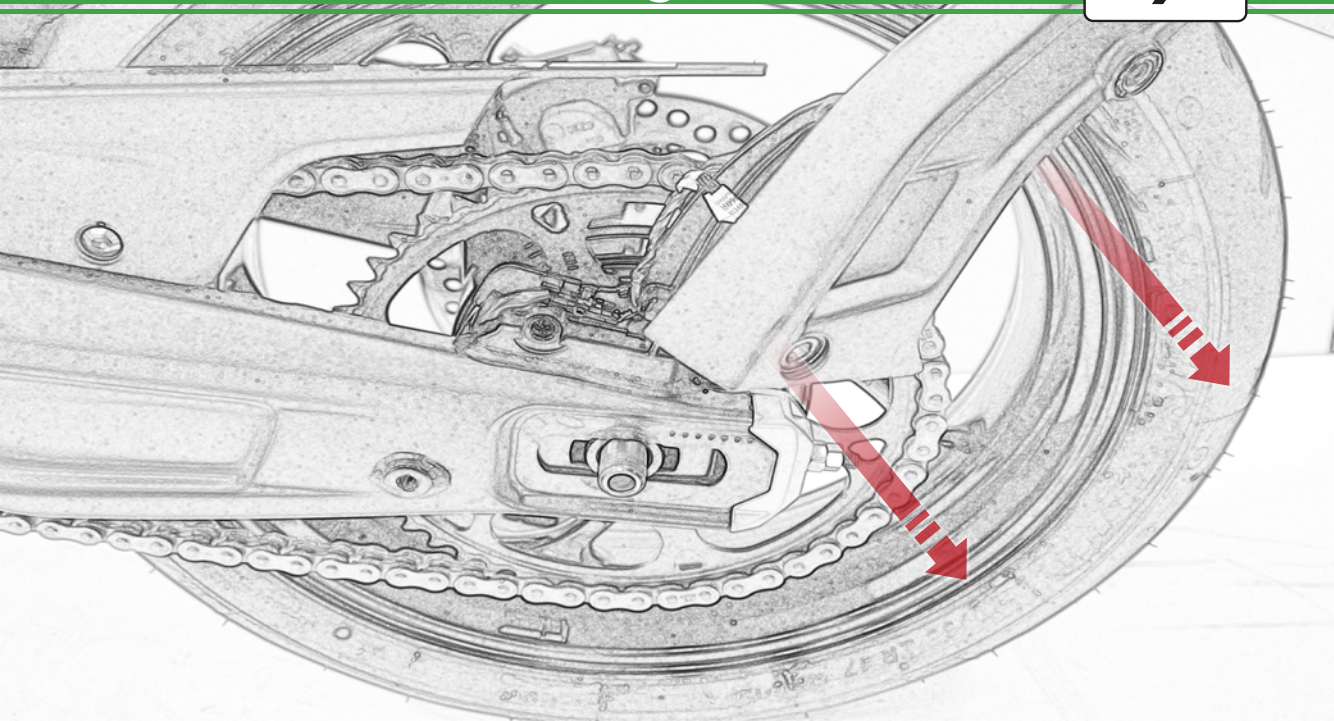


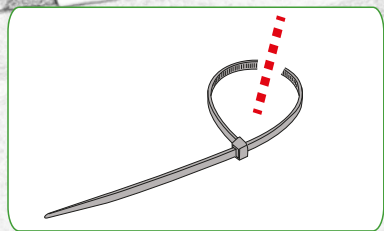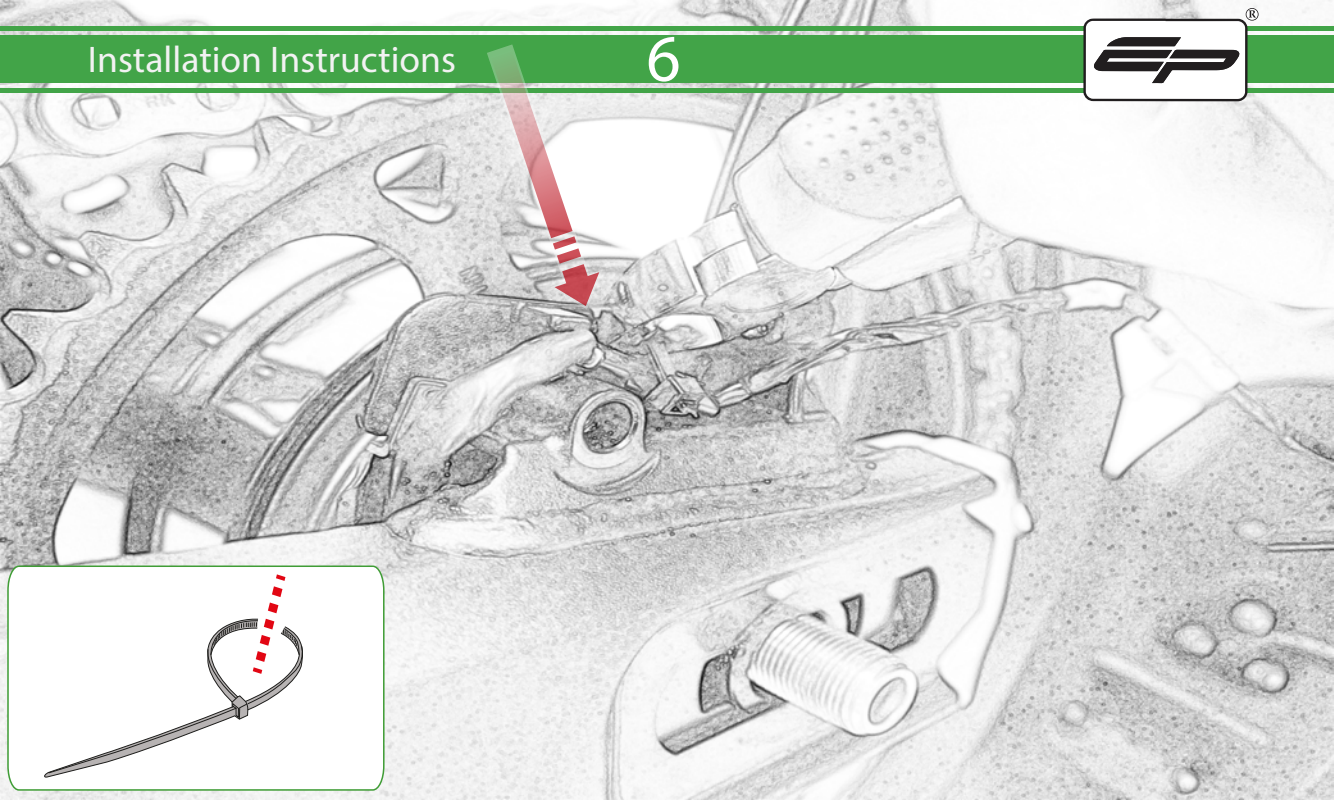


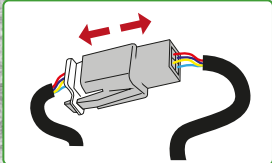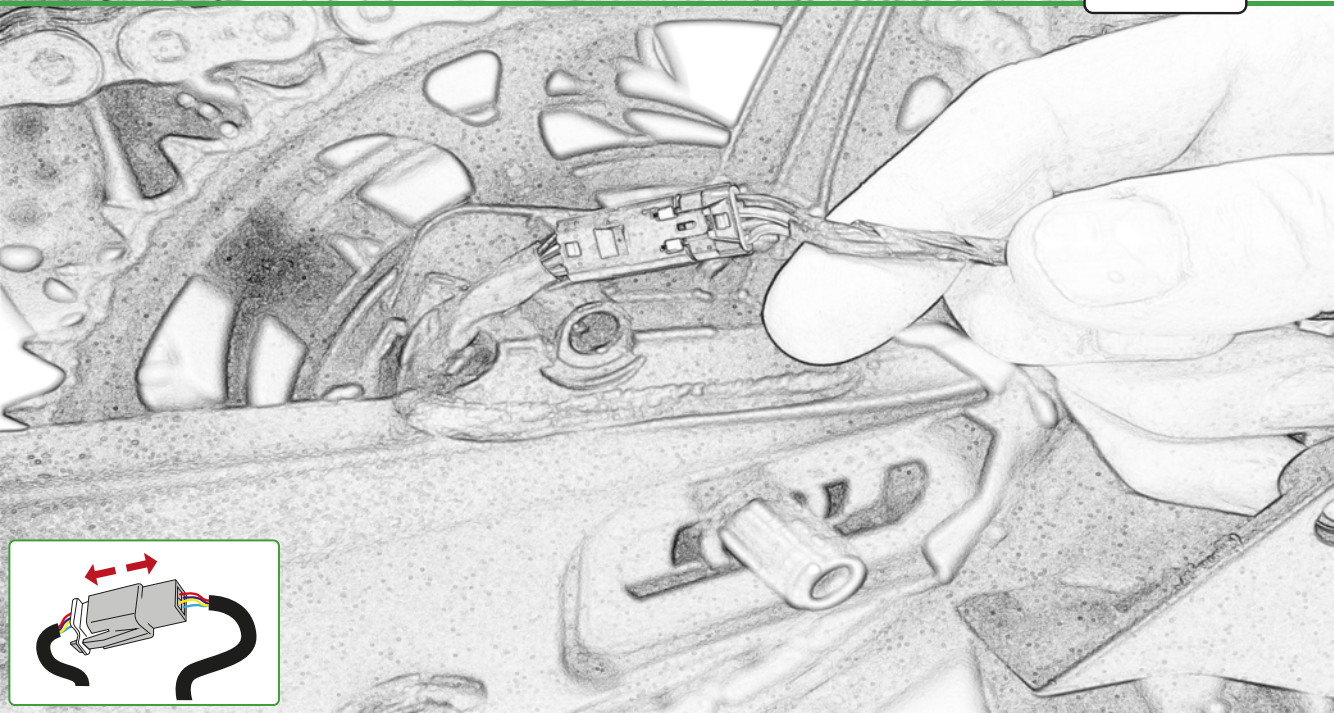


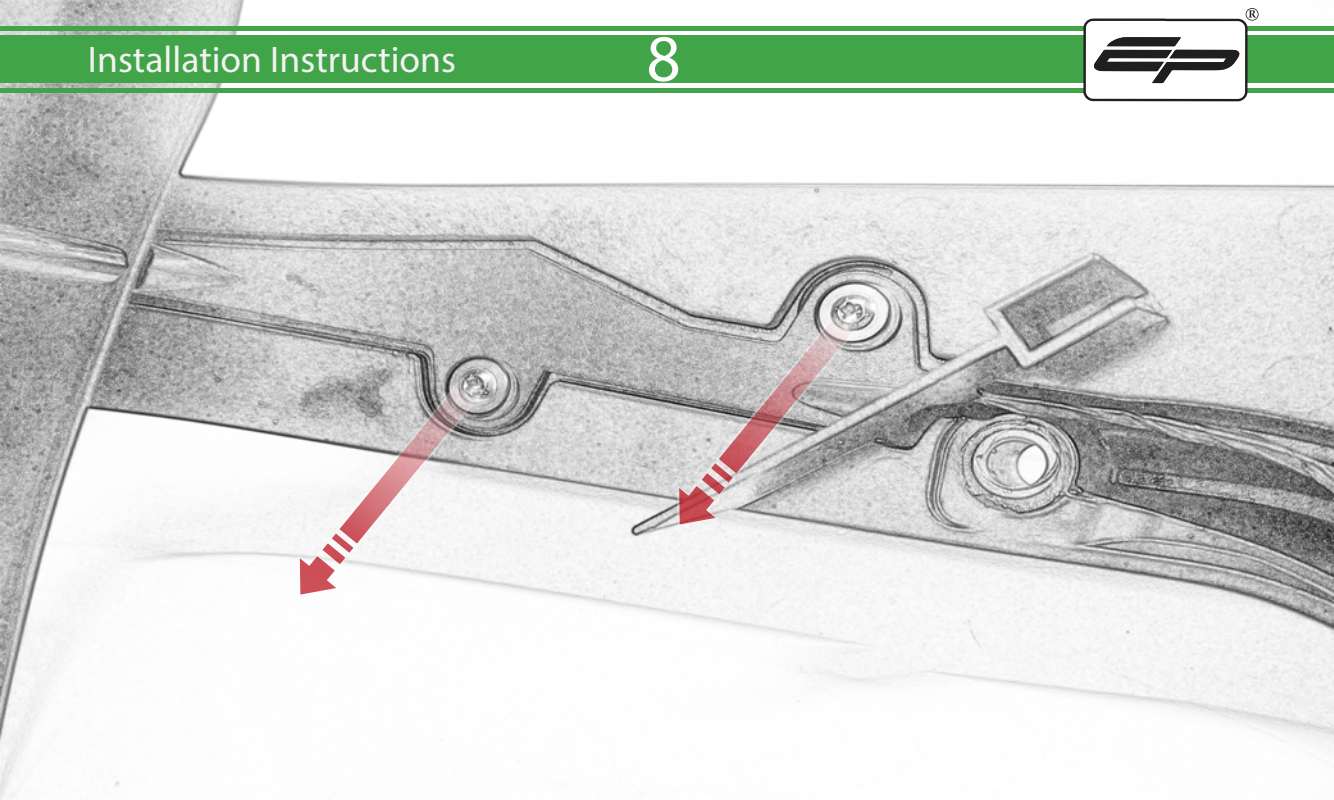


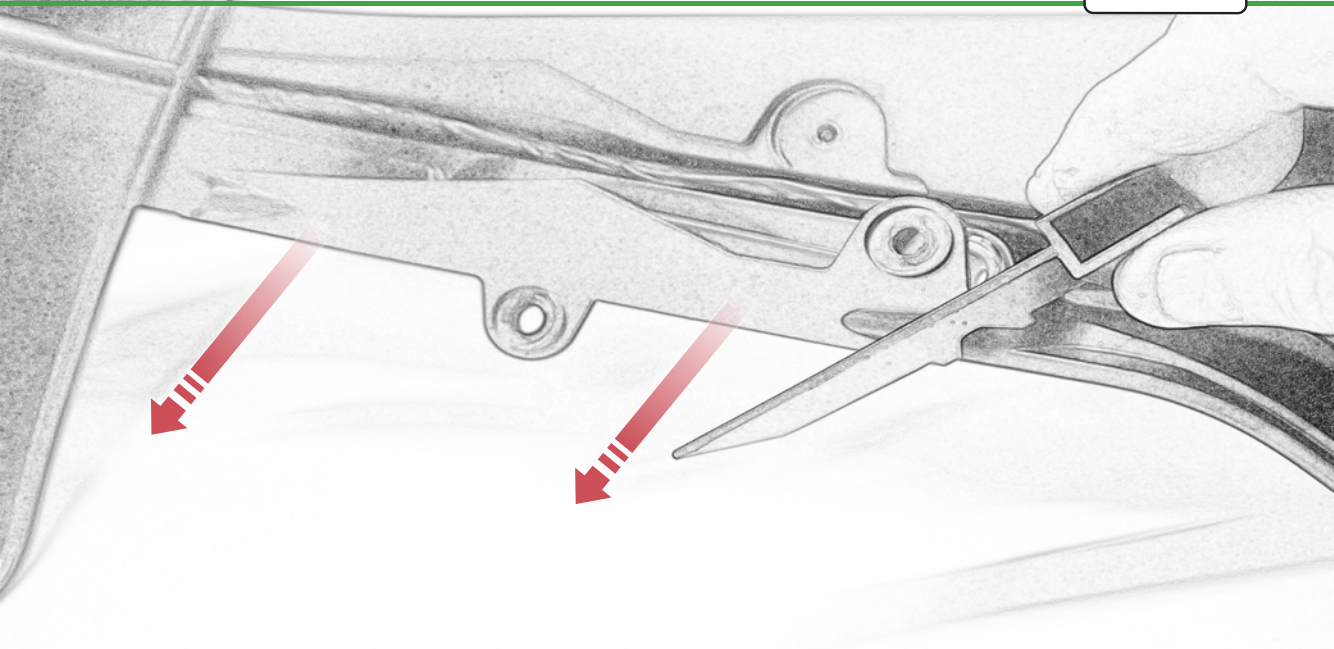


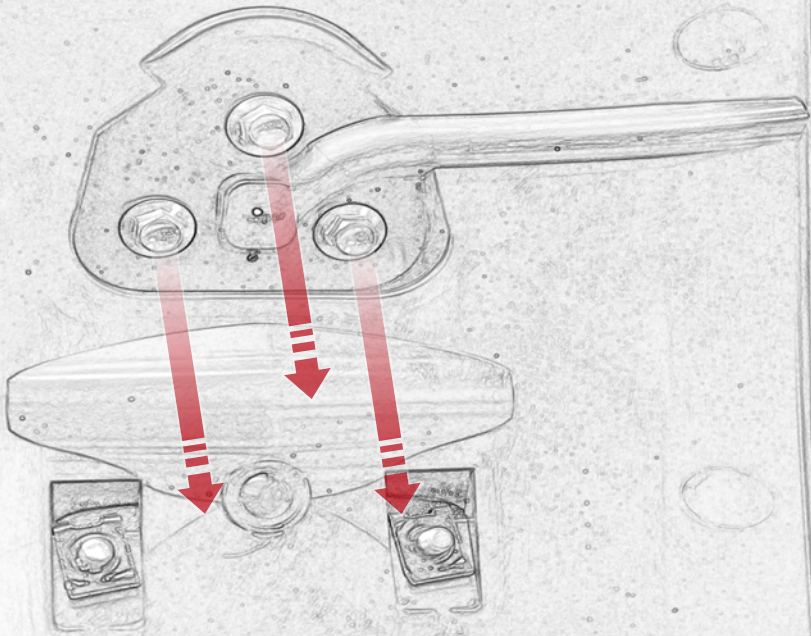

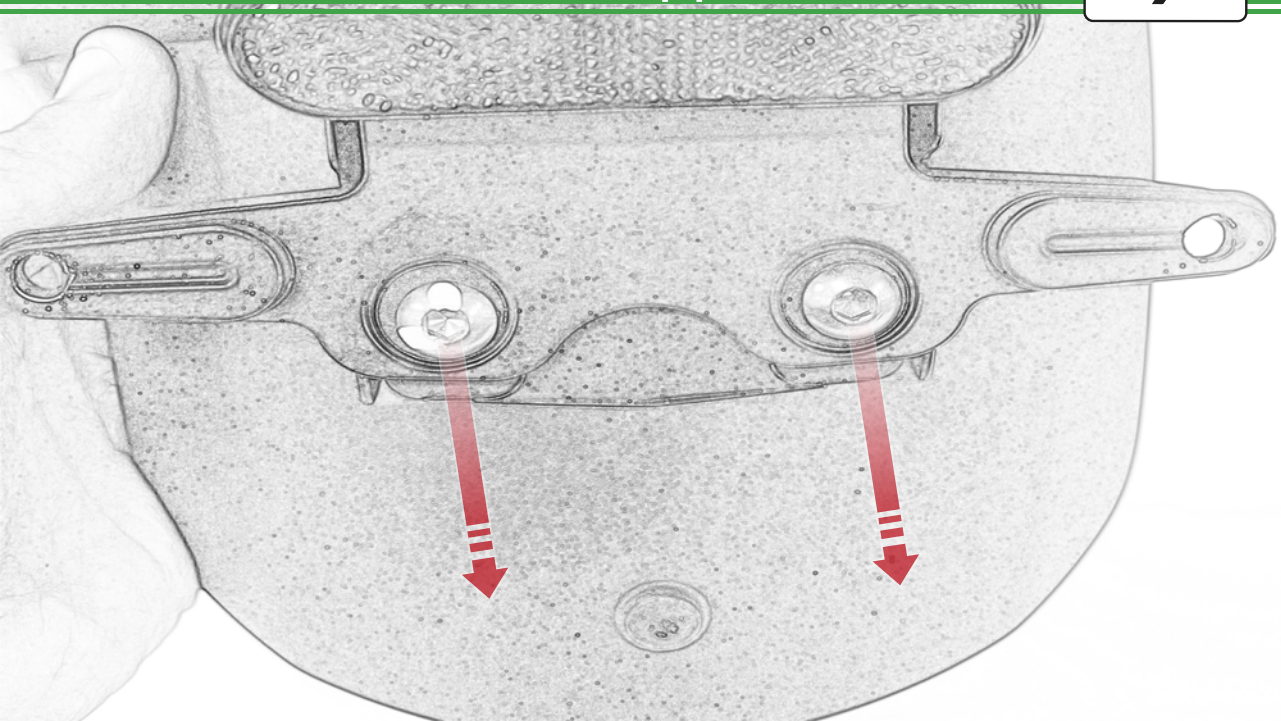


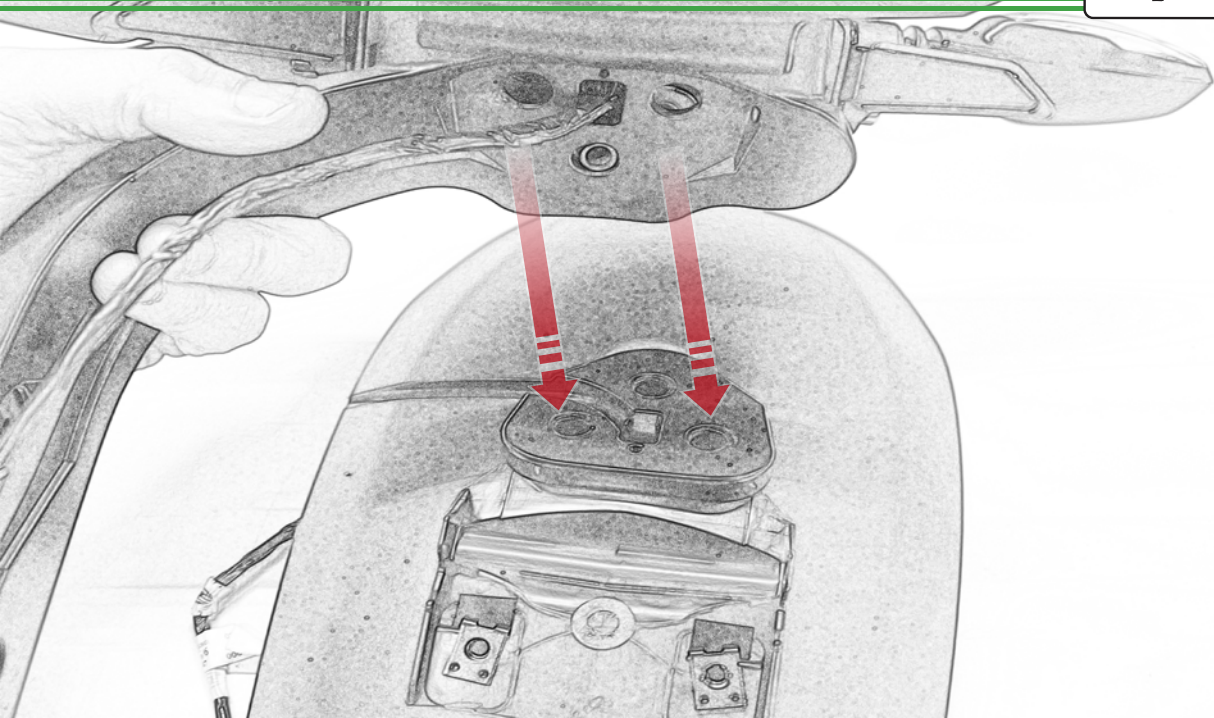


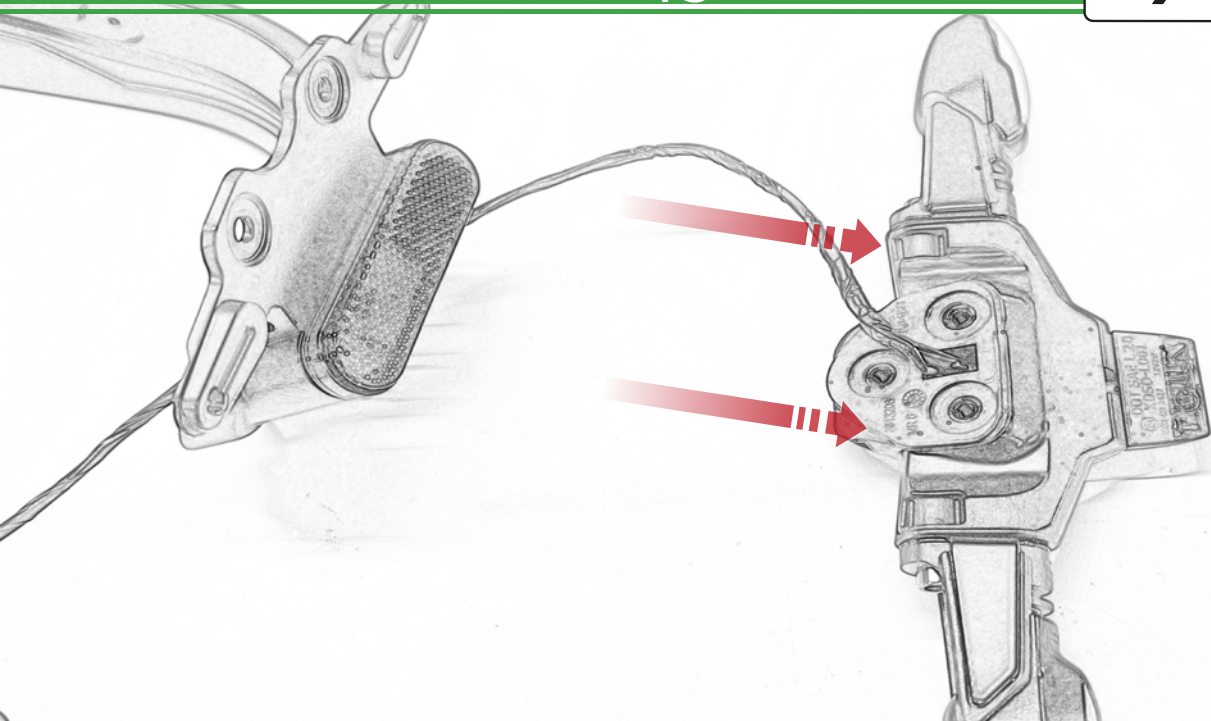


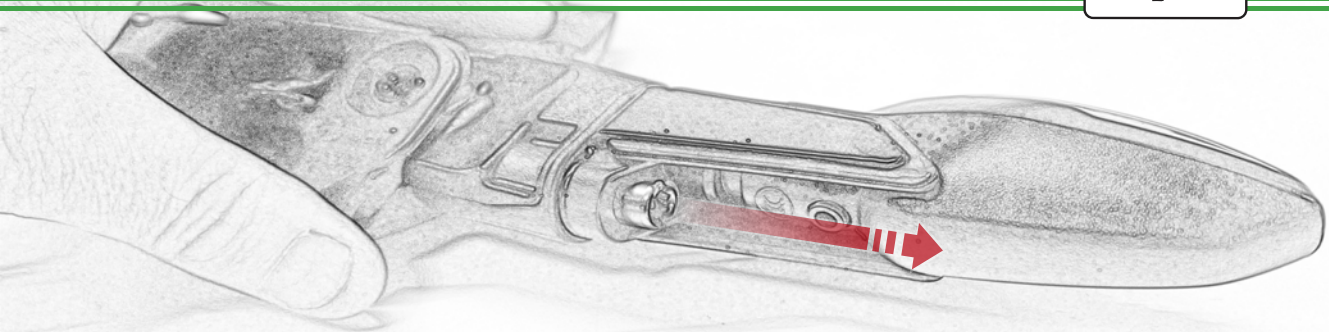


Repeat
Both Sides

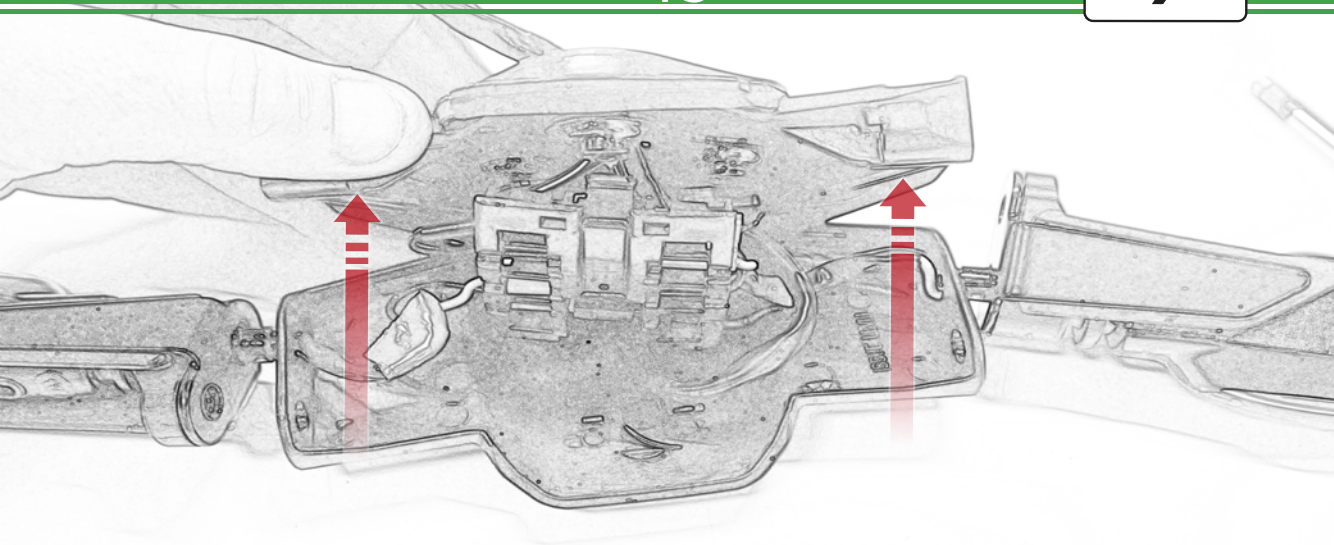


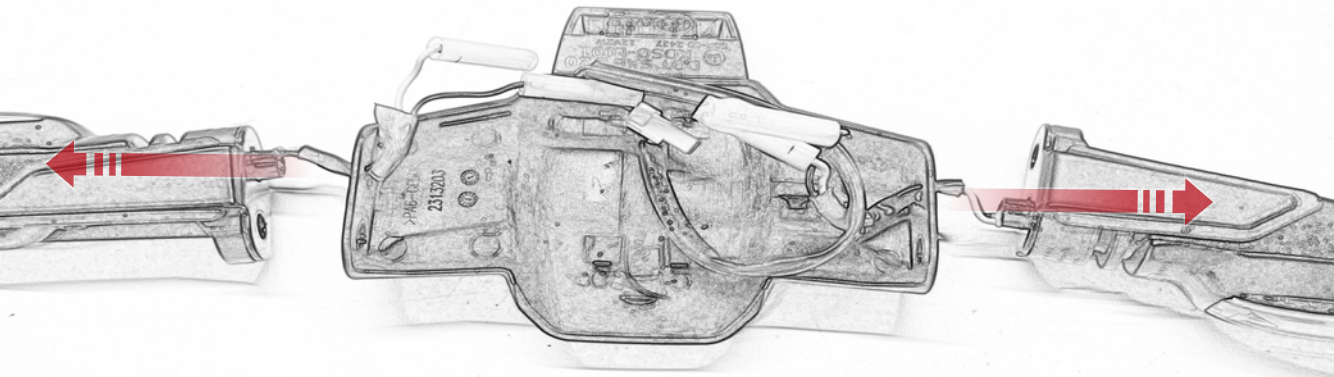


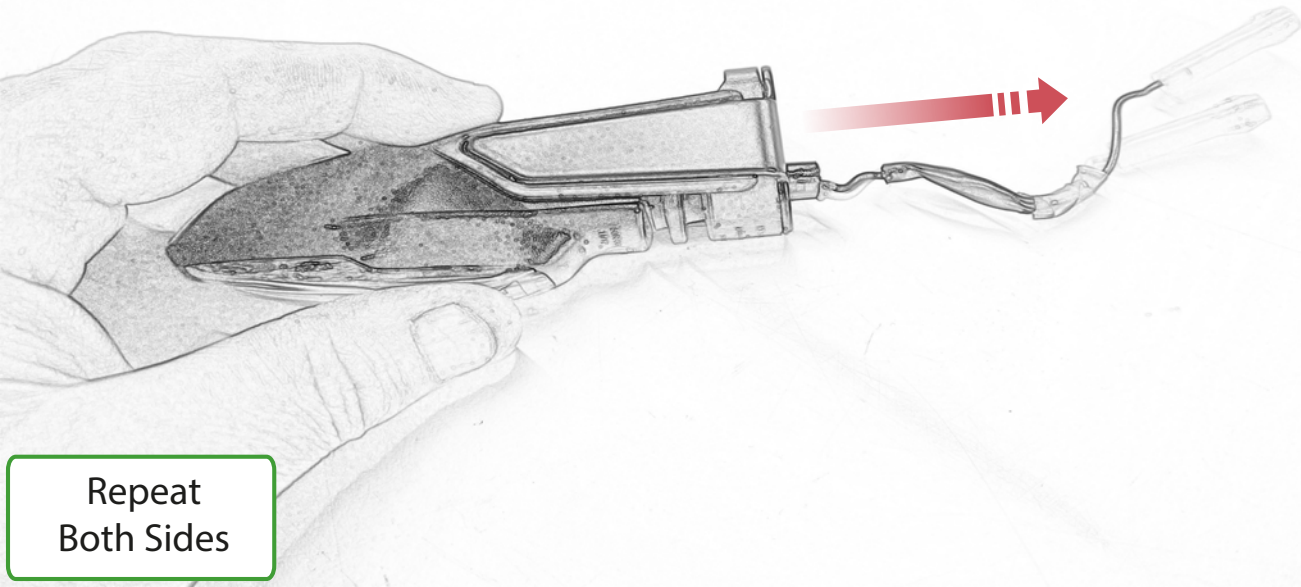



Repeat
Both Sides

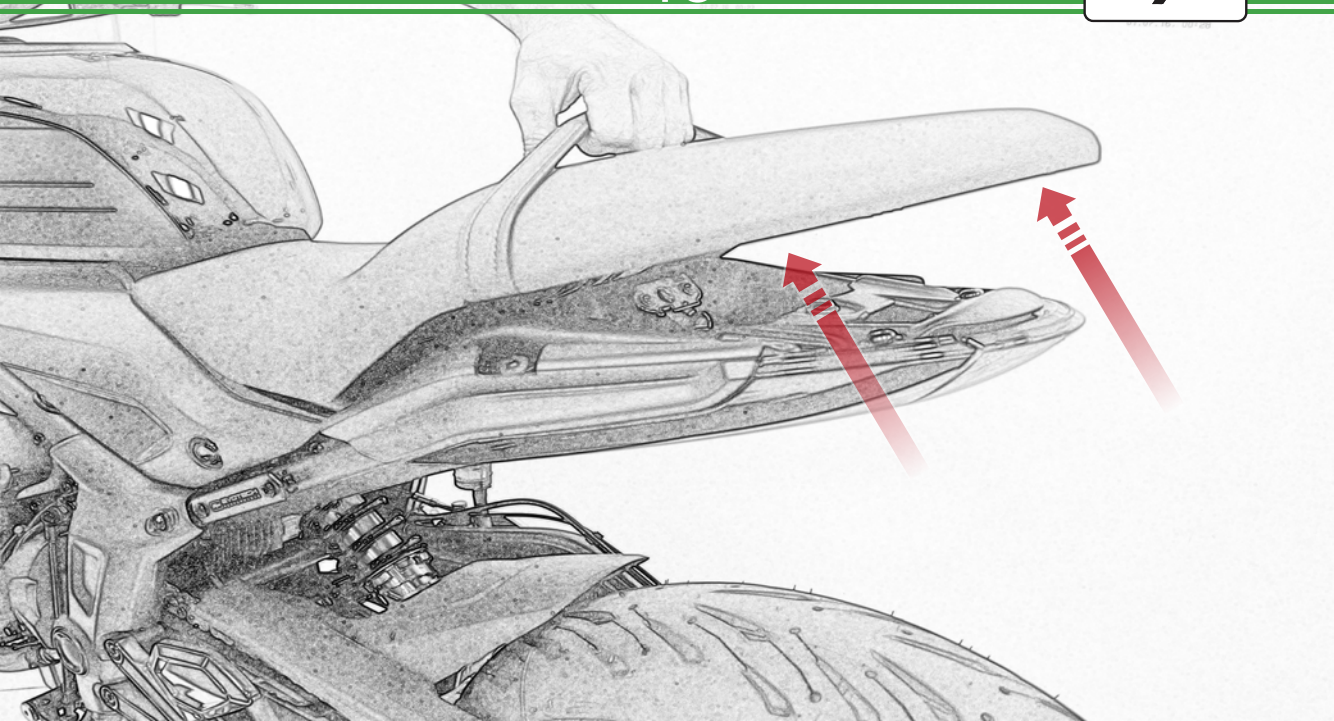


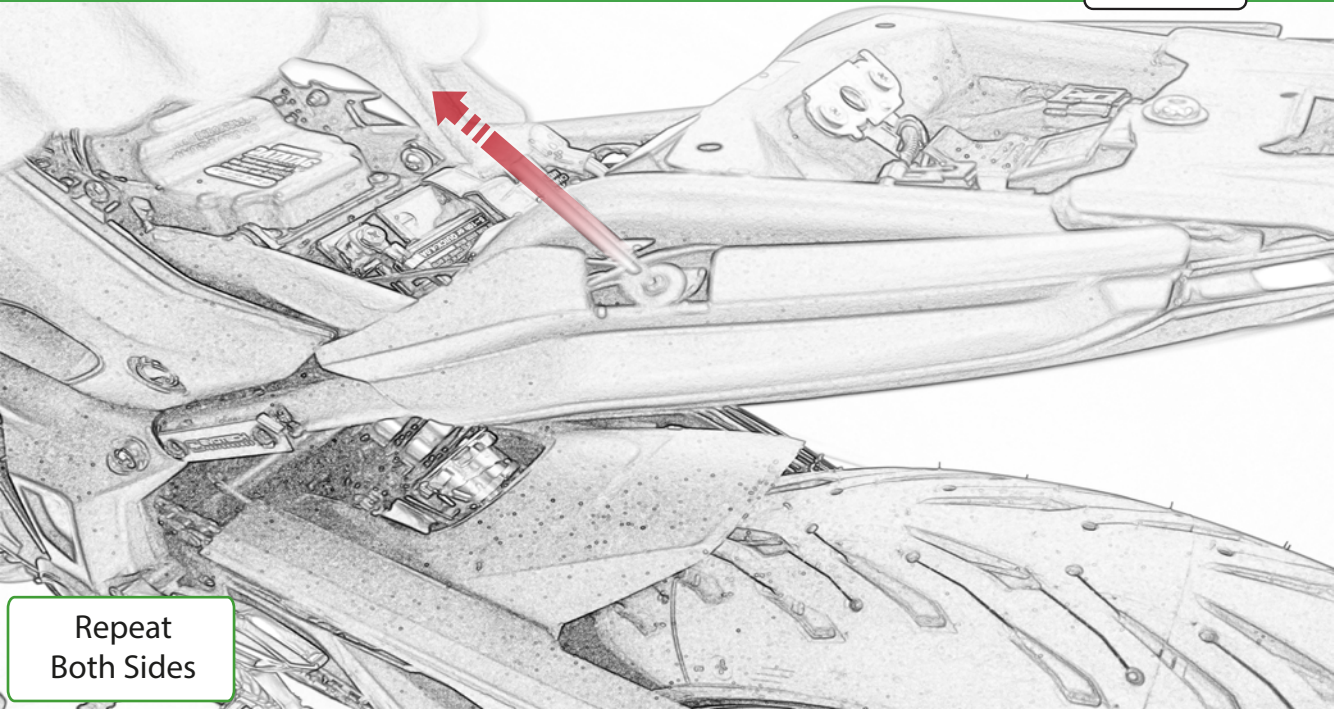


Repeat
Both Sides

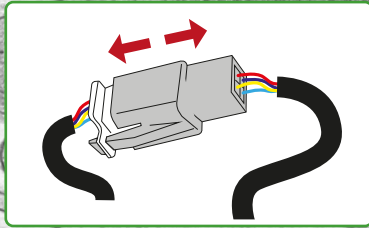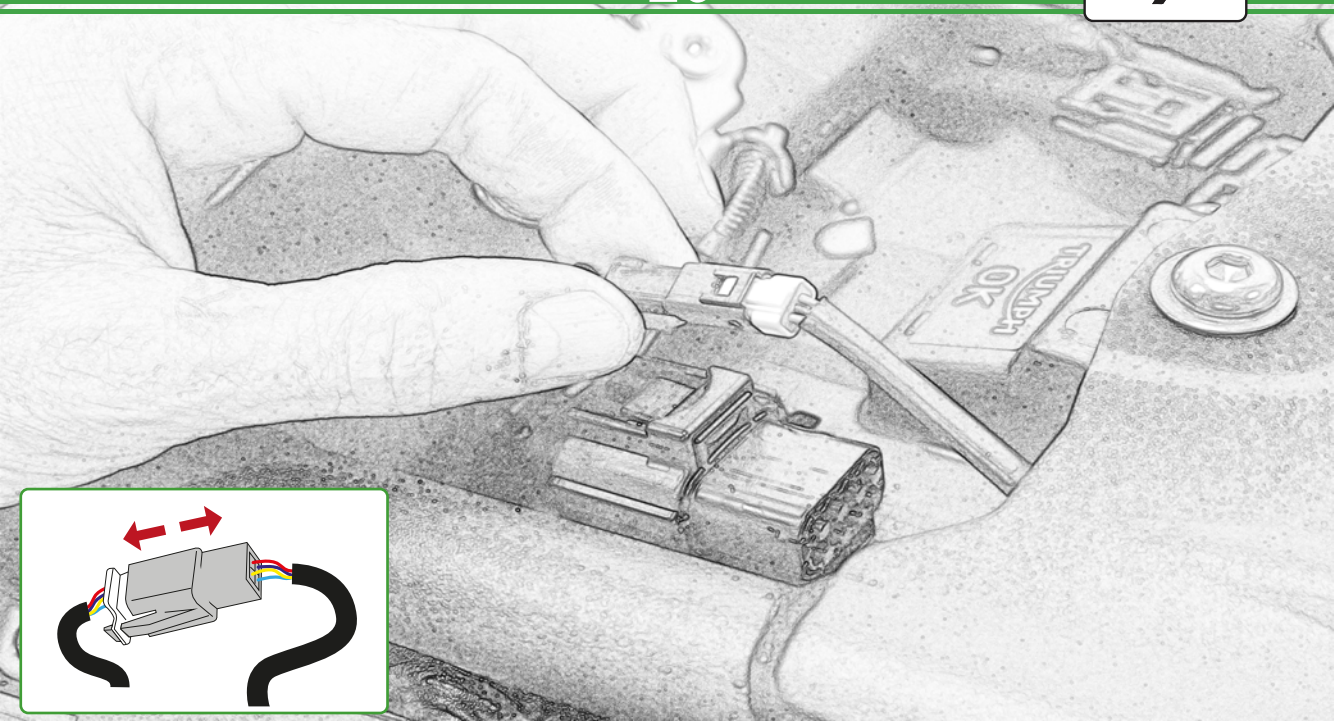

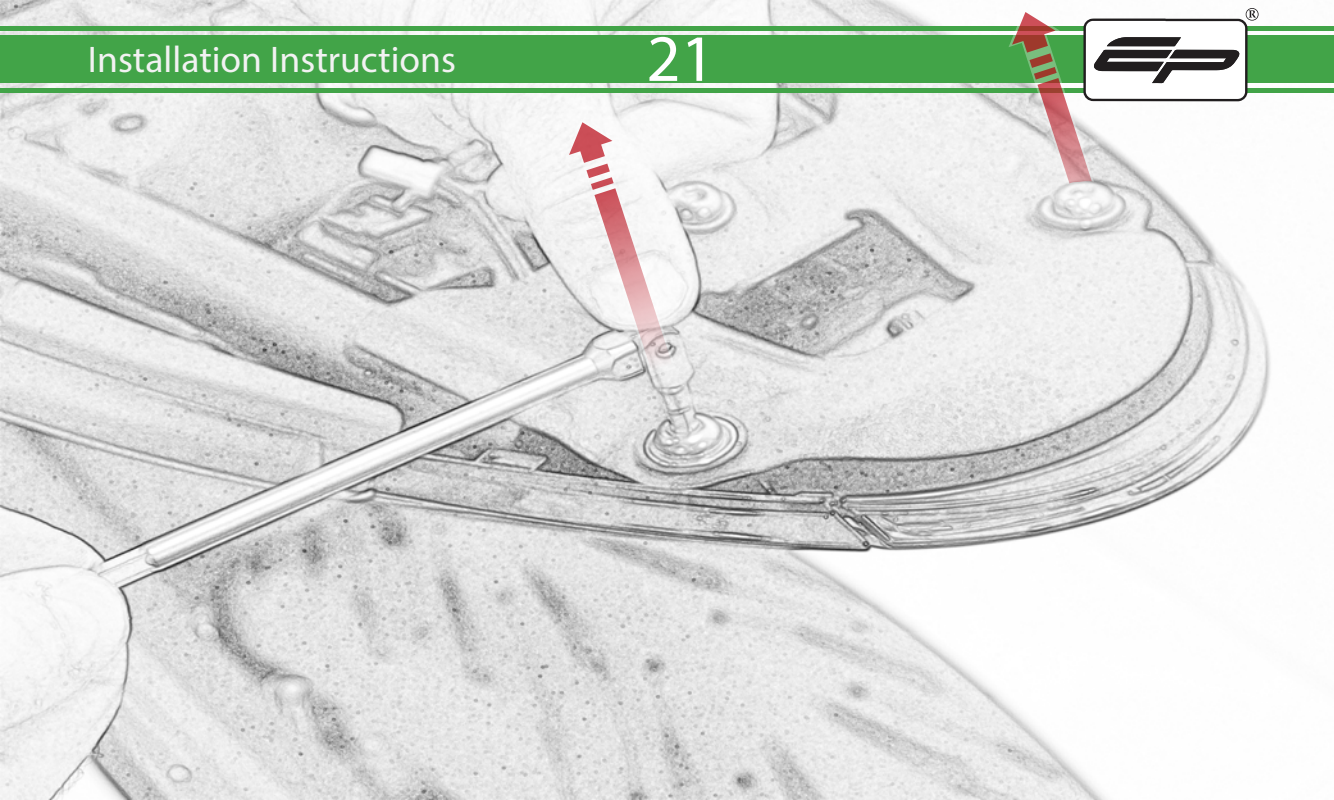


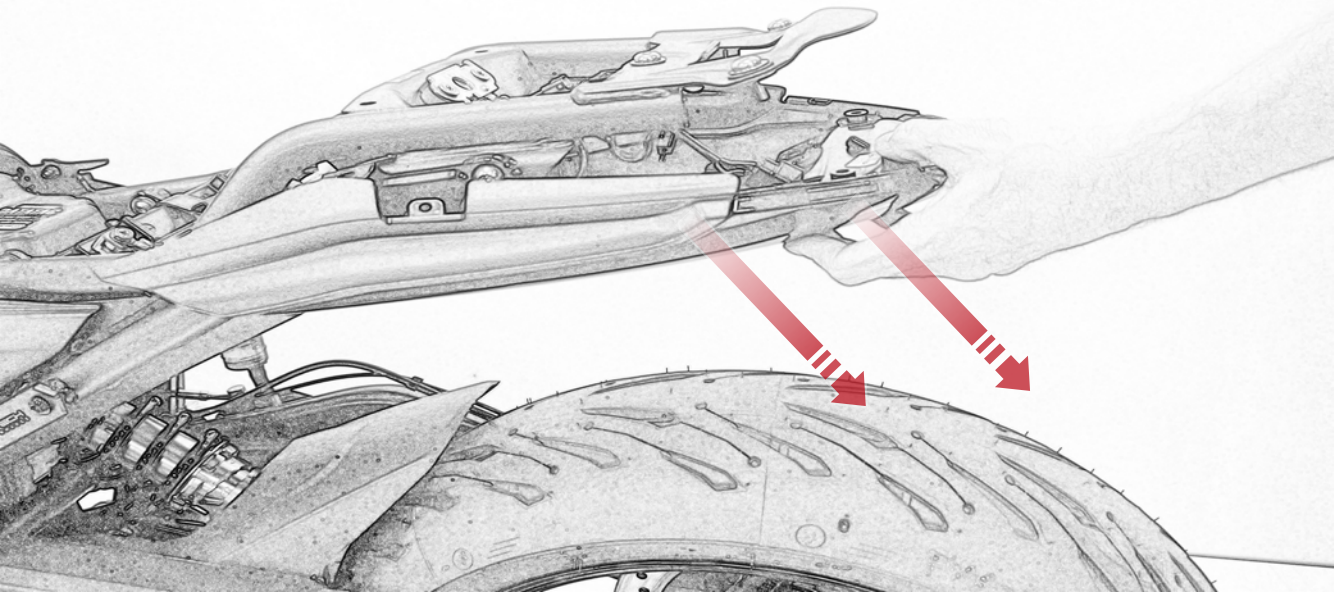


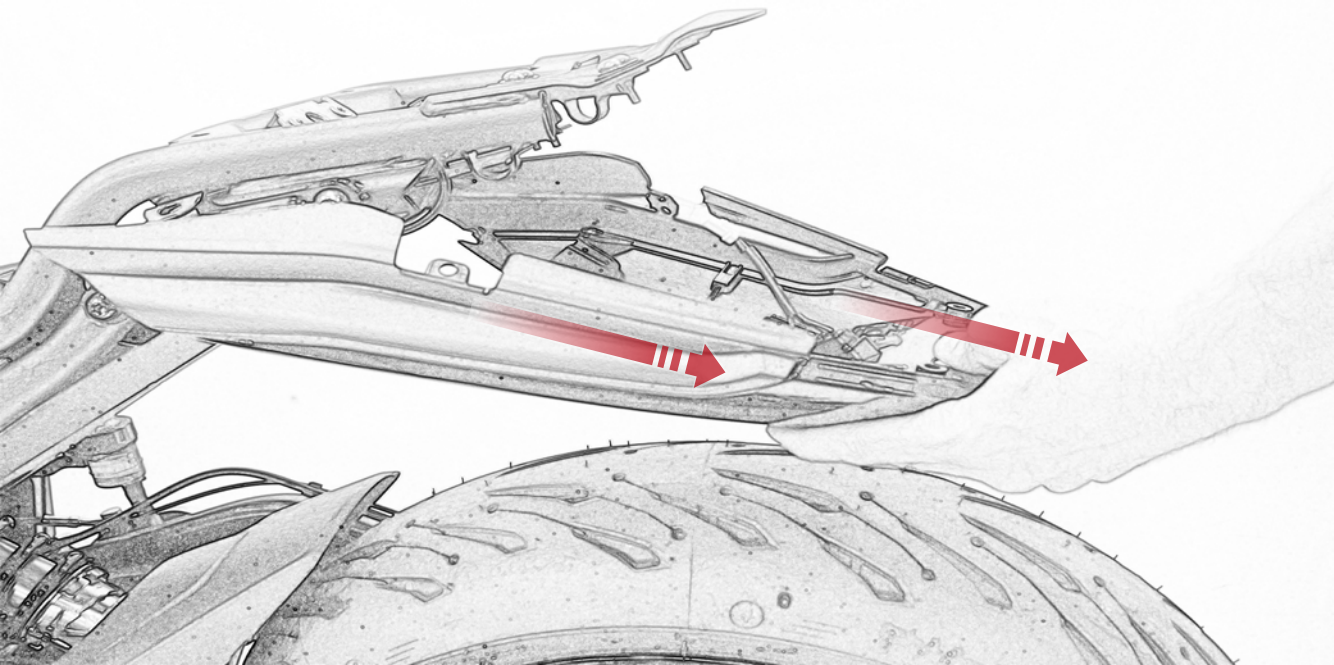




Release
Tab

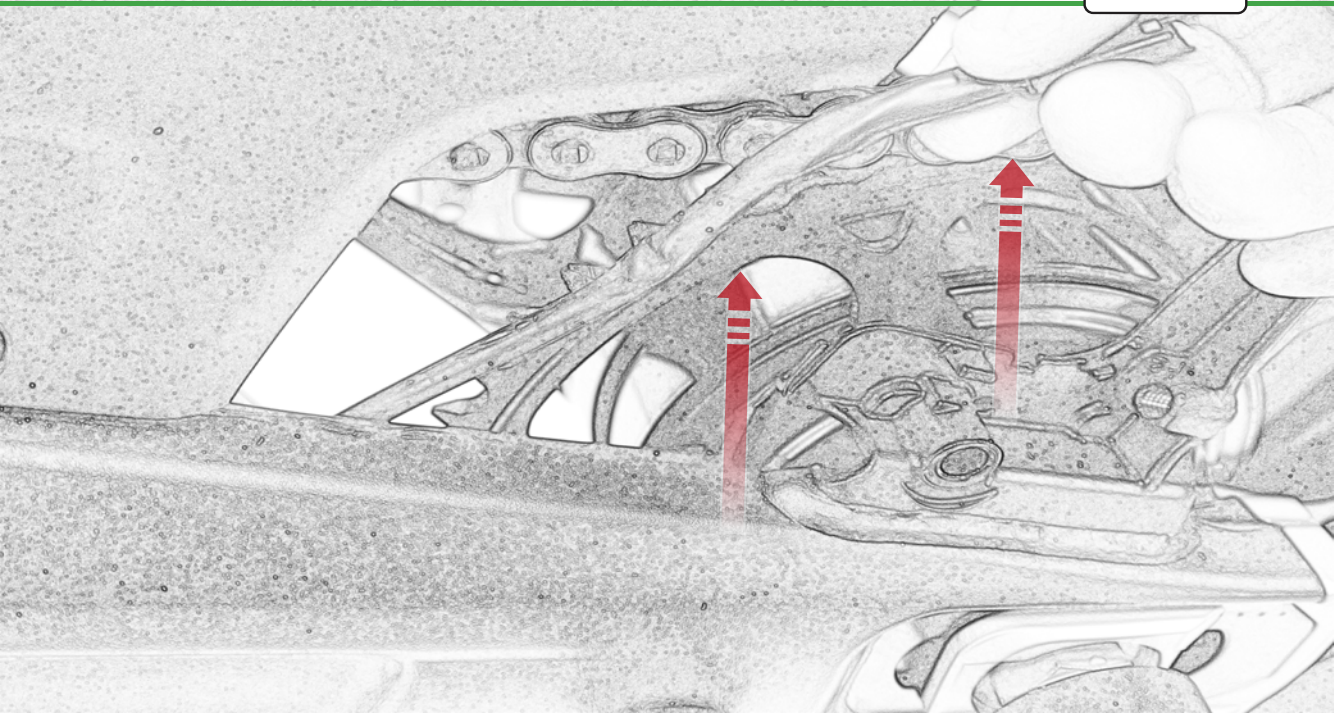


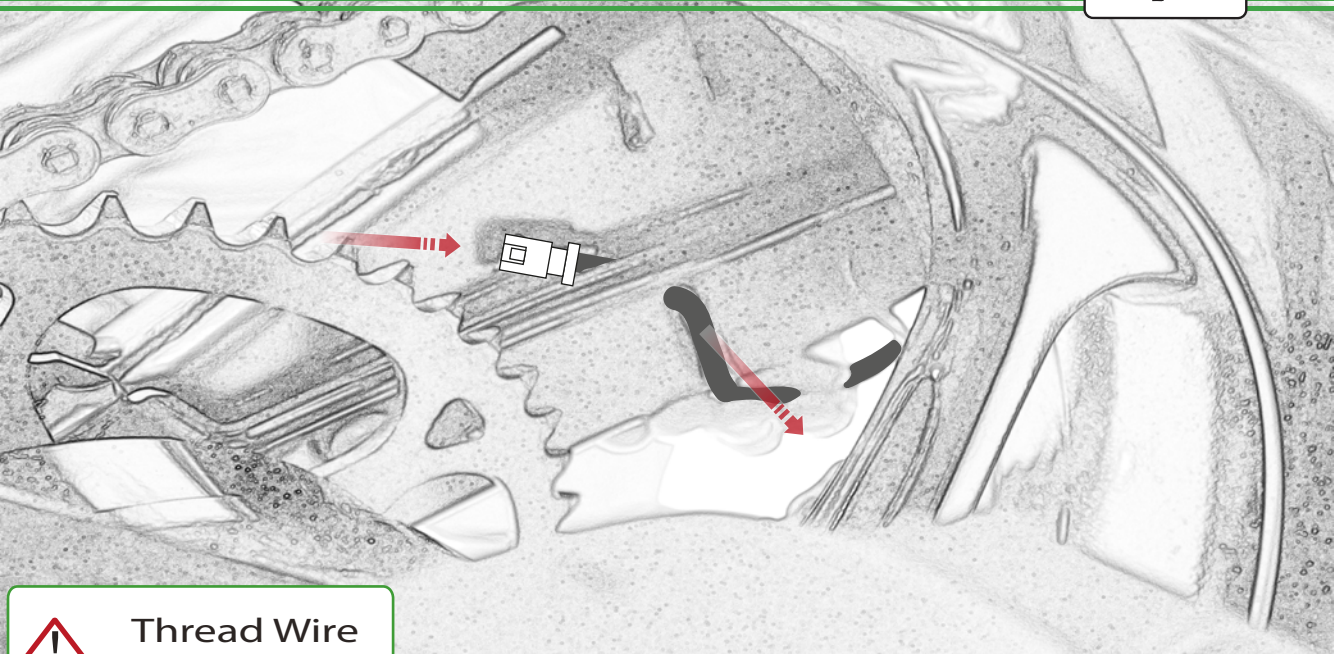



Caution


Thread Wire
Behind Cover


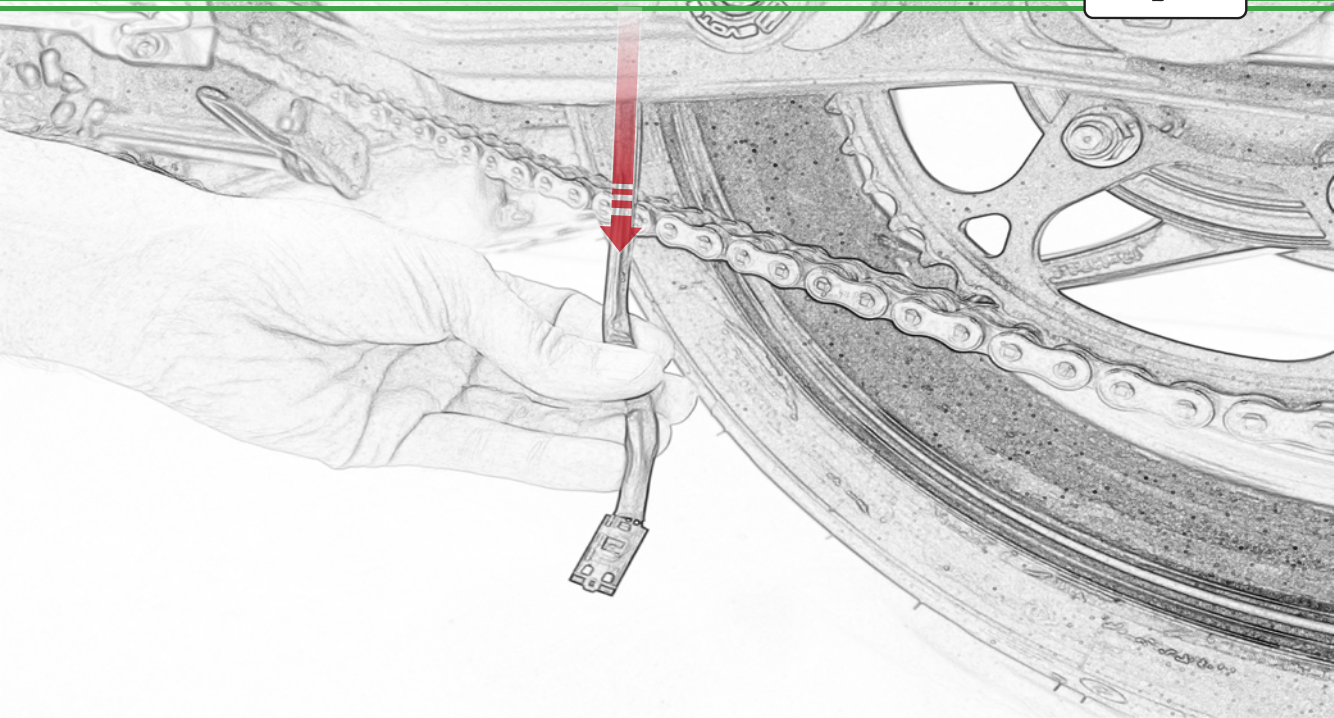



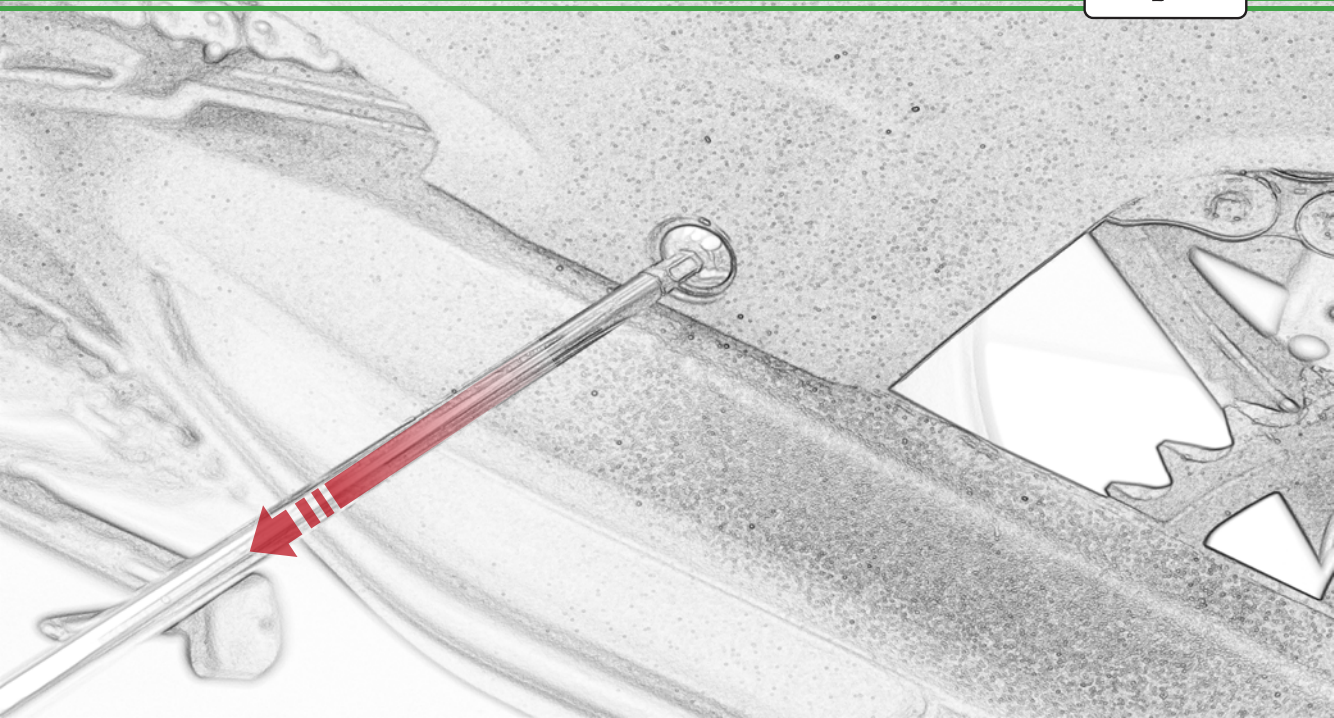



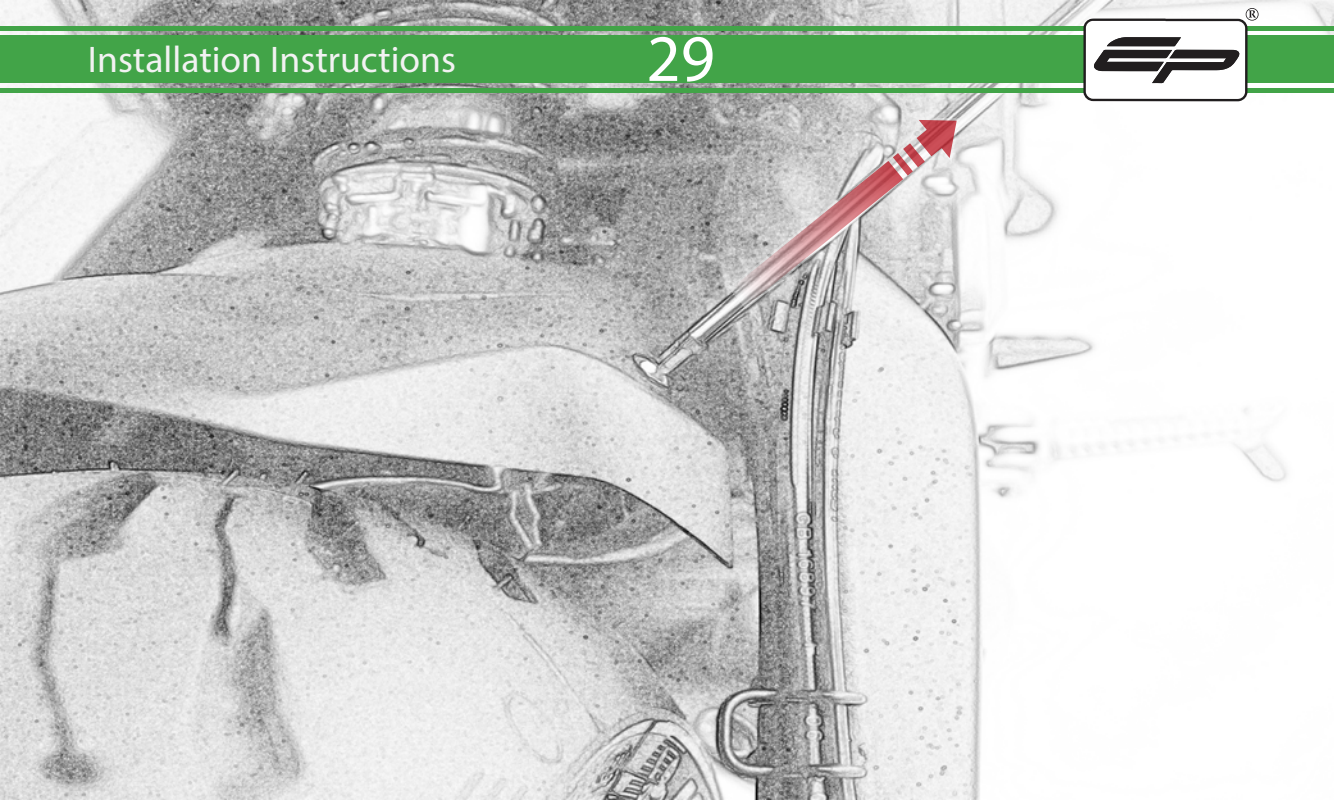


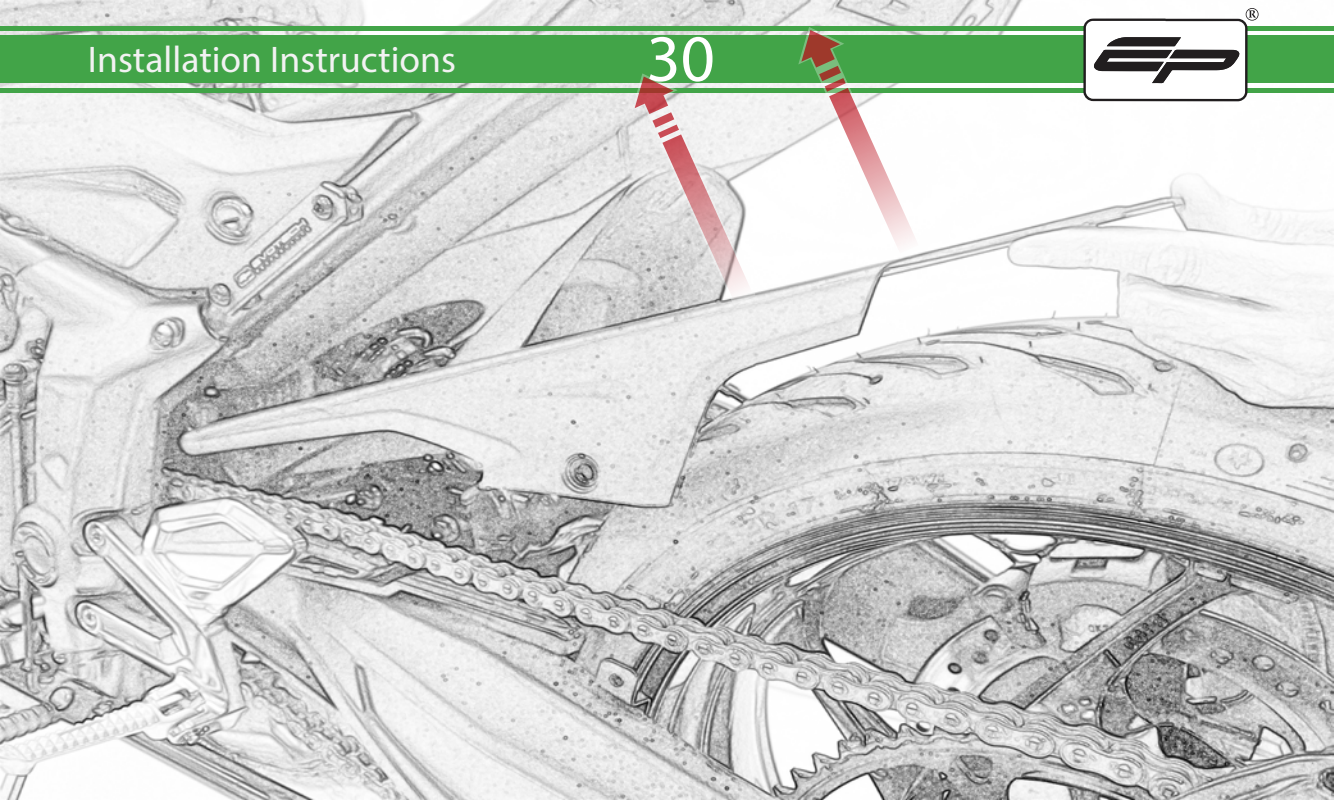


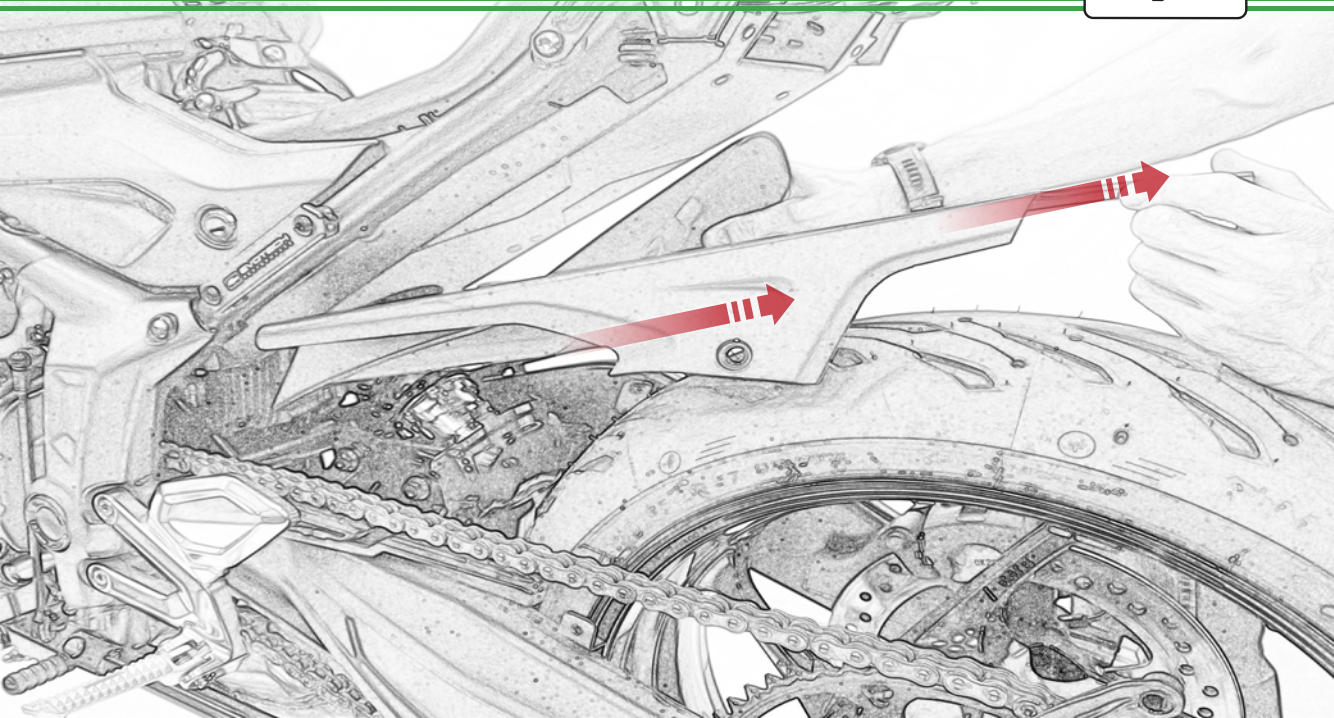

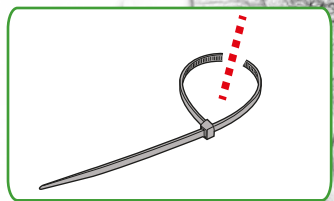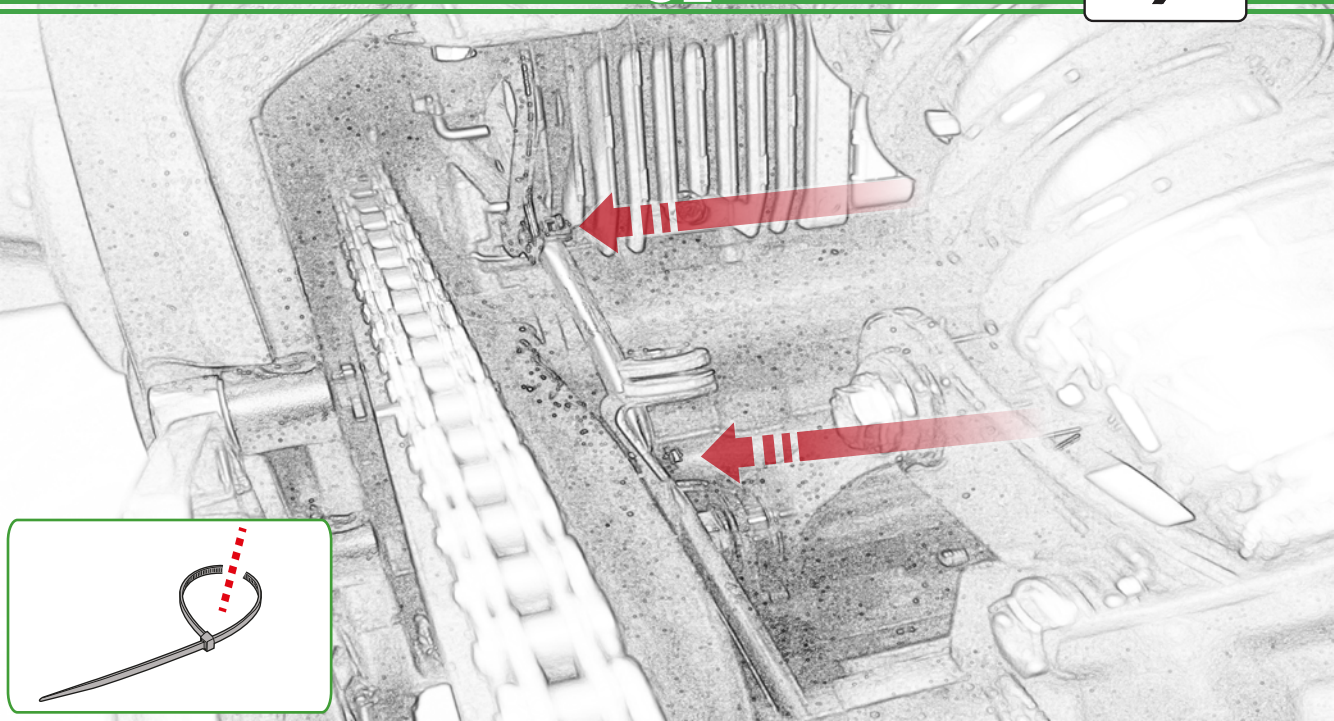


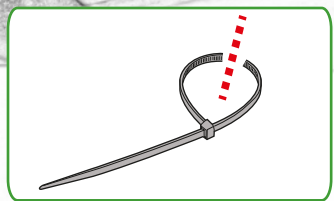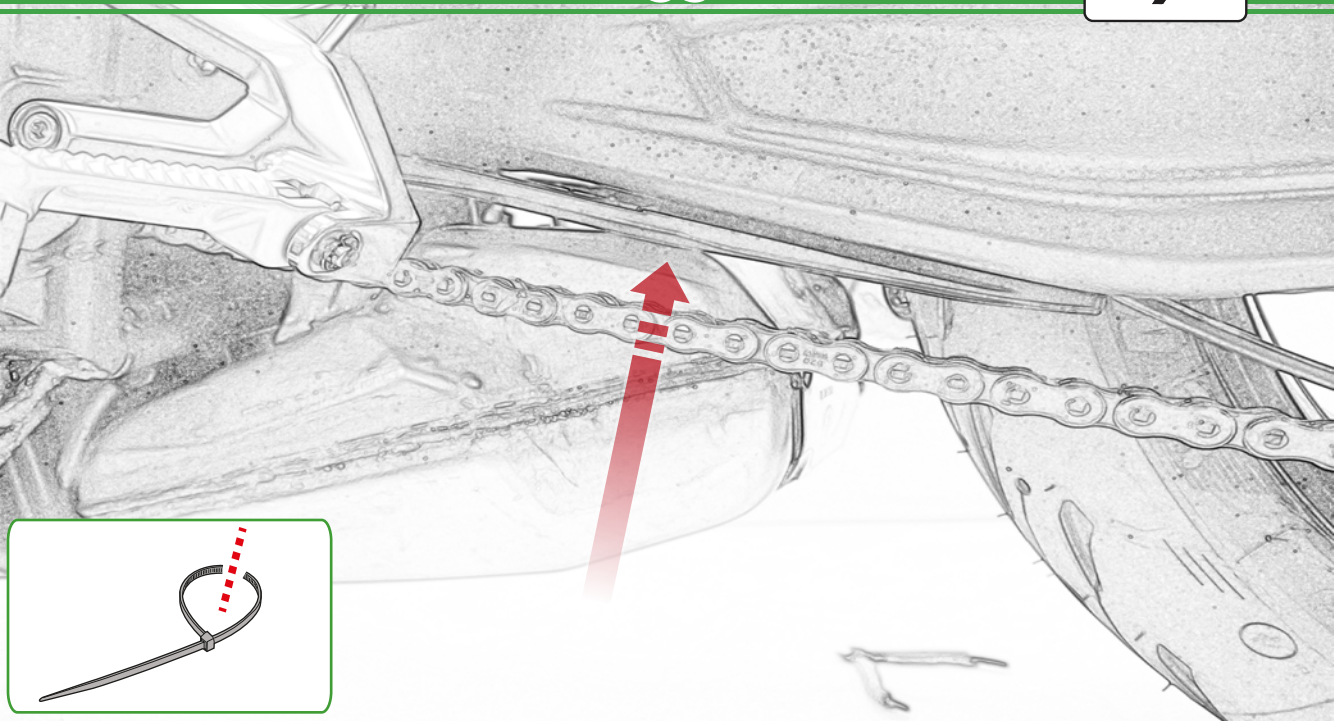


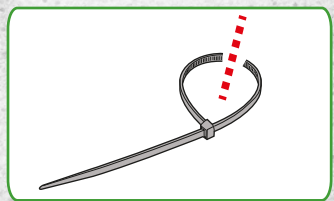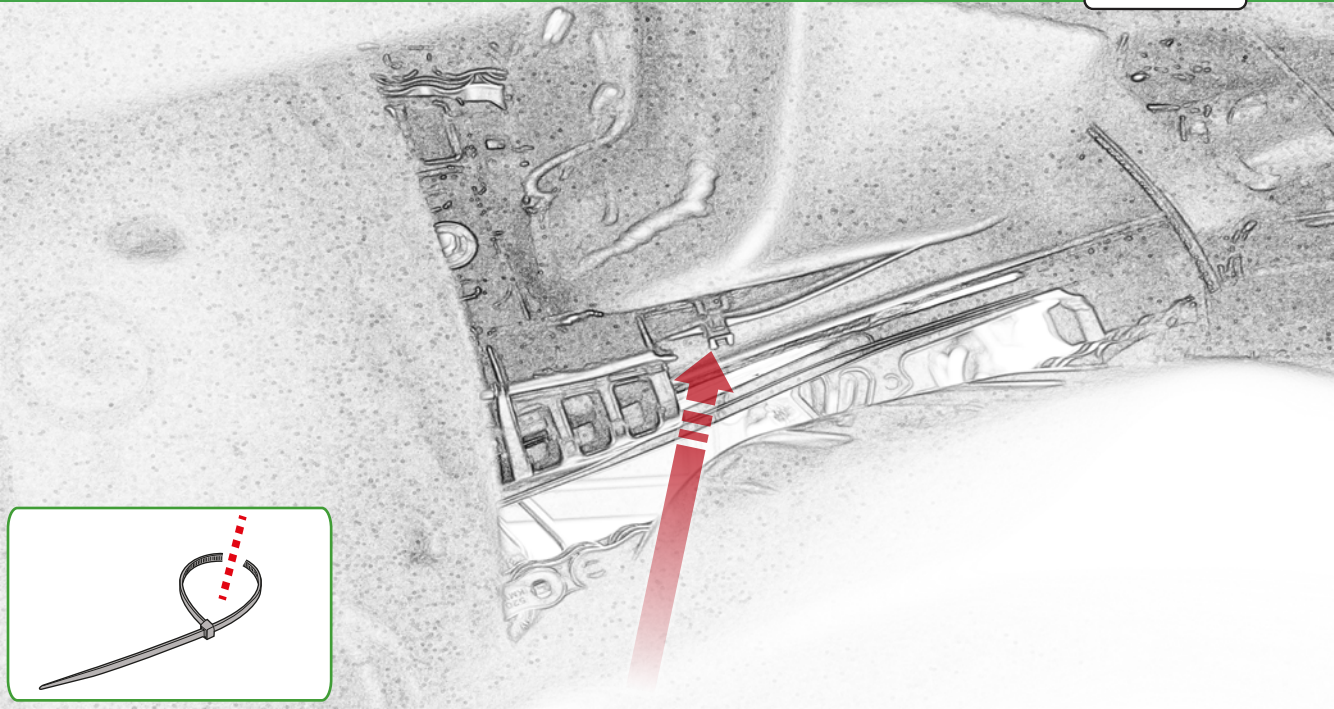


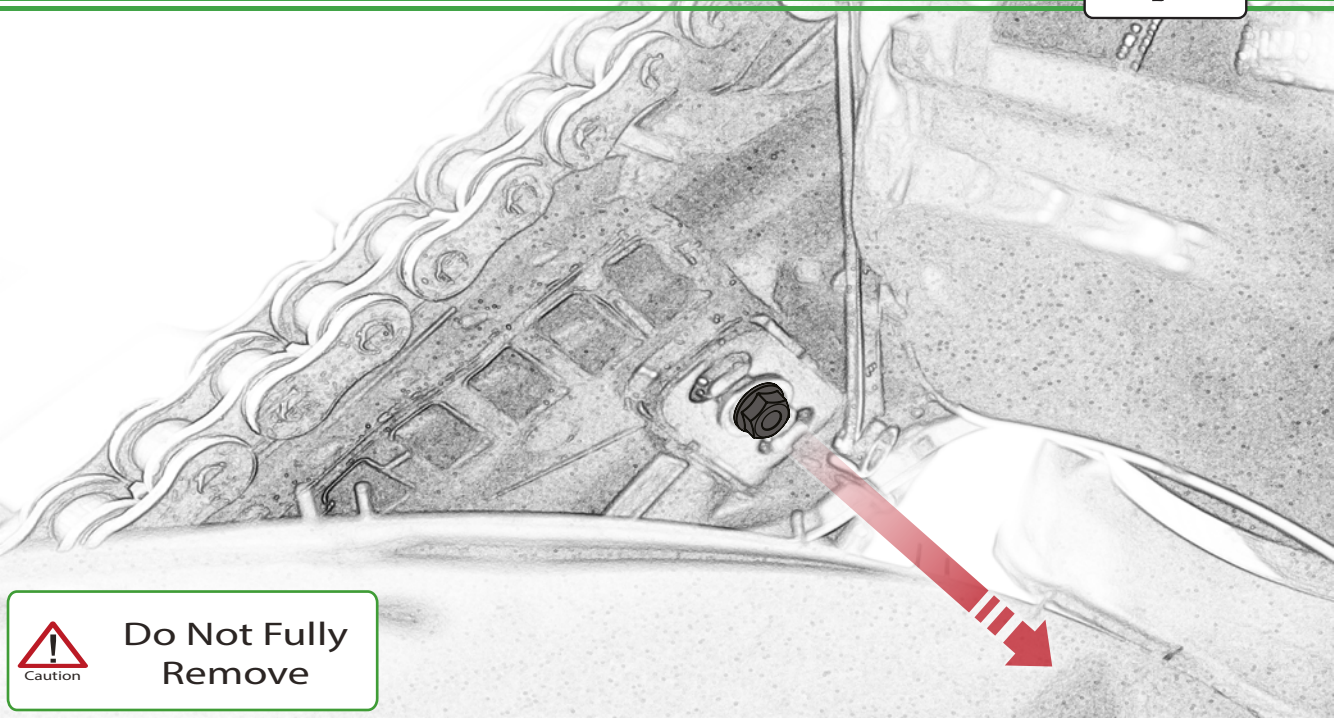

Do Not Fully
Remove

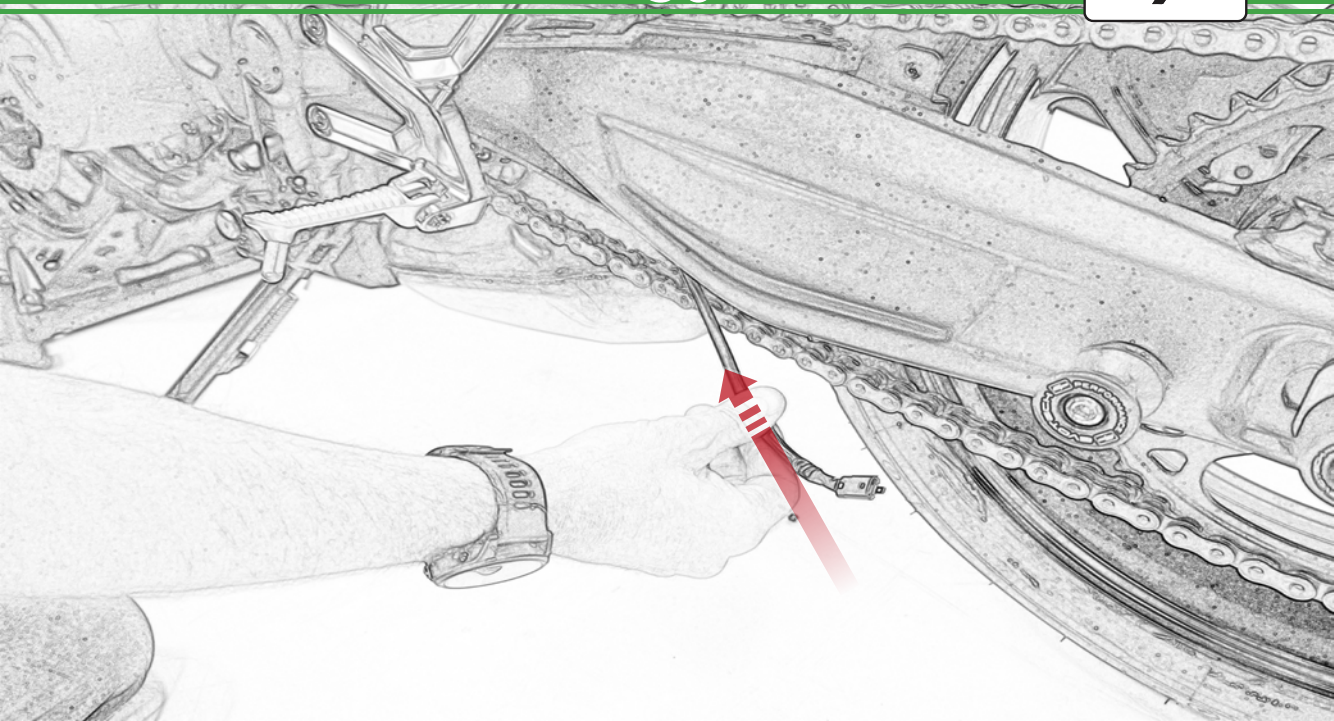


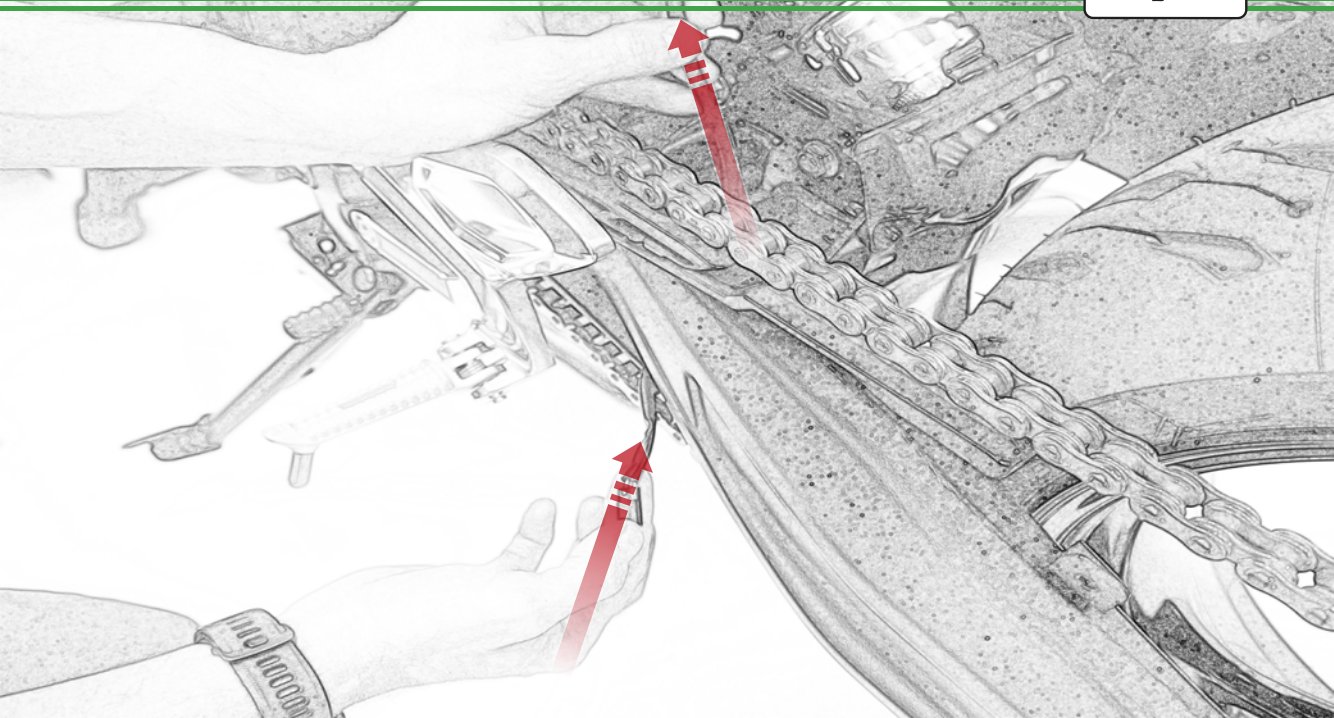

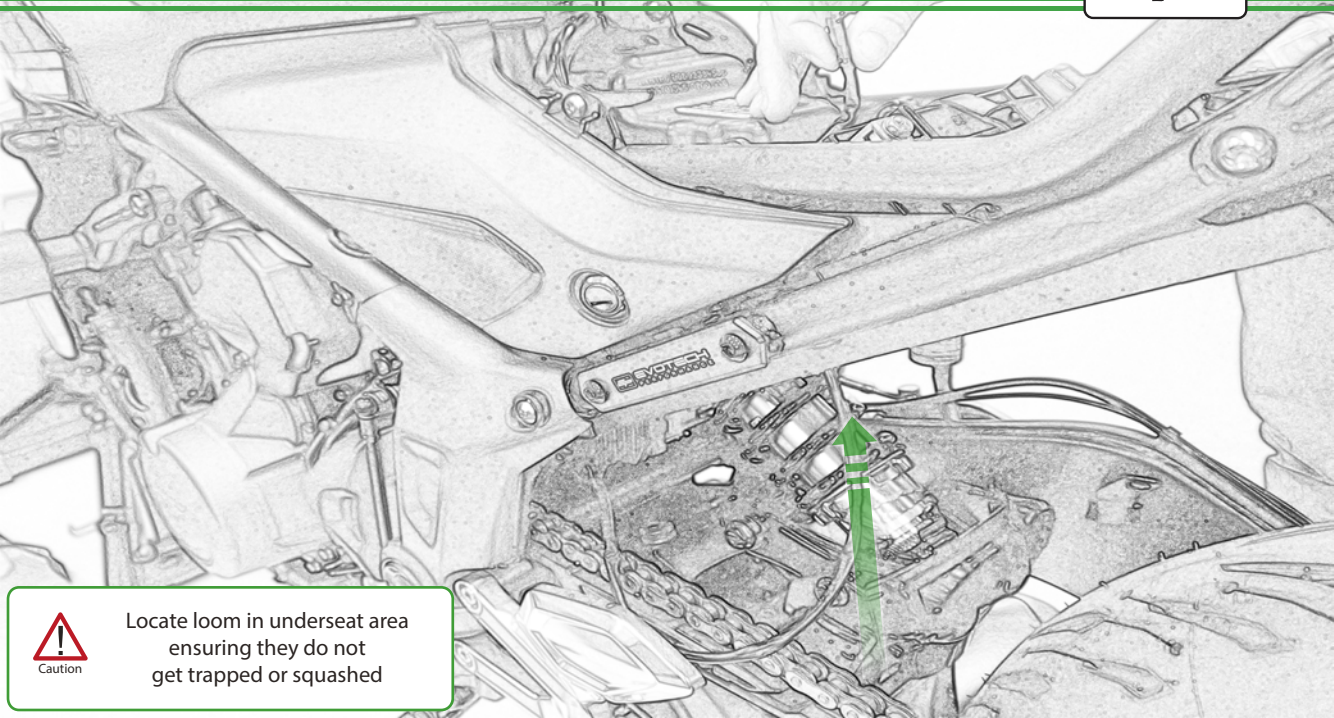

Caution


Locate loom in underseat area
ensuring they do not
get trapped or squashed

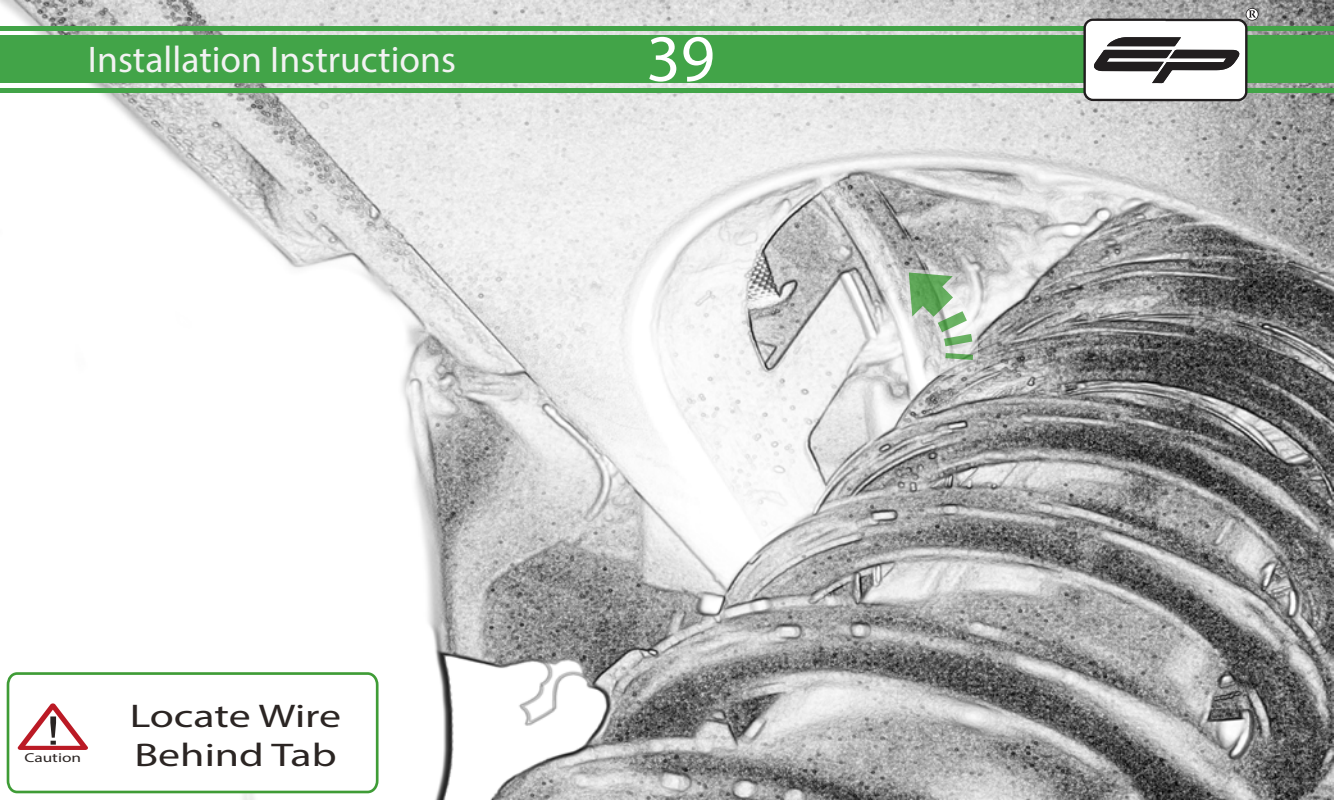

Caution




Locate Wire
Behind Tab




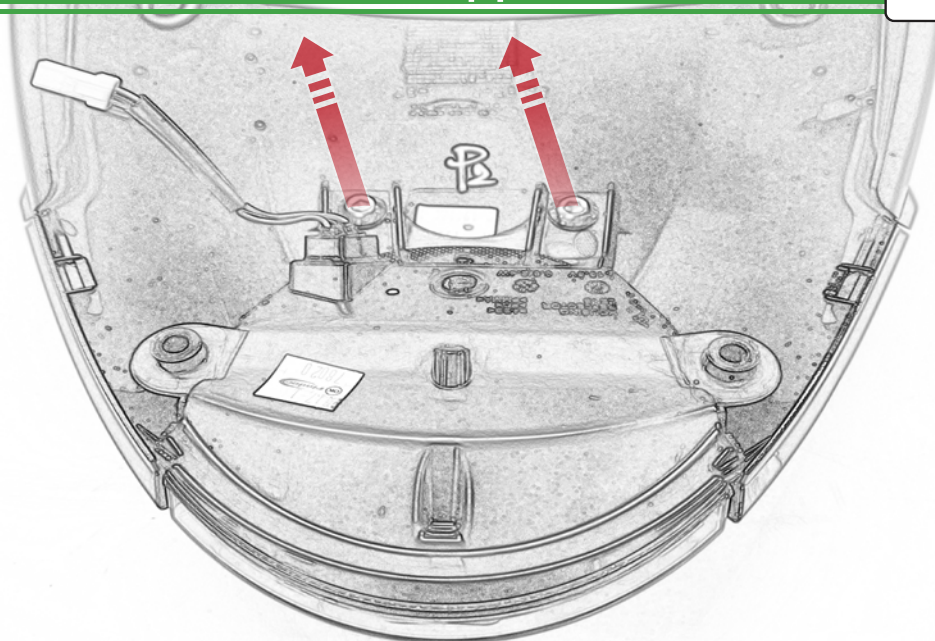




A

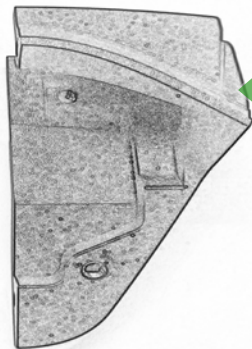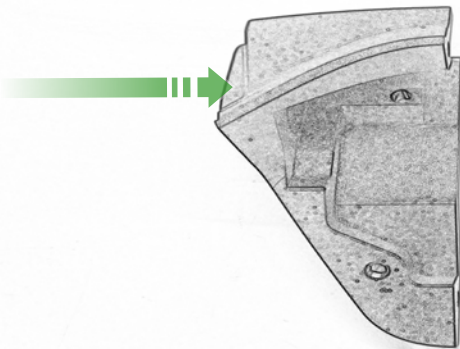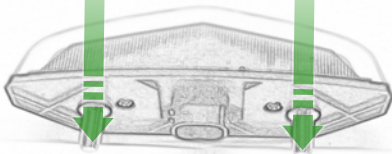


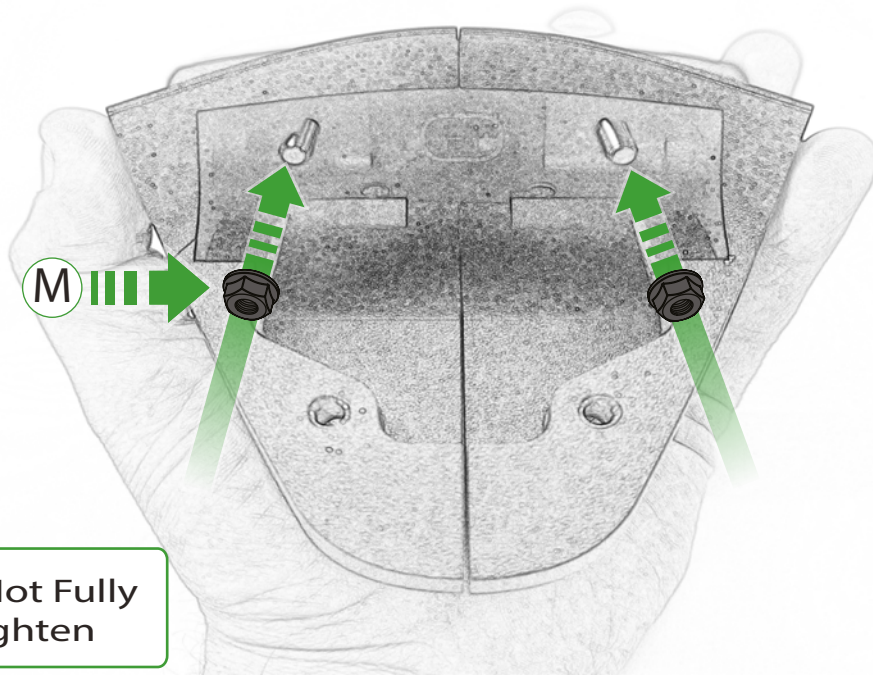

Caution


Do Not Fully Tighten

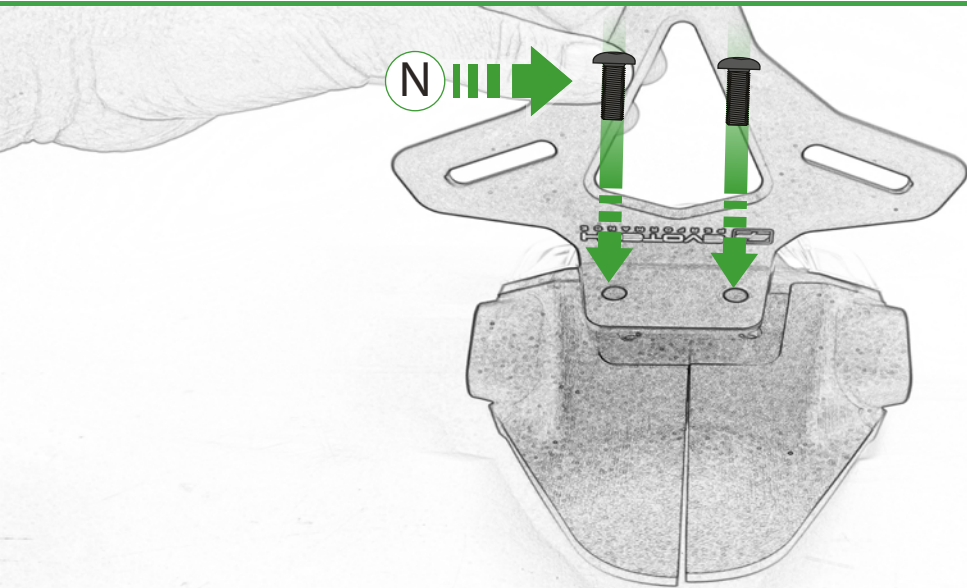

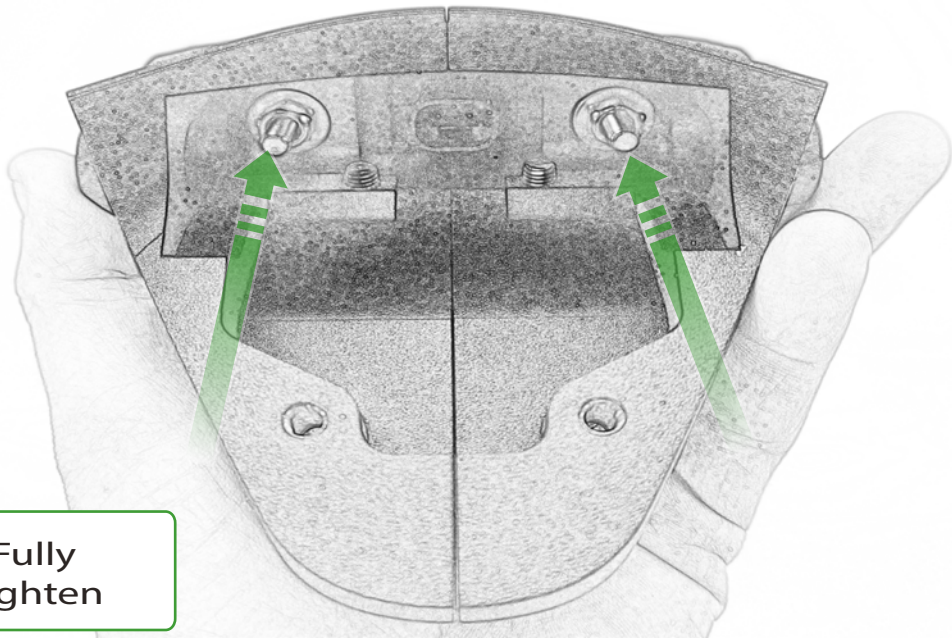


Caution

Fully
Tighten

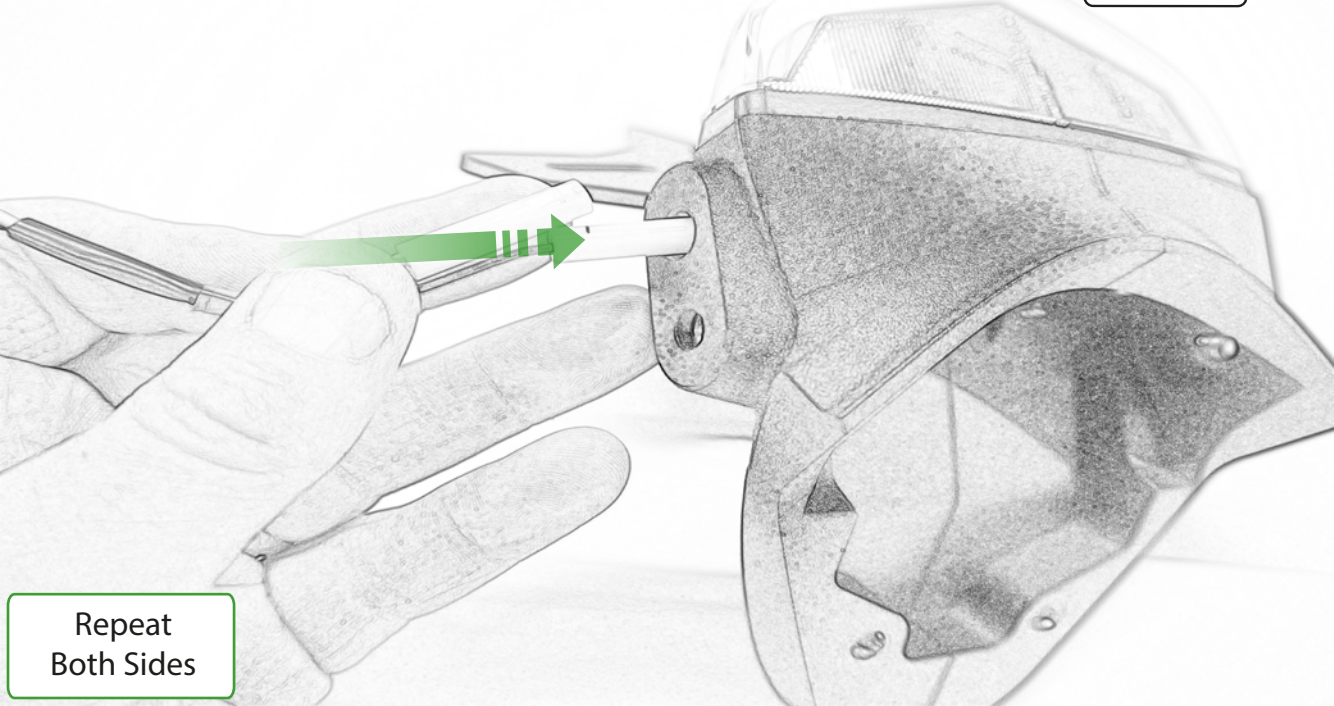


Repeat
Both Sides

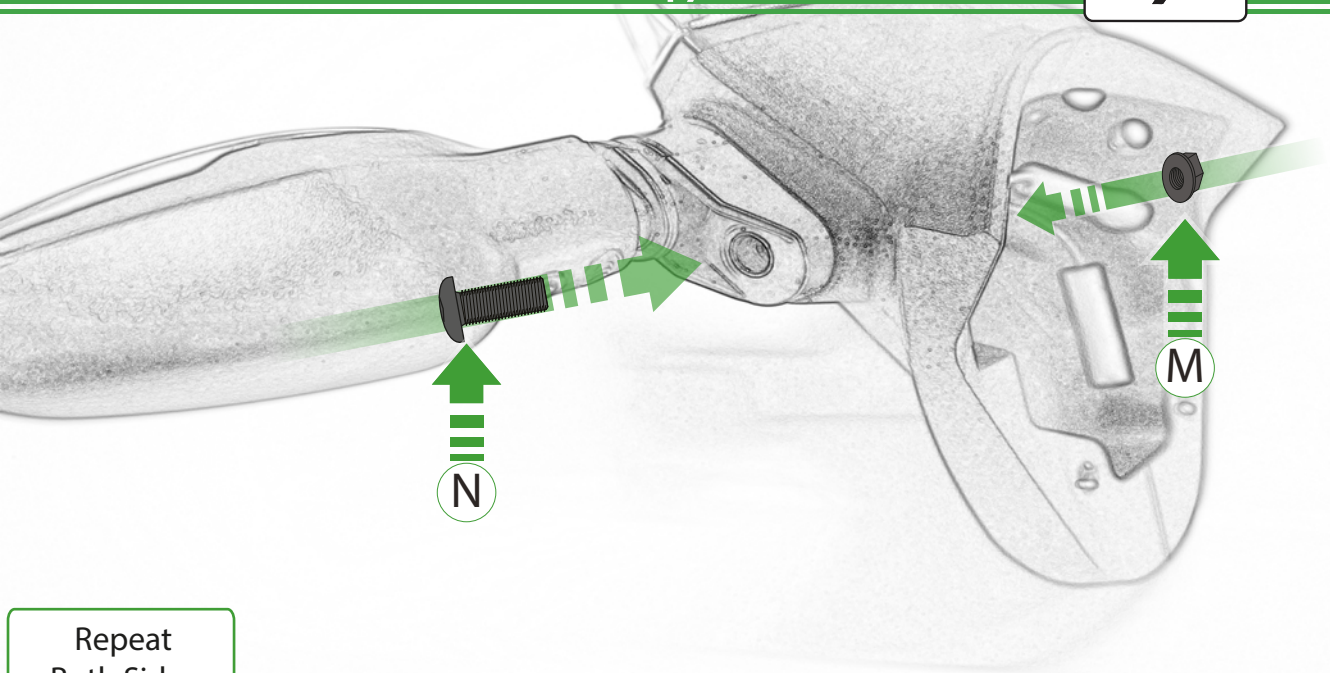

N



M


Repeat
Both Sides

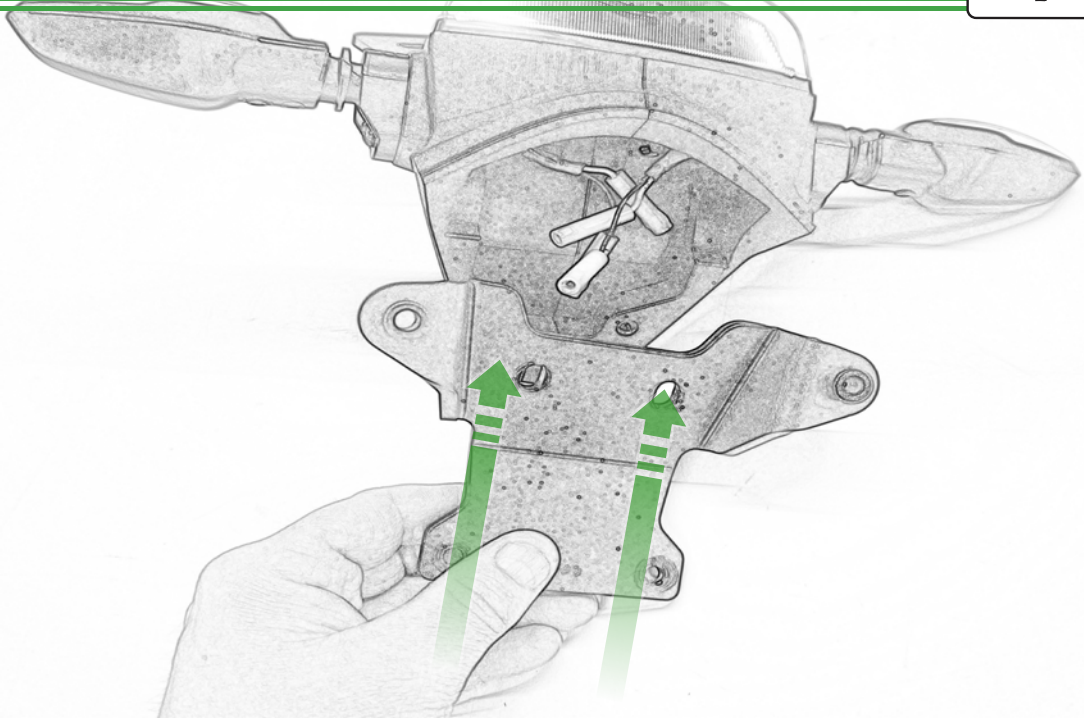






N

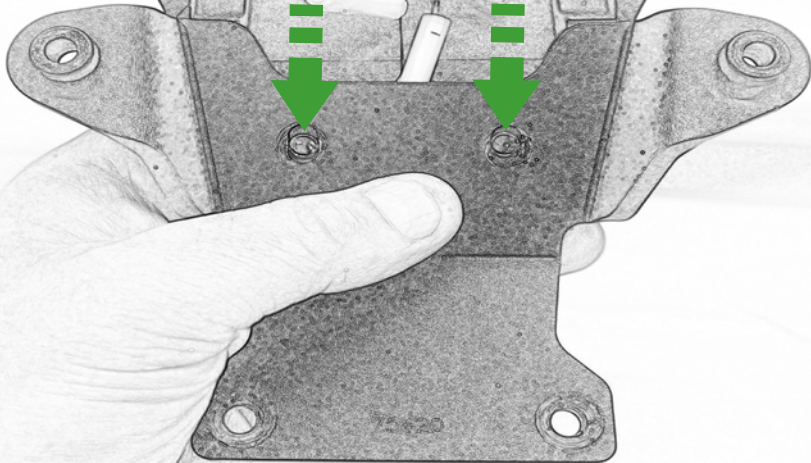
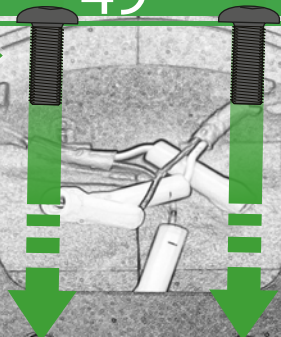


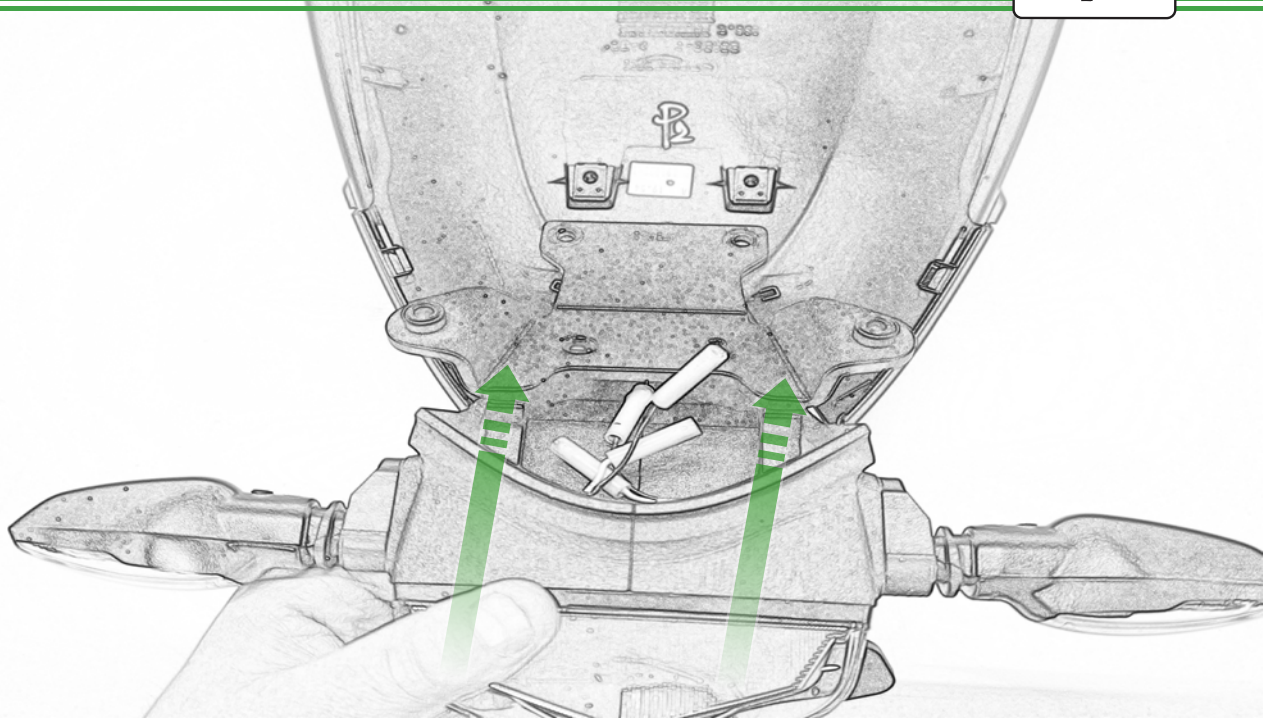




N

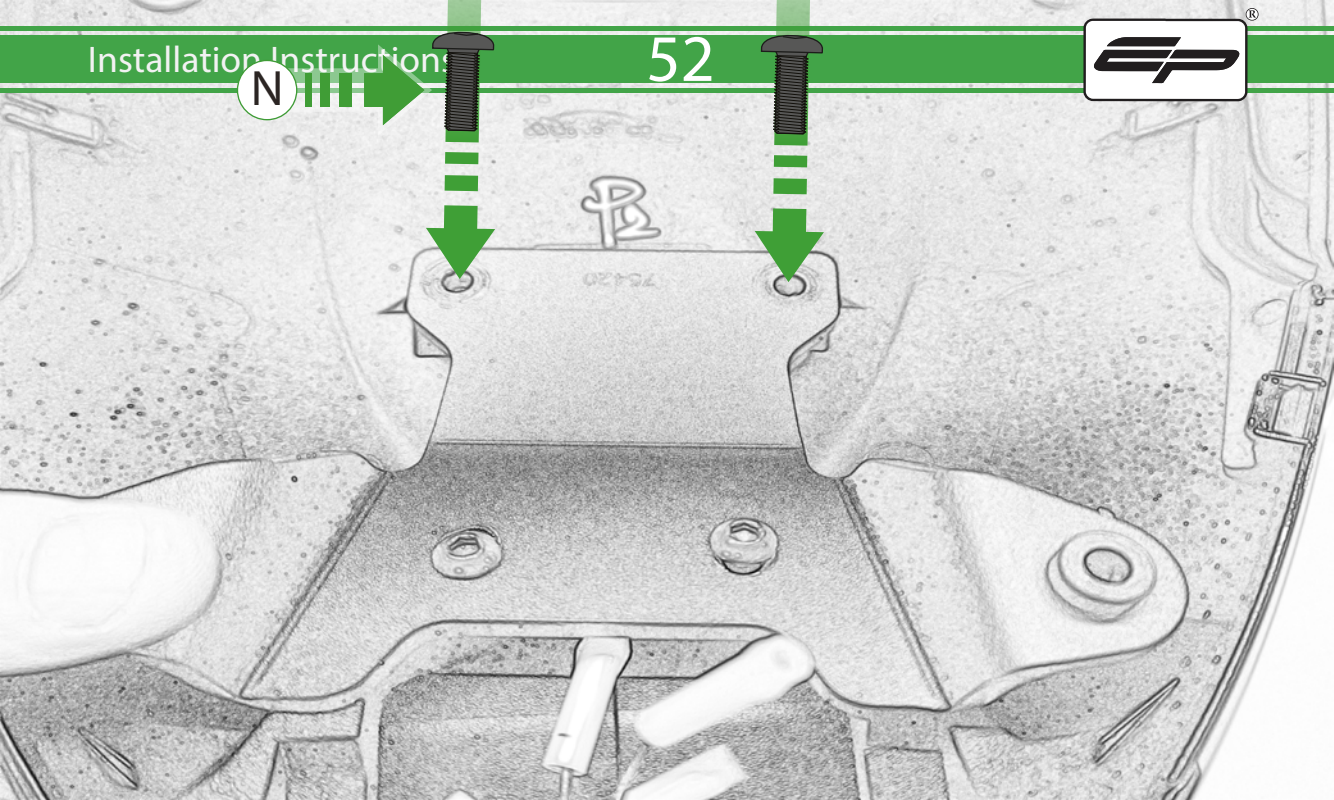


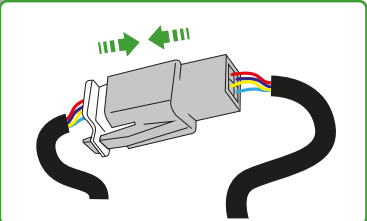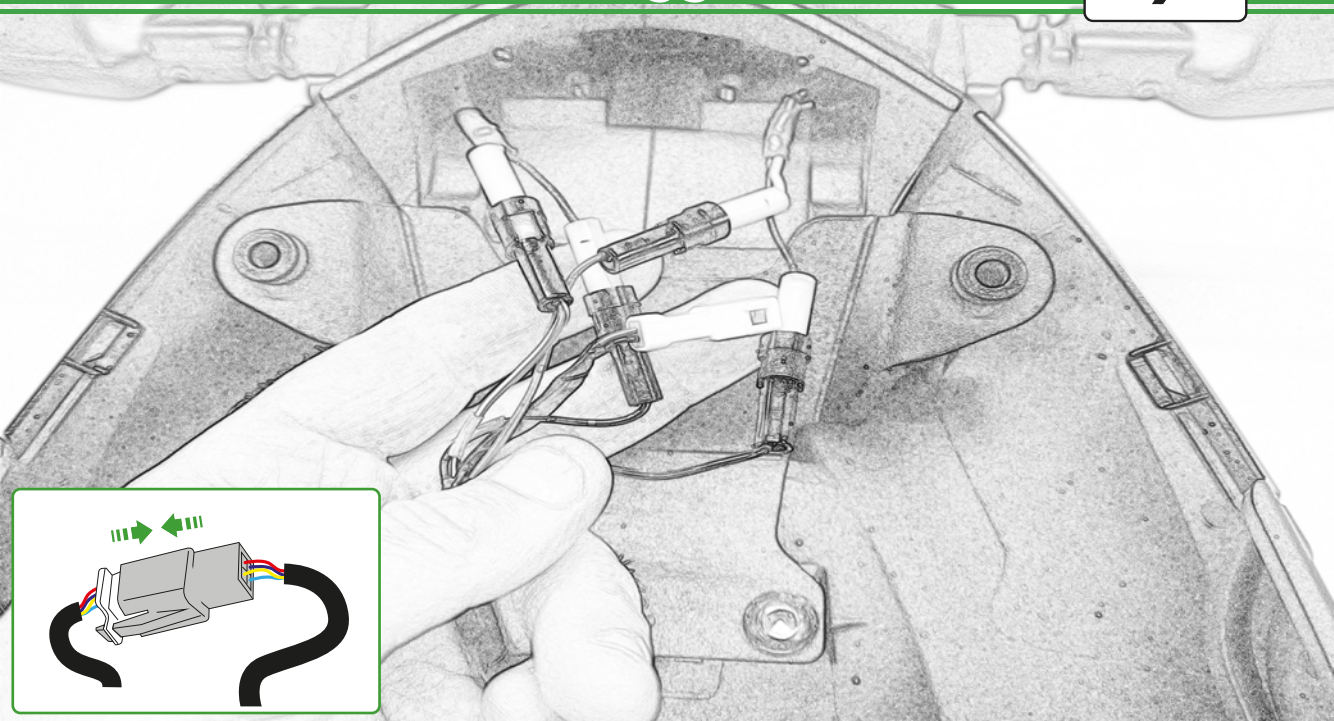

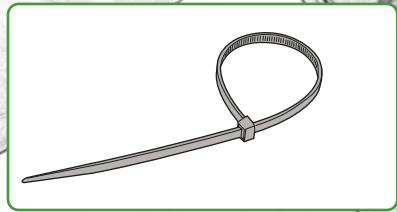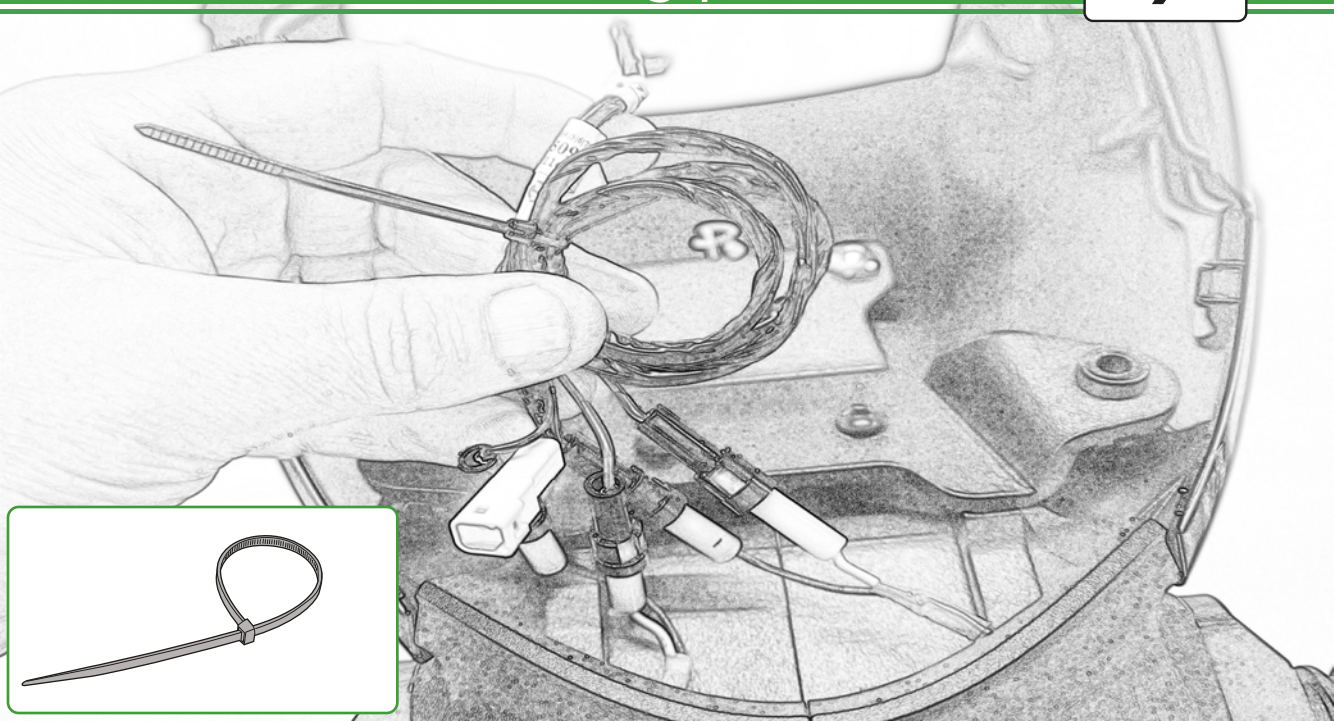

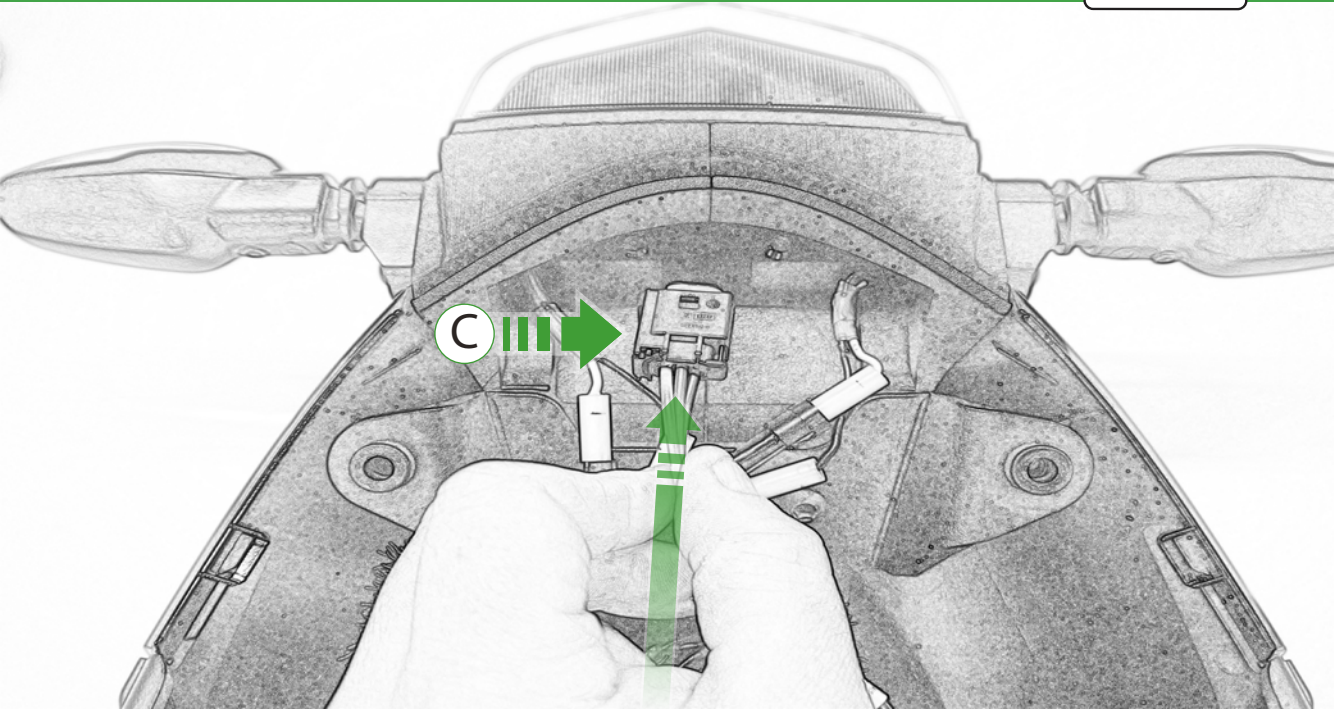


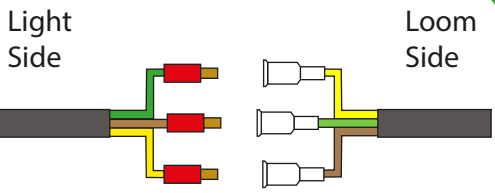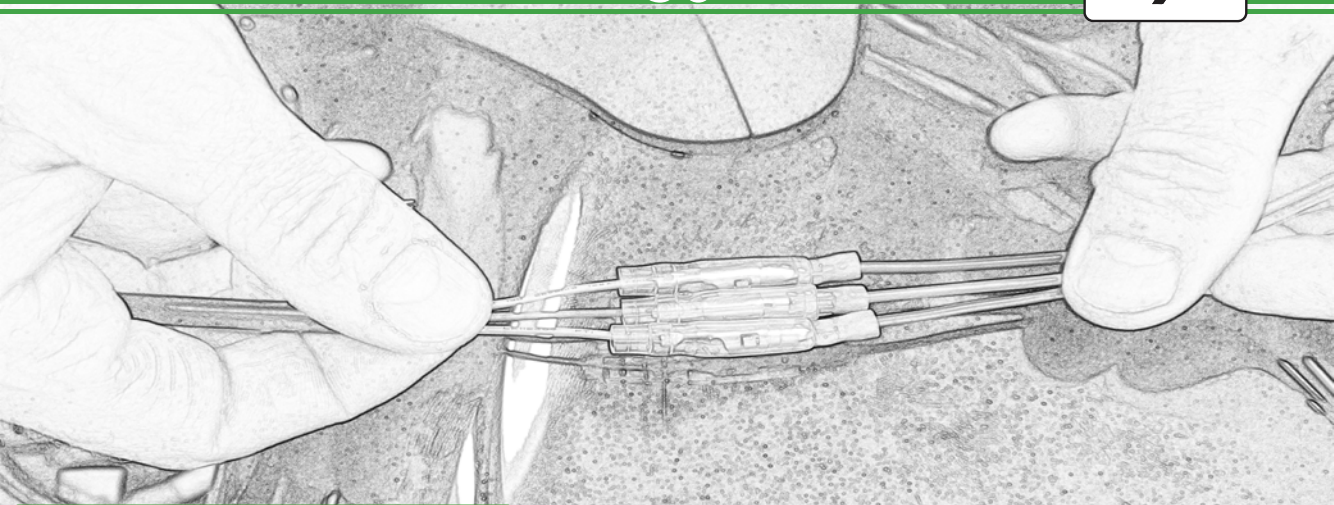


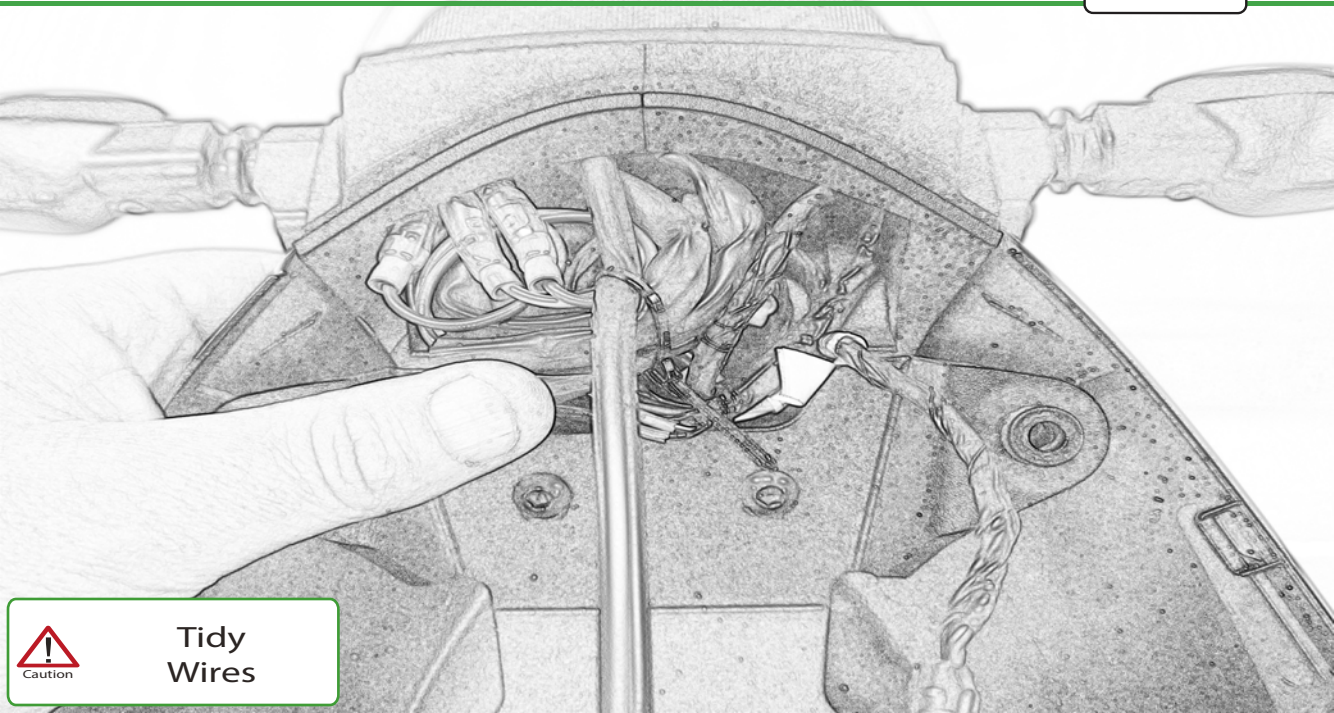



Caution

Tidy
Wires

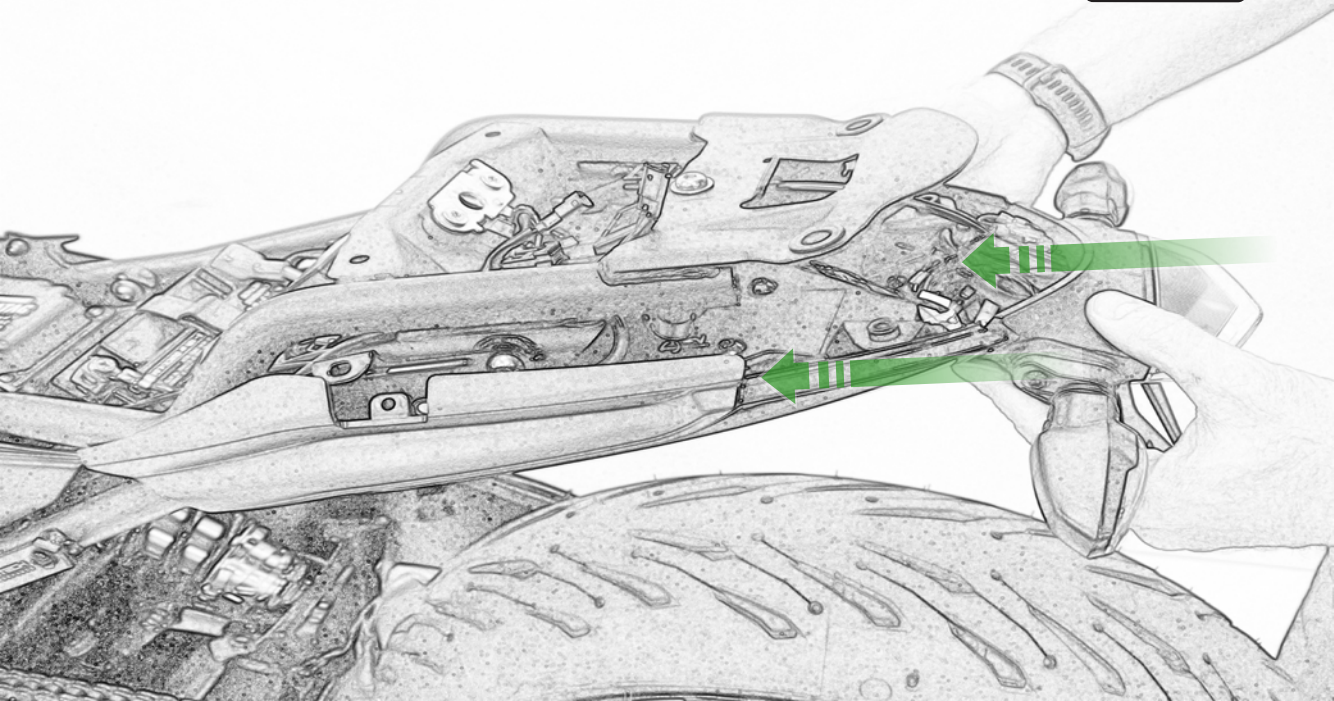


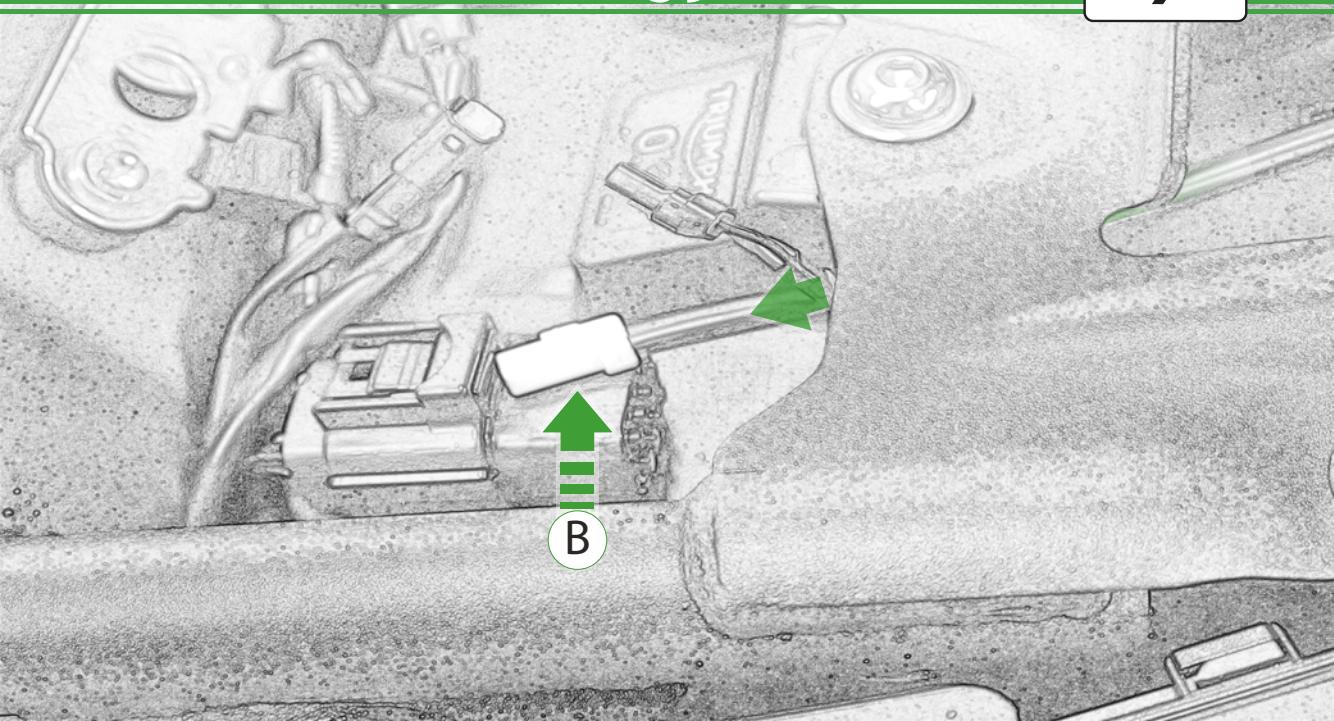


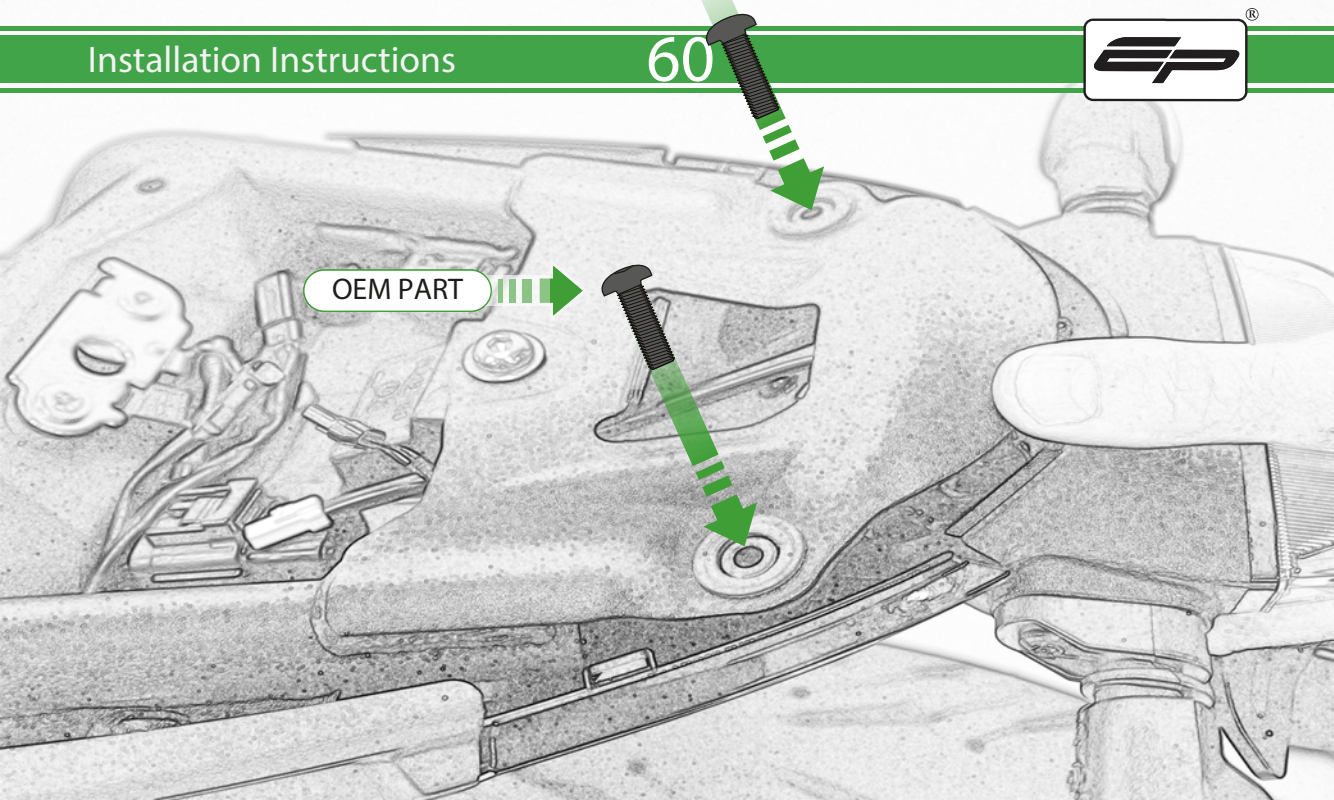


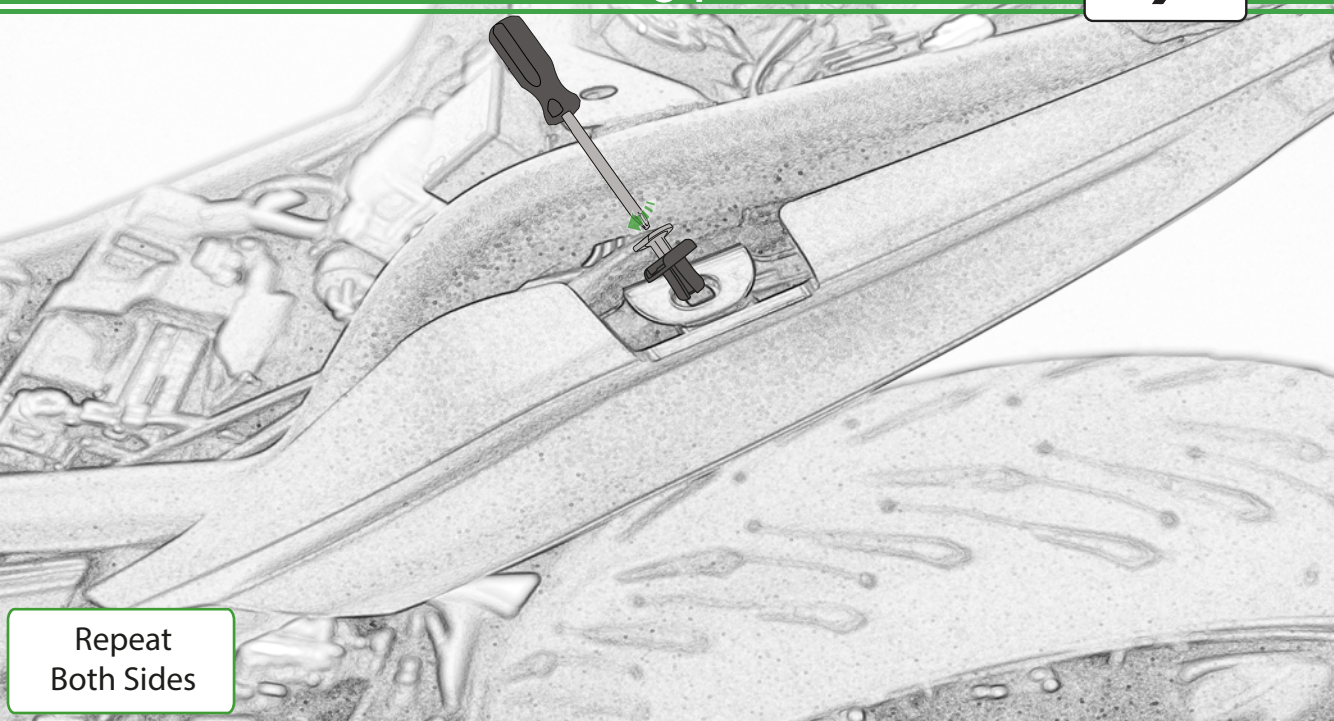


Repeat
Both Sides

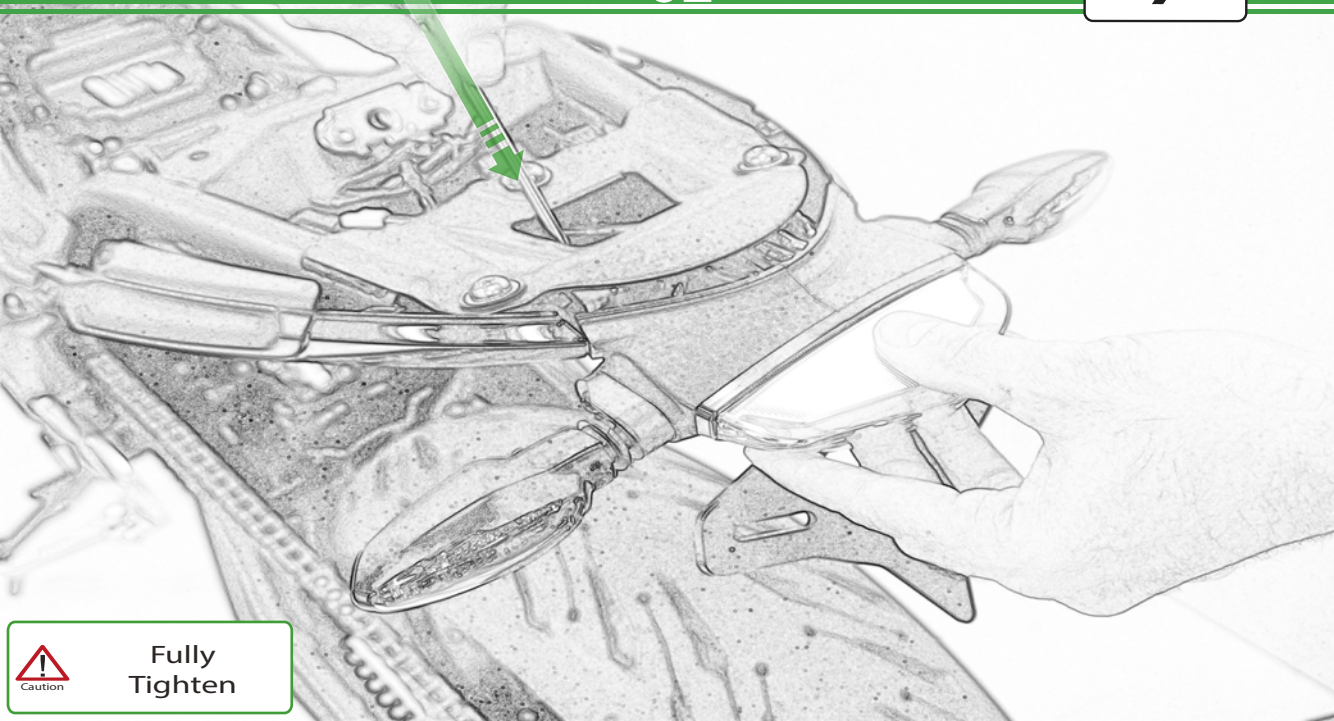


Fully
Tighten

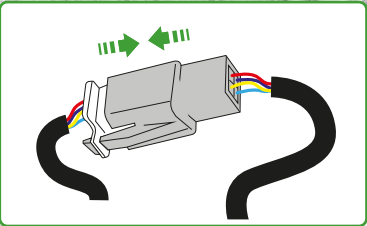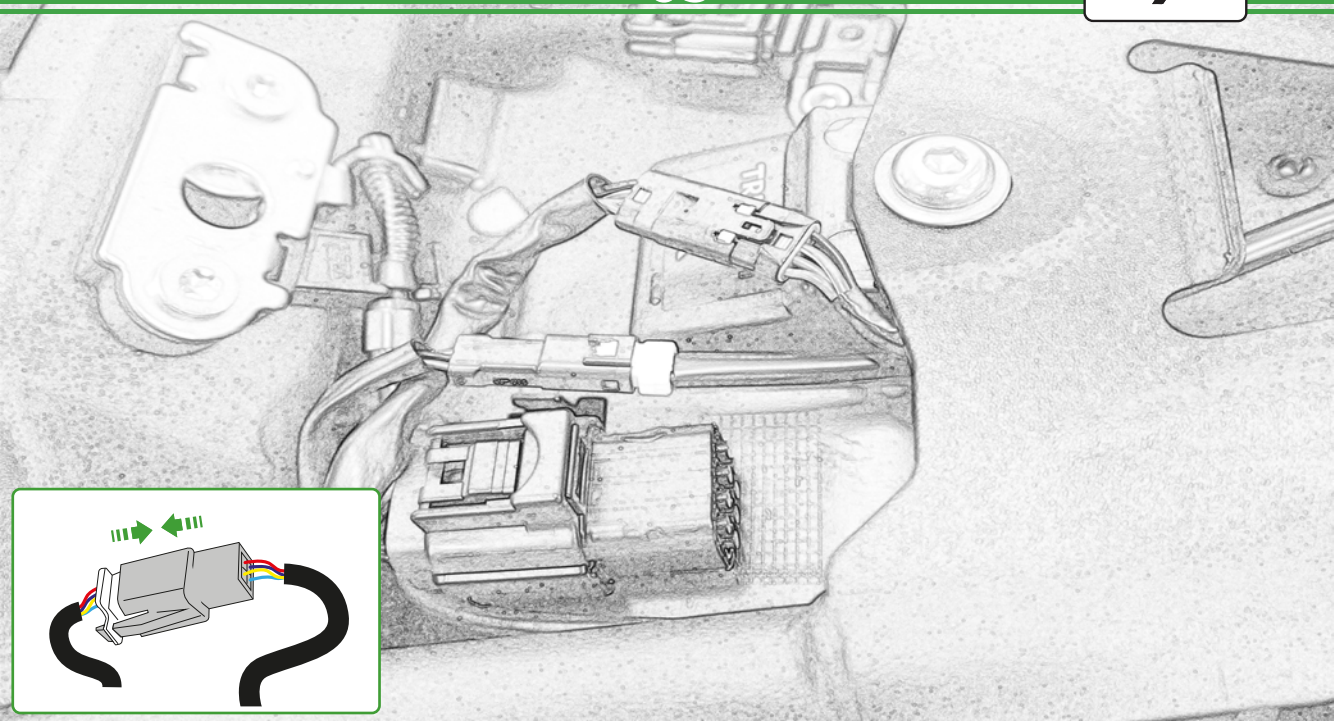





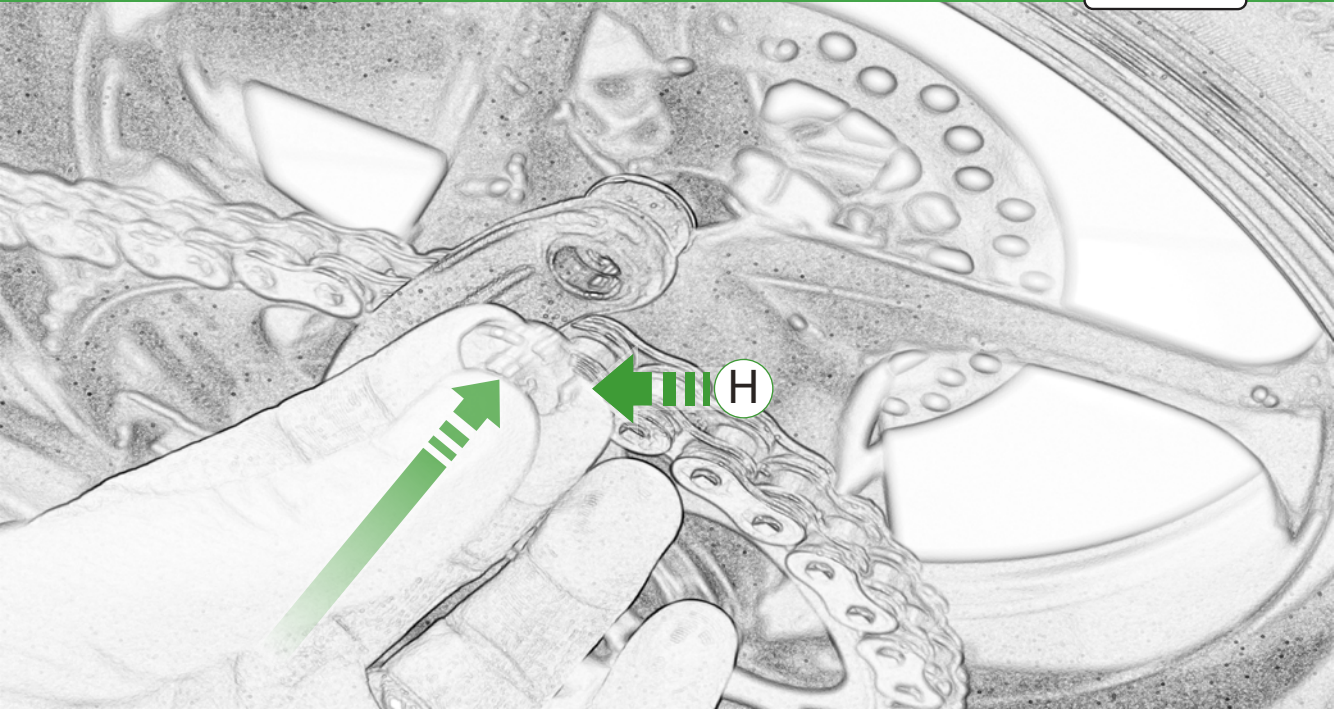


H

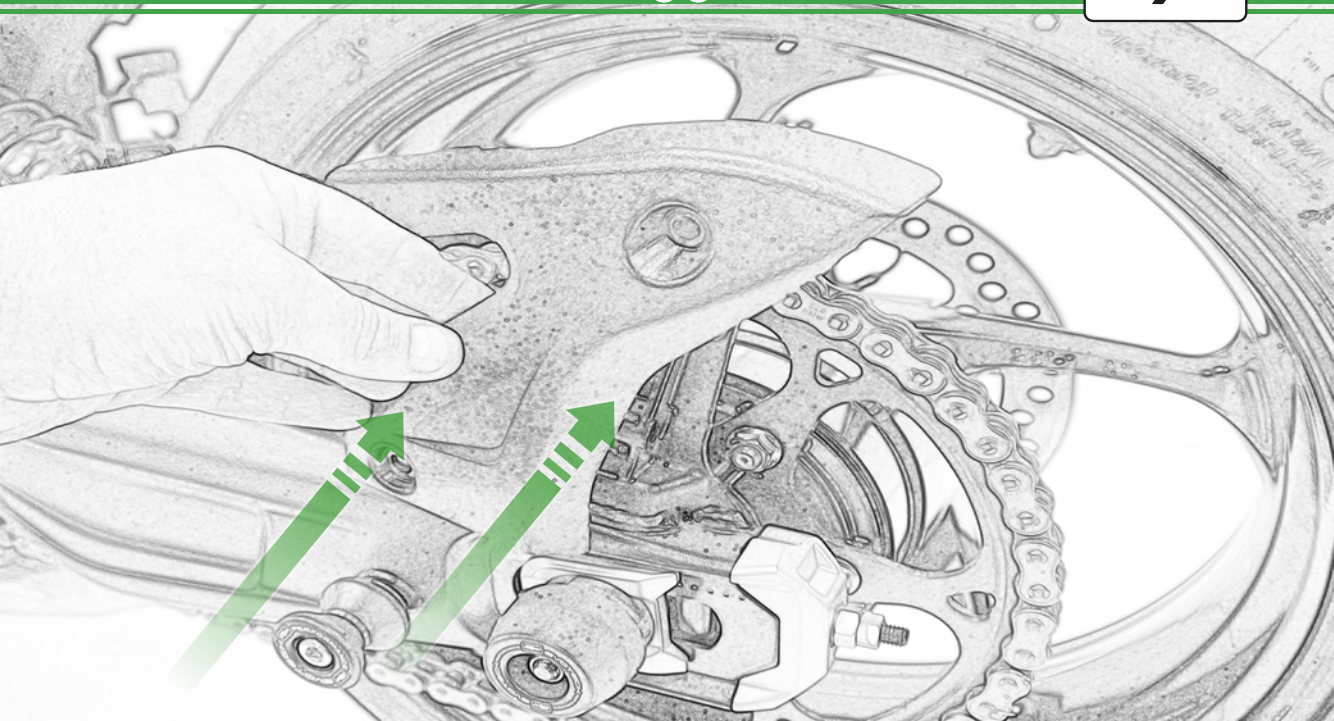

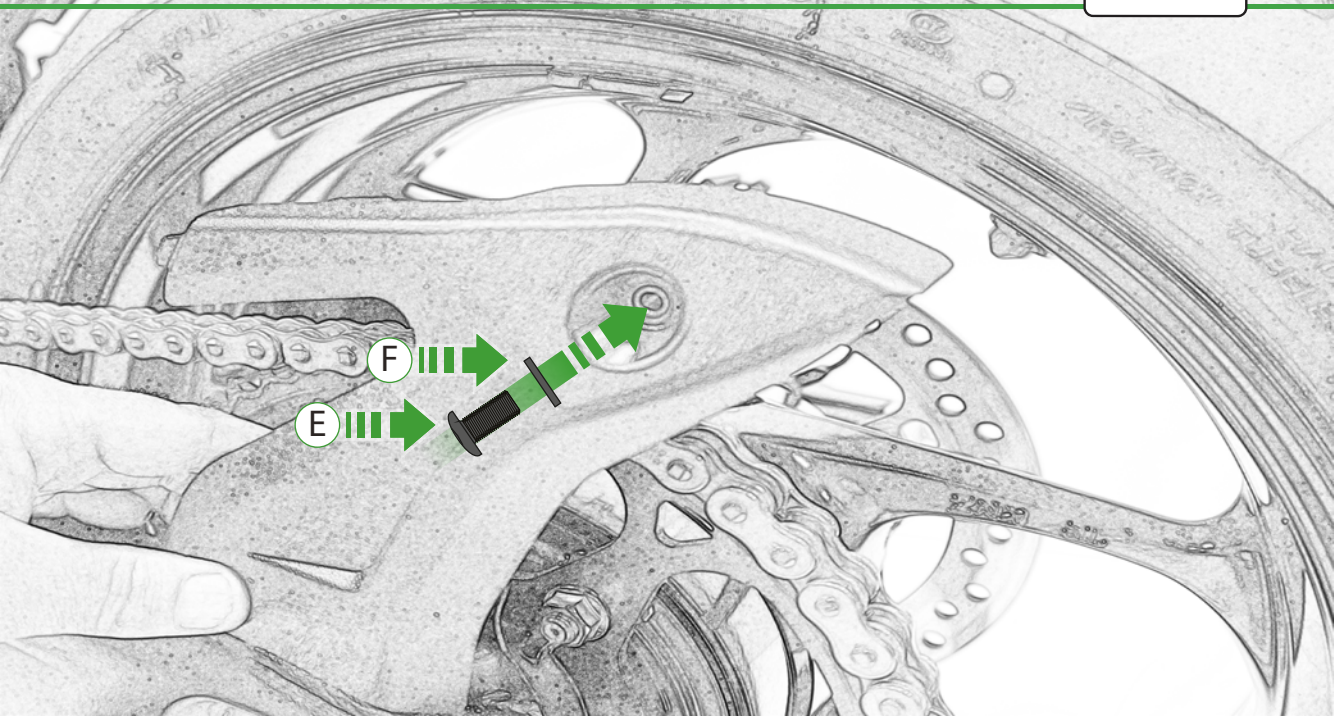

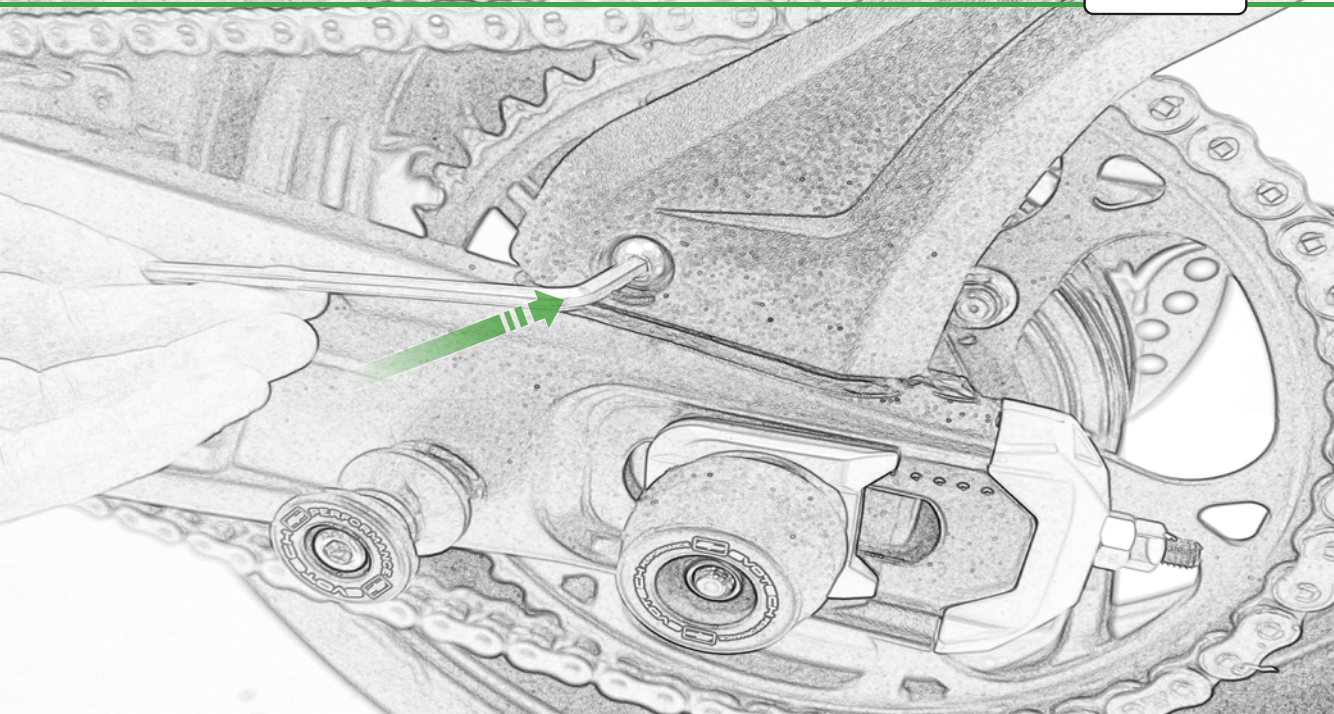

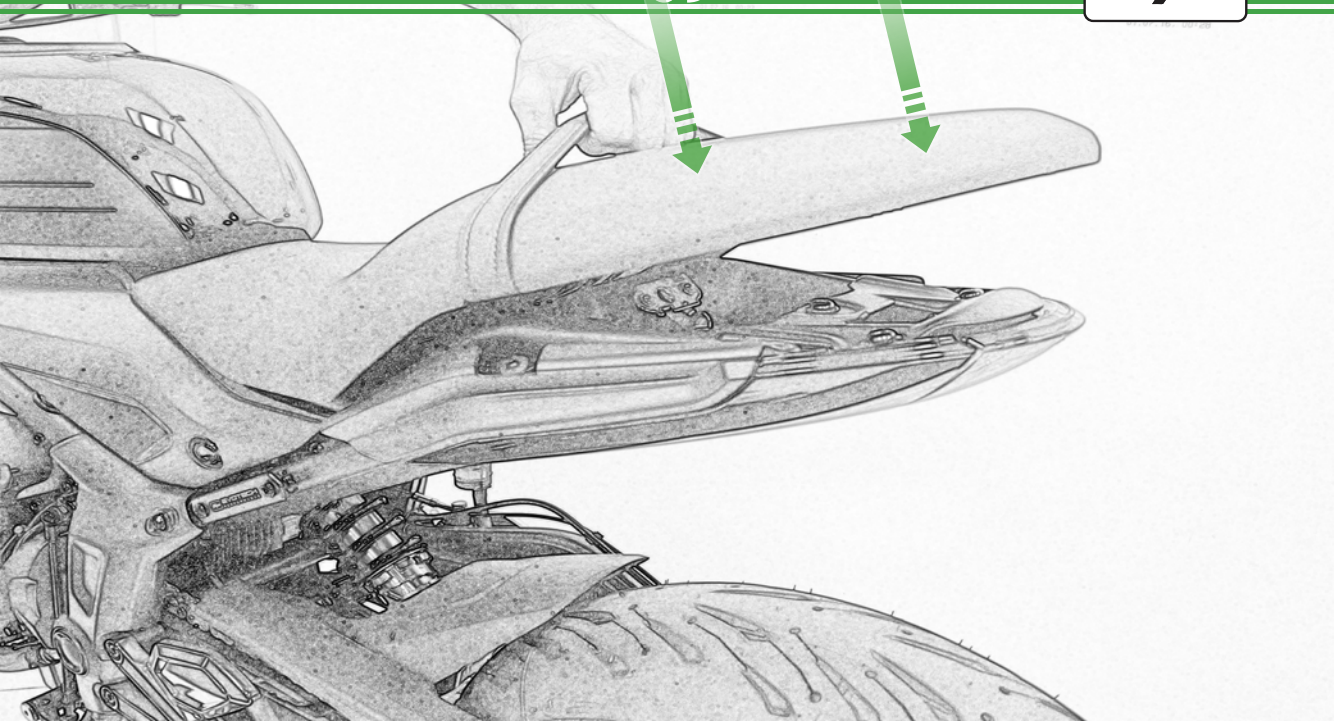




ESSENTIAL CHECKS




After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.

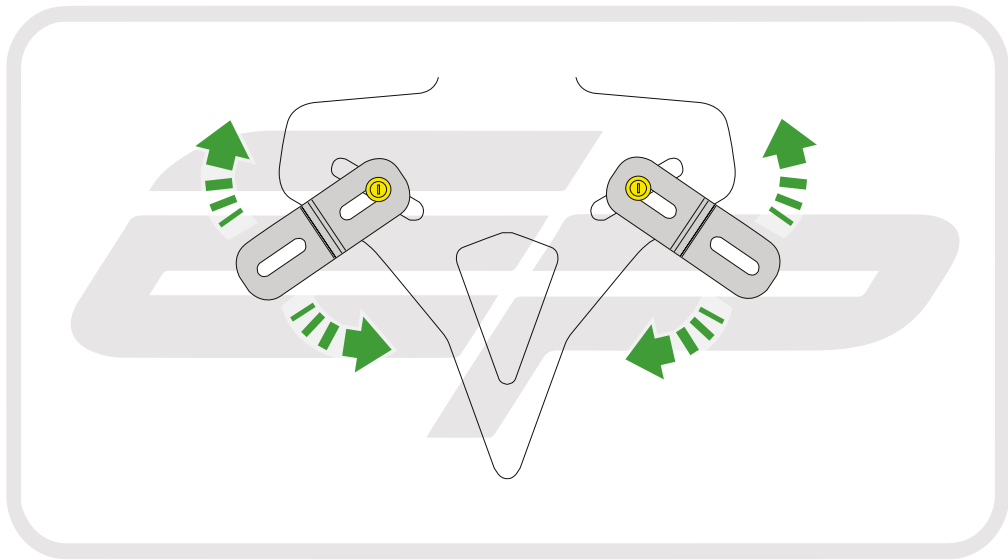

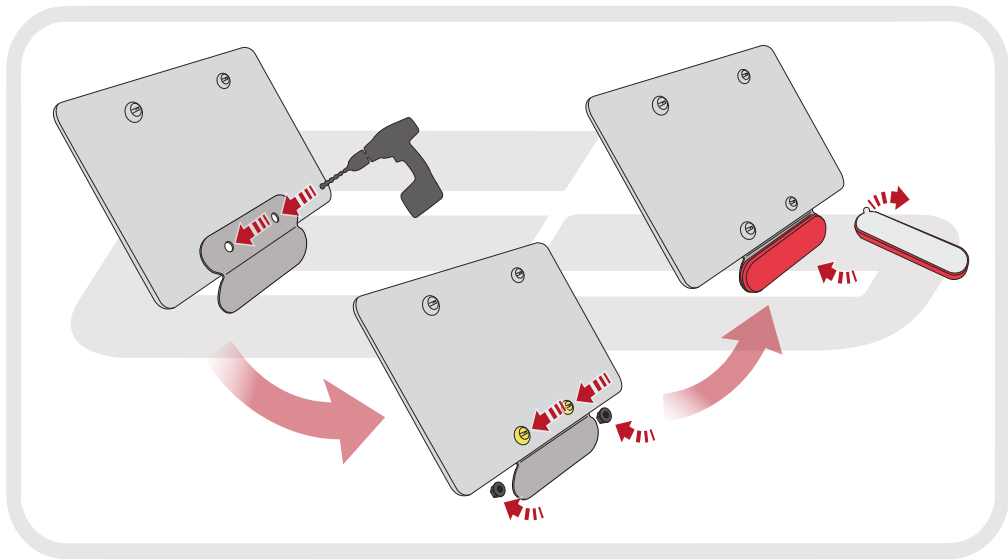



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com