



**EVOTECH**®  
P E R F O R M A N C E


[www.evotech-performance.com](http://www.evotech-performance.com)


Triumph Speed Triple 1200 RS  
Crash Protection Instruction





## Kit Contents PRN015499


- (A) 1 x L/H Bracket
- (B) 1 x L/H Bobbin Spacer (Long)
- (C) 1 x L/H Frame Spacer (Long)
- (D) 1 x M10 x 90 x 1.5 Caphead
- (E) 1 x M10 x 60 x 1.5 Caphead
- (F) 1 x M12 x 75 x 1.25 Caphead
- (G) 1 x R/H Bracket
- (H) 1 x R/H Bobbin Spacer (Short)
- (I) 1 x R/H Frame Spacer
- (J) 1 x M10 x 100 x 1.5 Caphead
- (K) 1 x M10 x 65 x 1.5 Caphead
- (L) 1 x M12 x 55 x 1.25 Caphead
- (M) 2 x M12 Washer
- (N) 2 x Poly Washer
- (O) 2 x Bobbin Heads

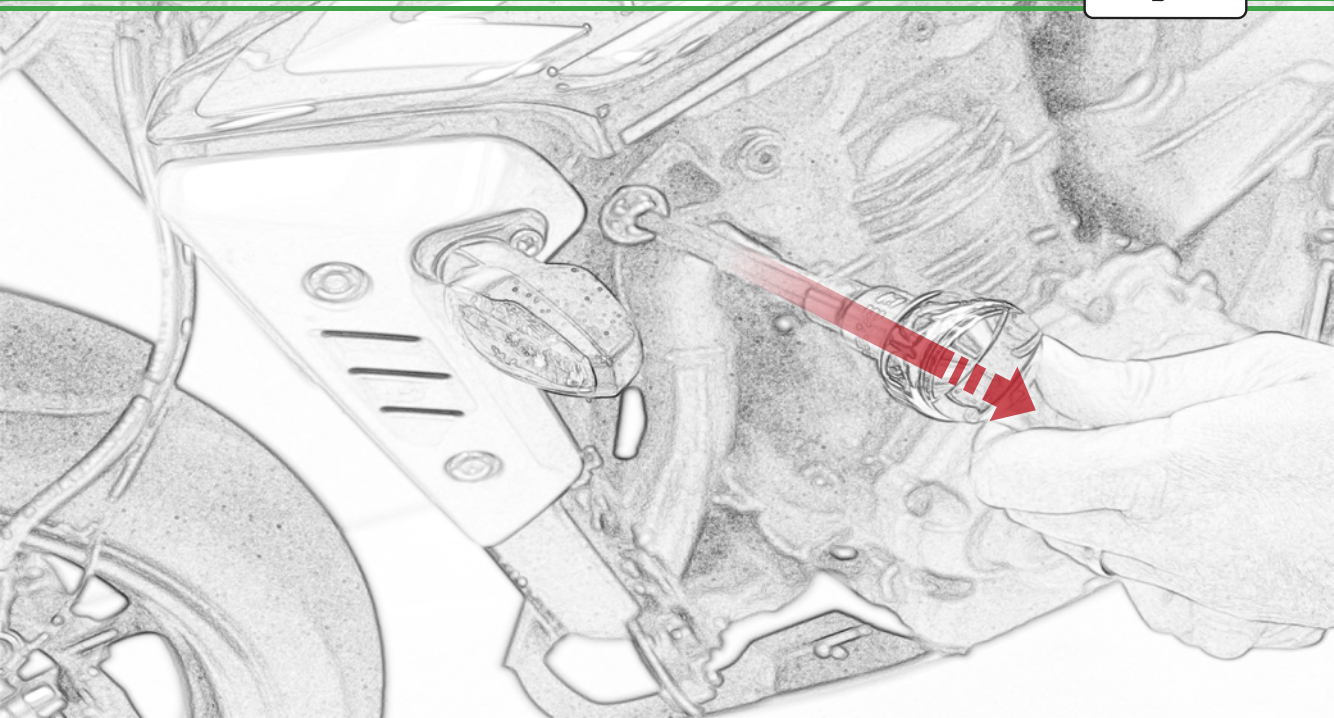

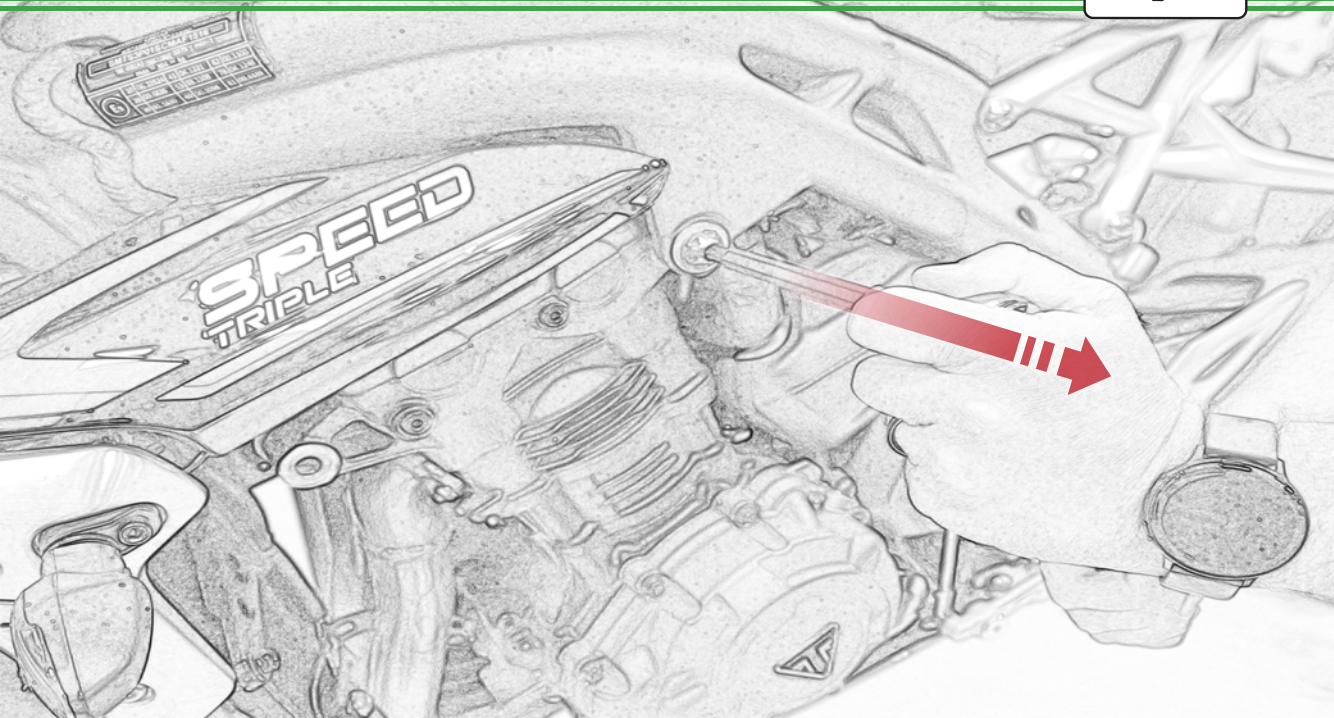

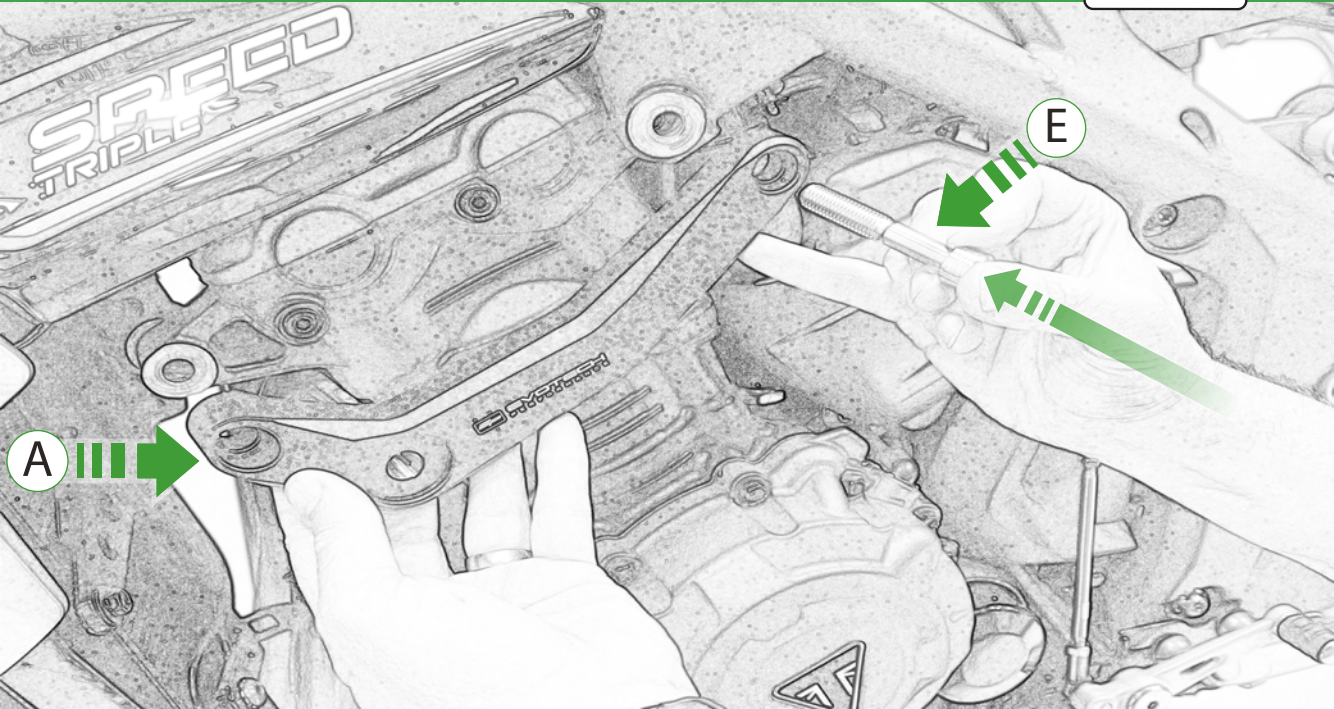


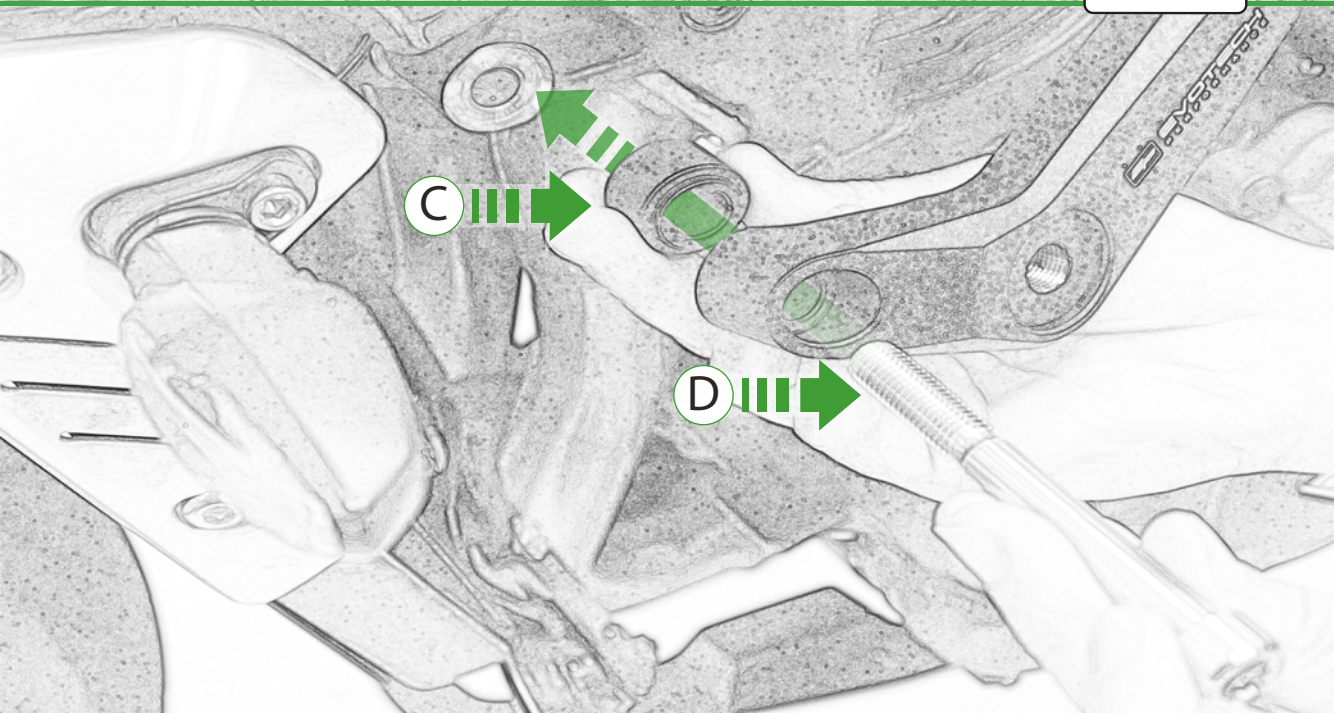

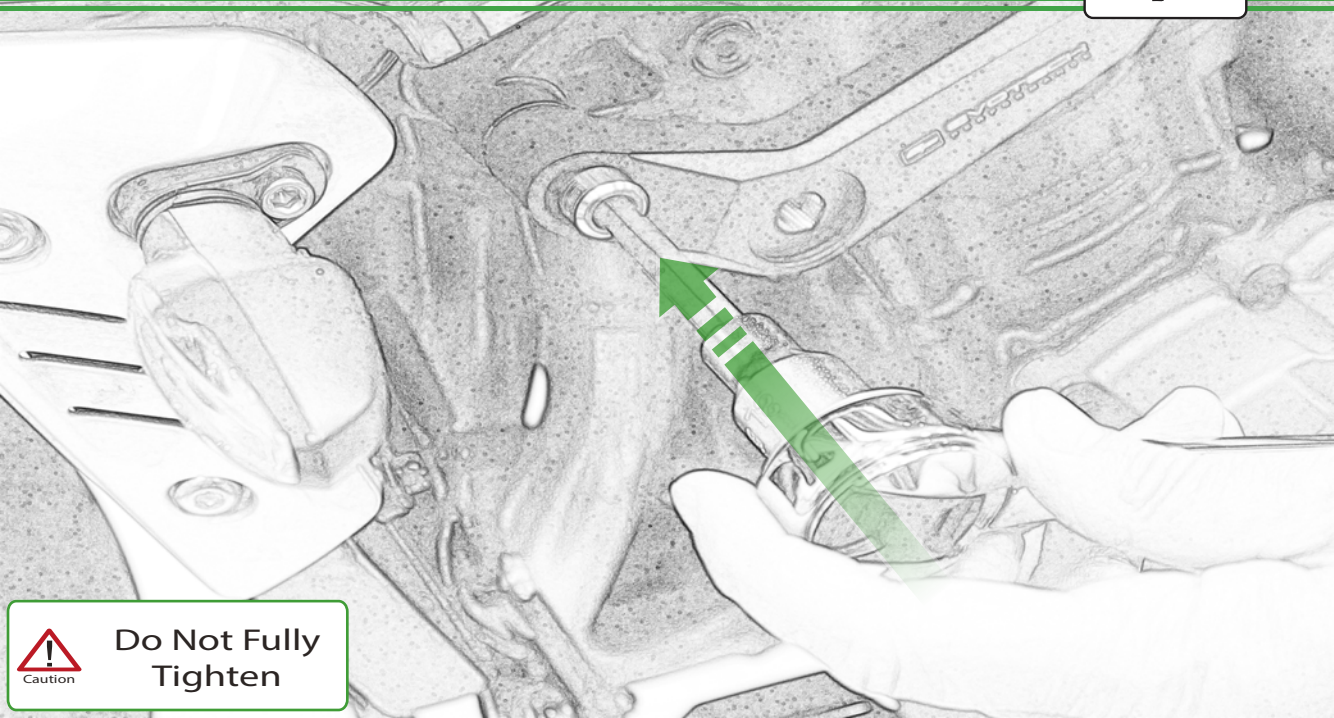

Caution


Do Not Fully  
Tighten

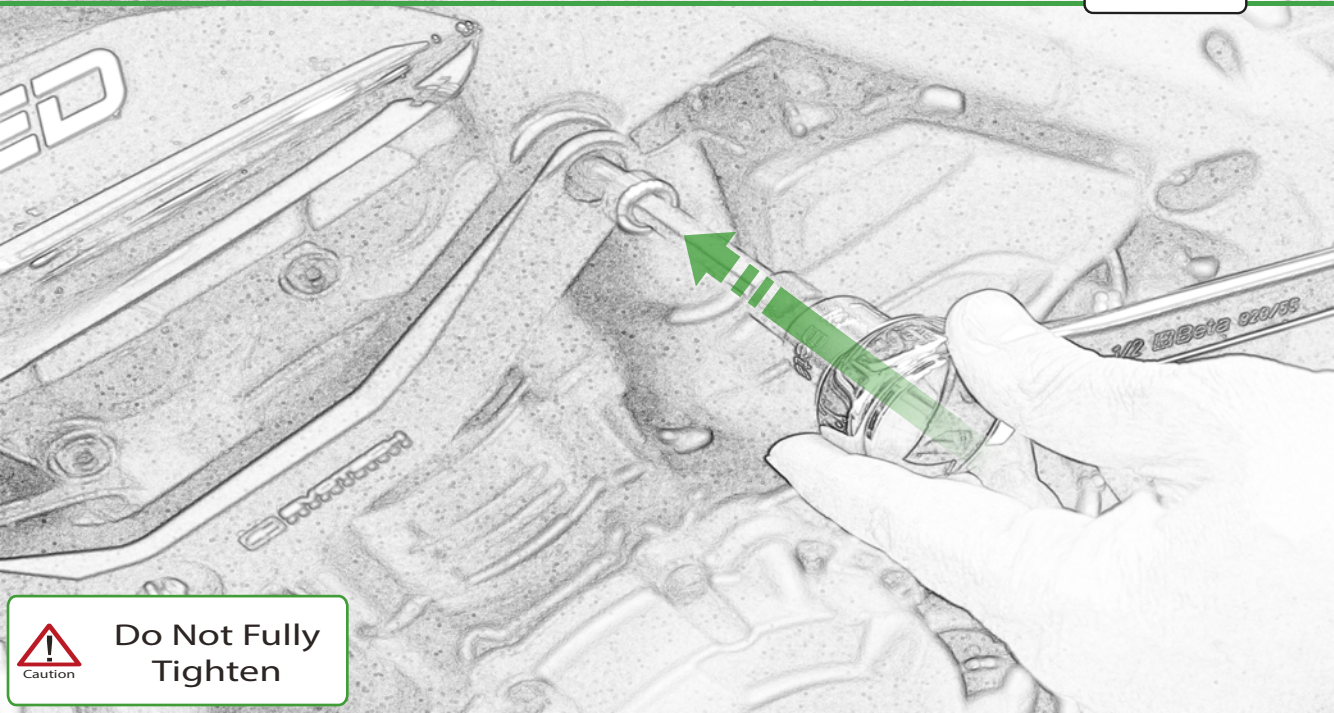

Caution


Do Not Fully  
Tighten



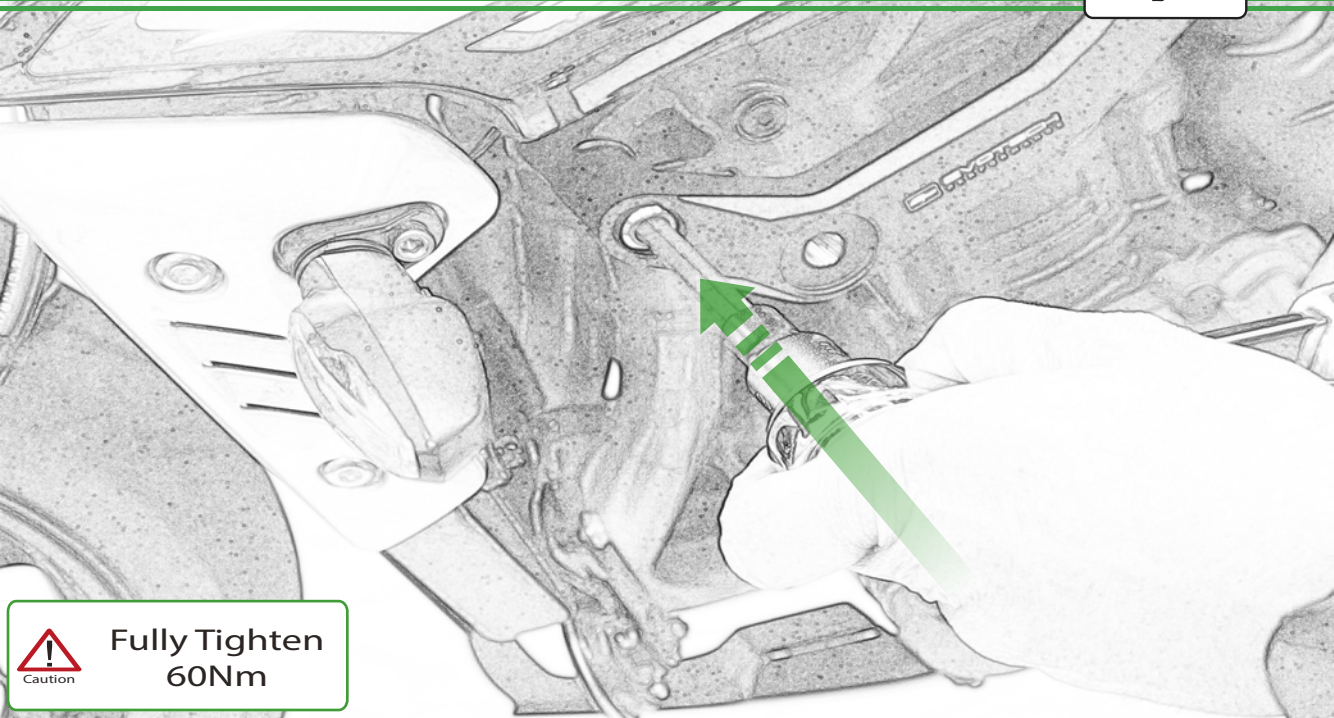


Caution

Fully Tighten  
60Nm

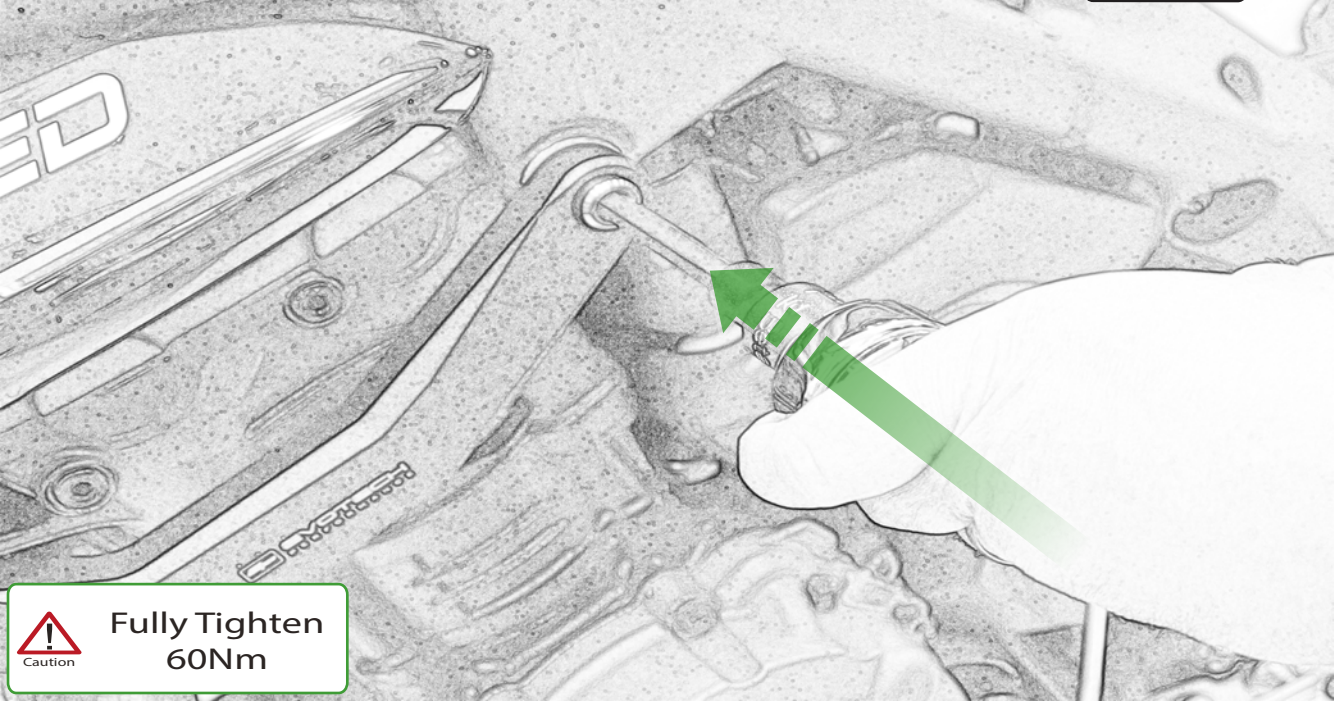



Caution


Fully Tighten  
60Nm

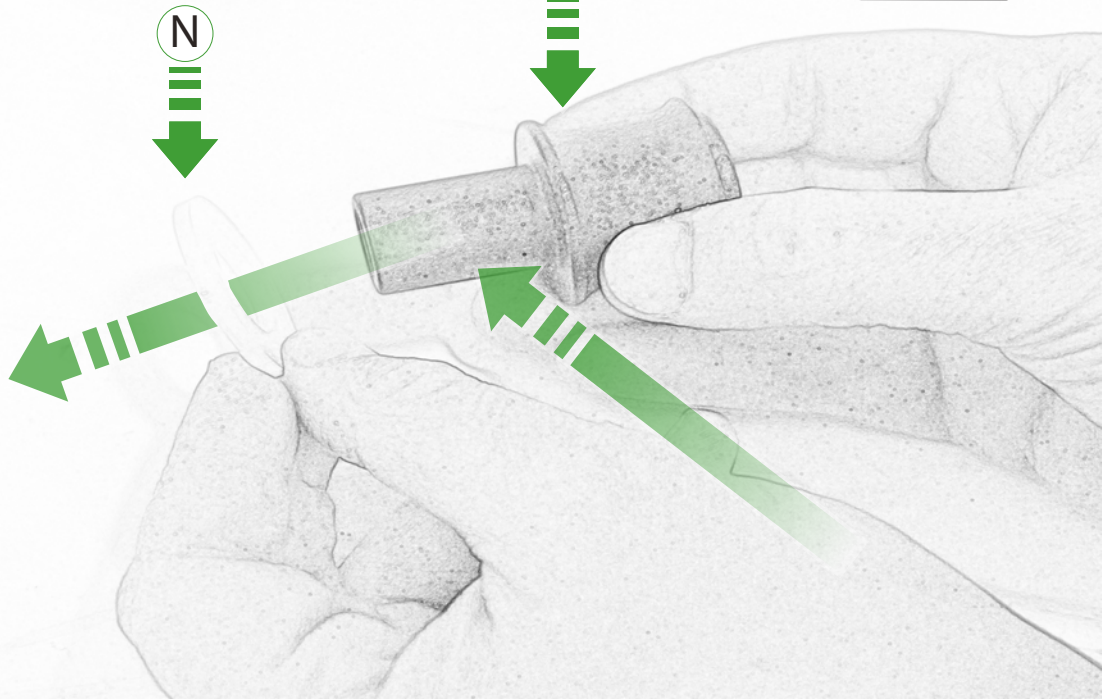




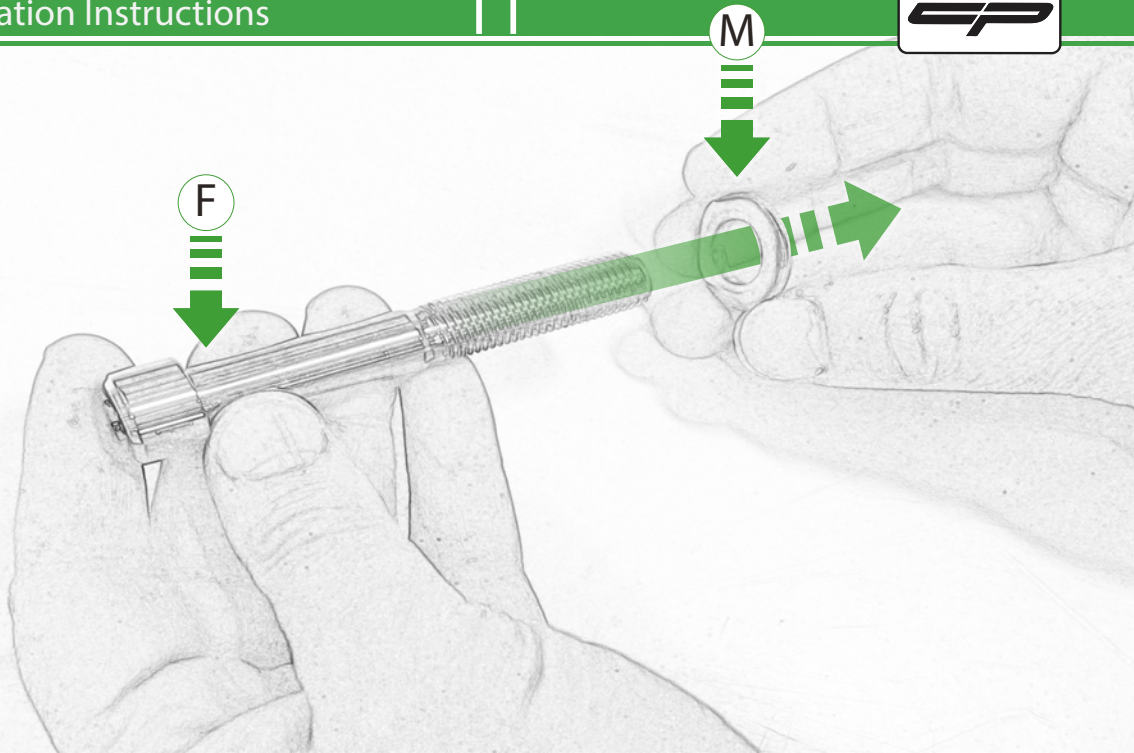

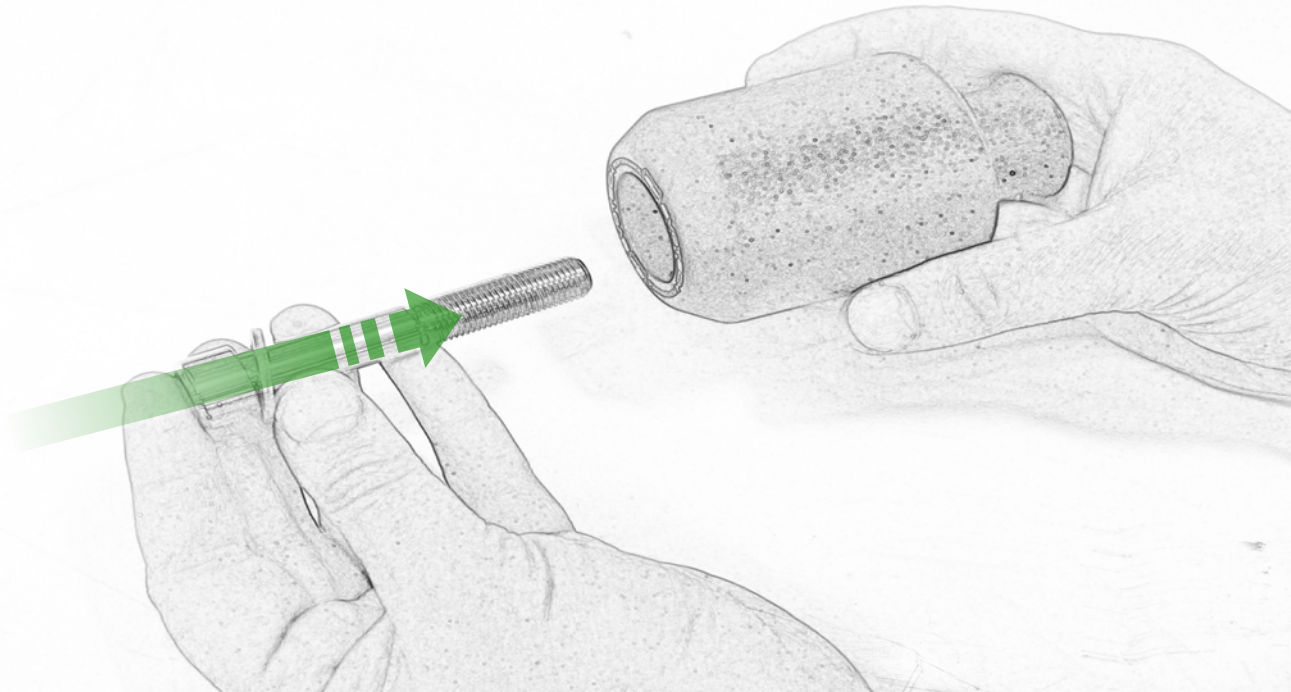


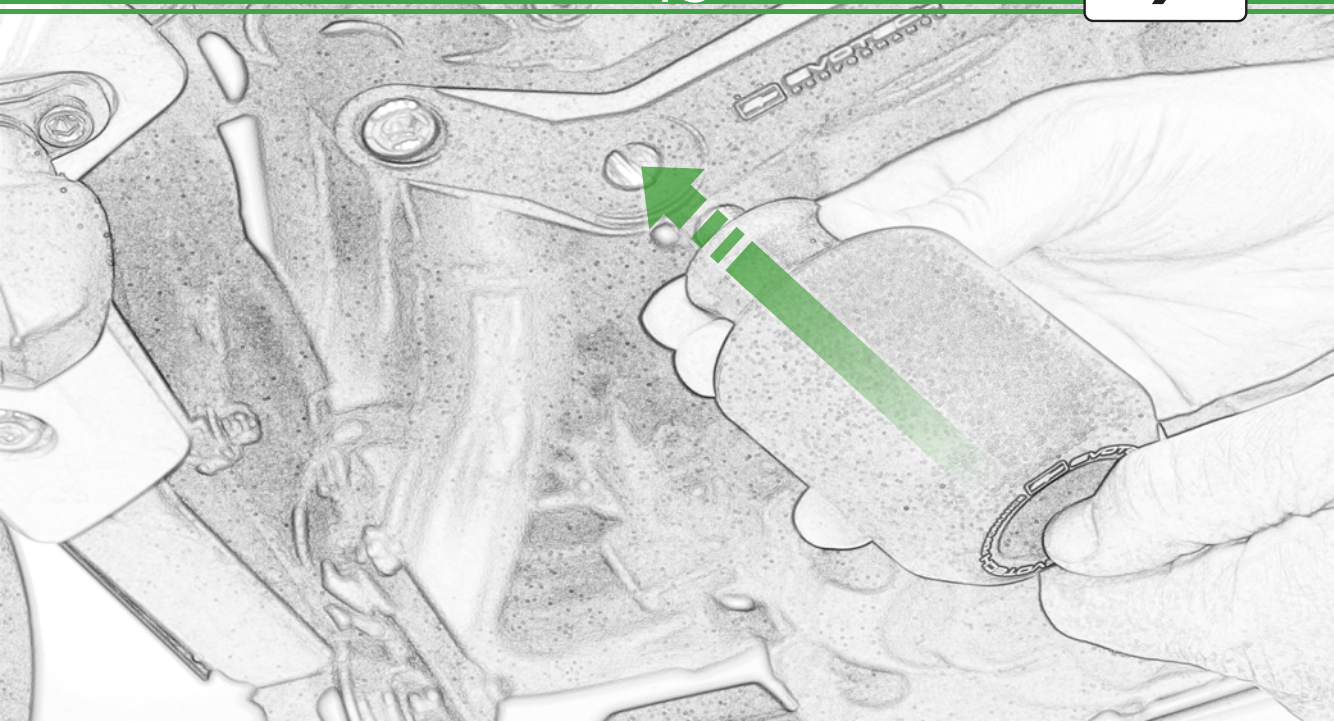


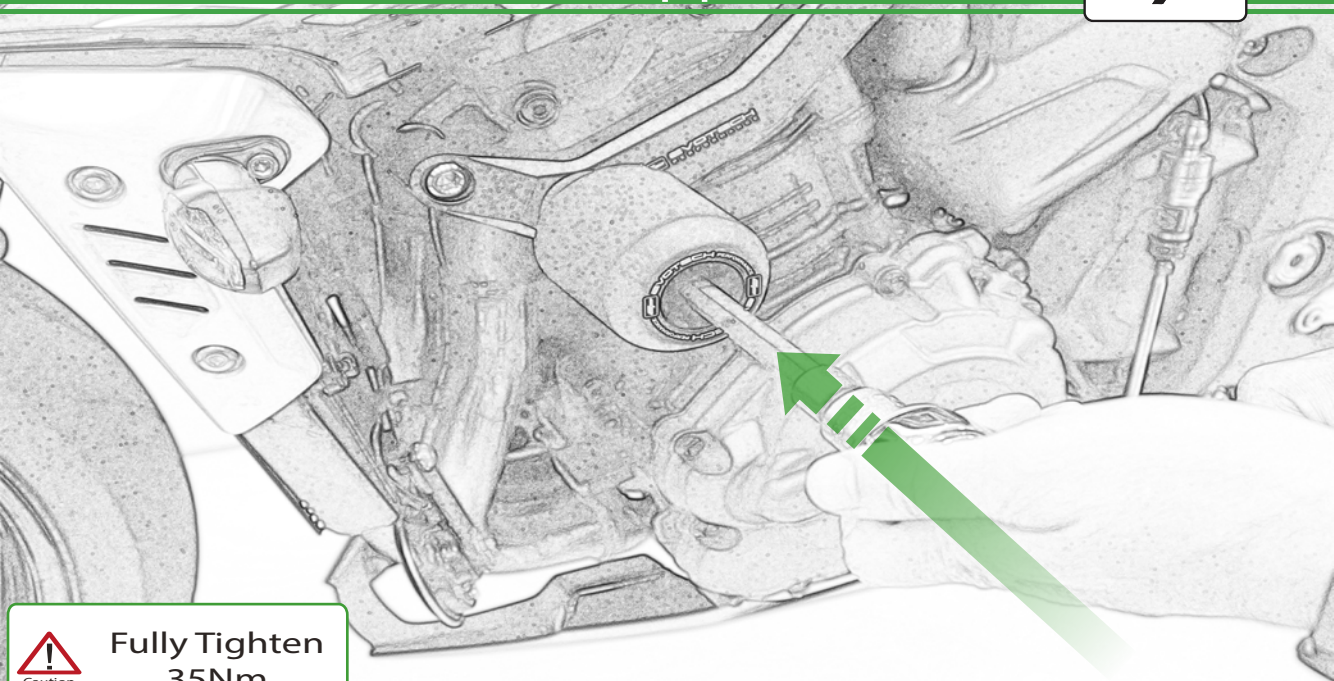


Fully Tighten  
35Nm



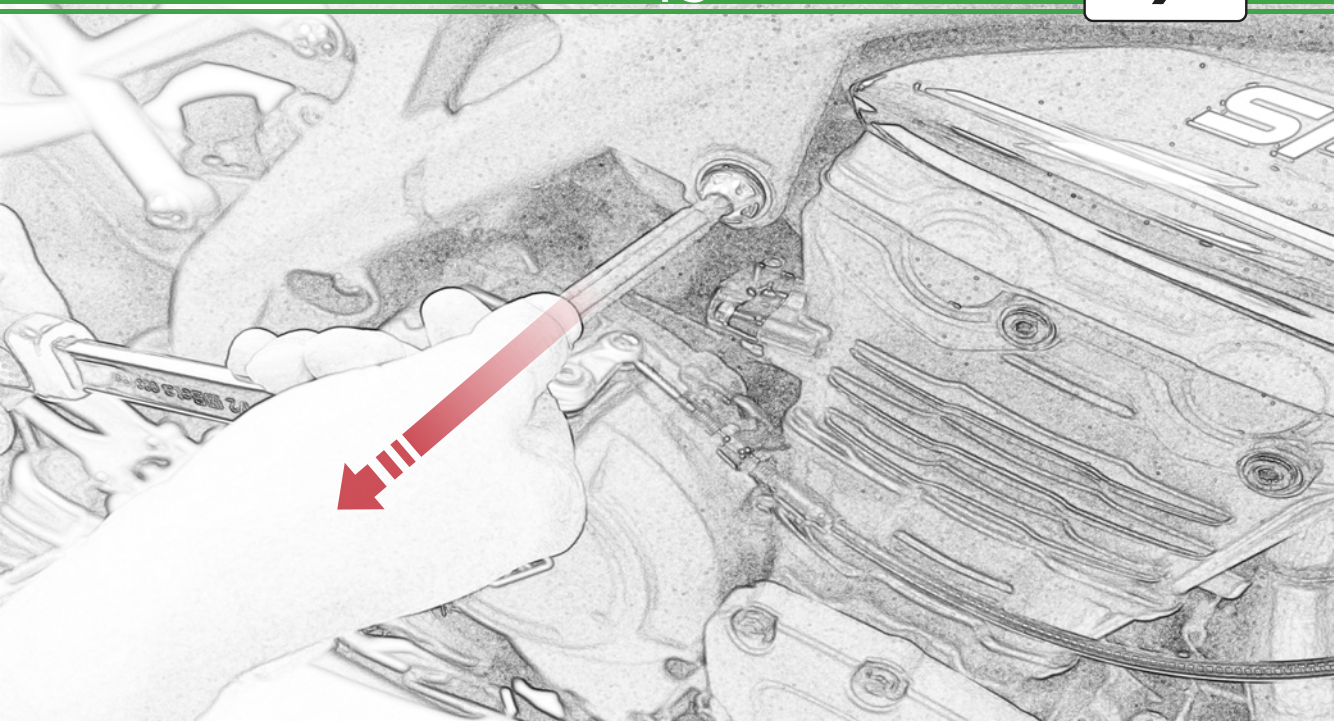

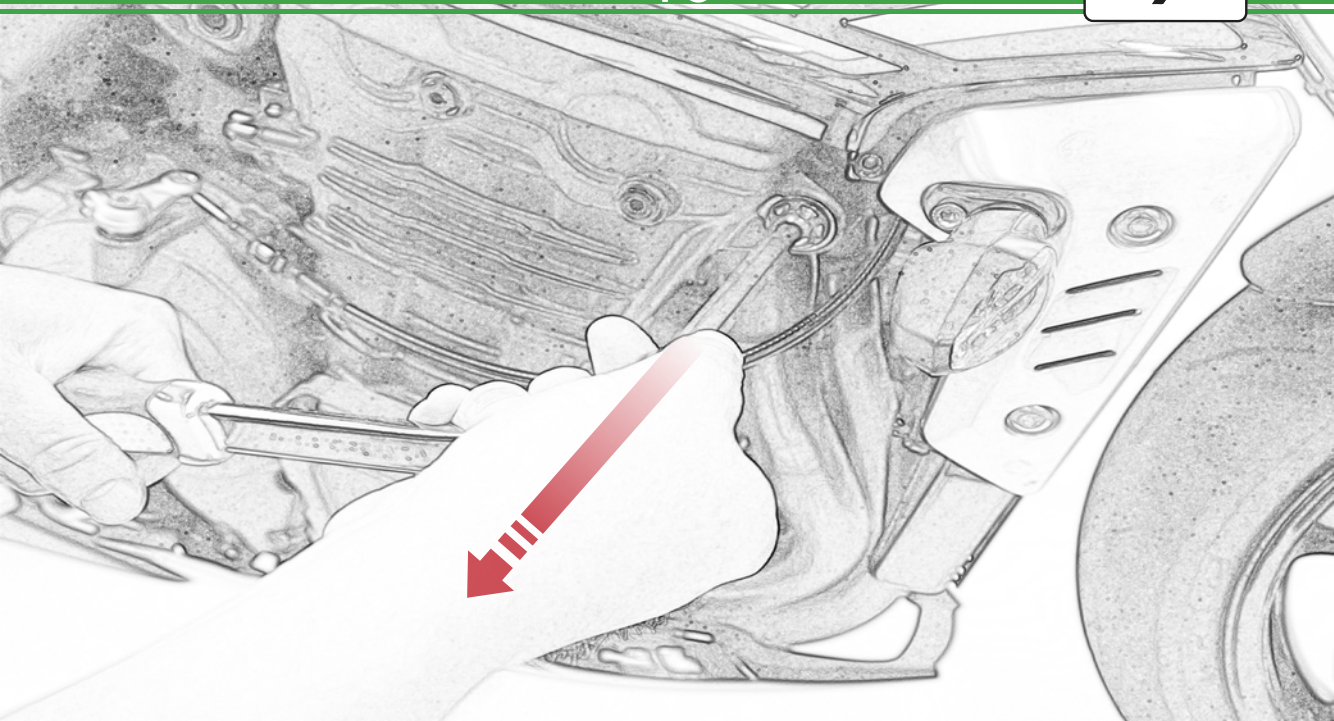

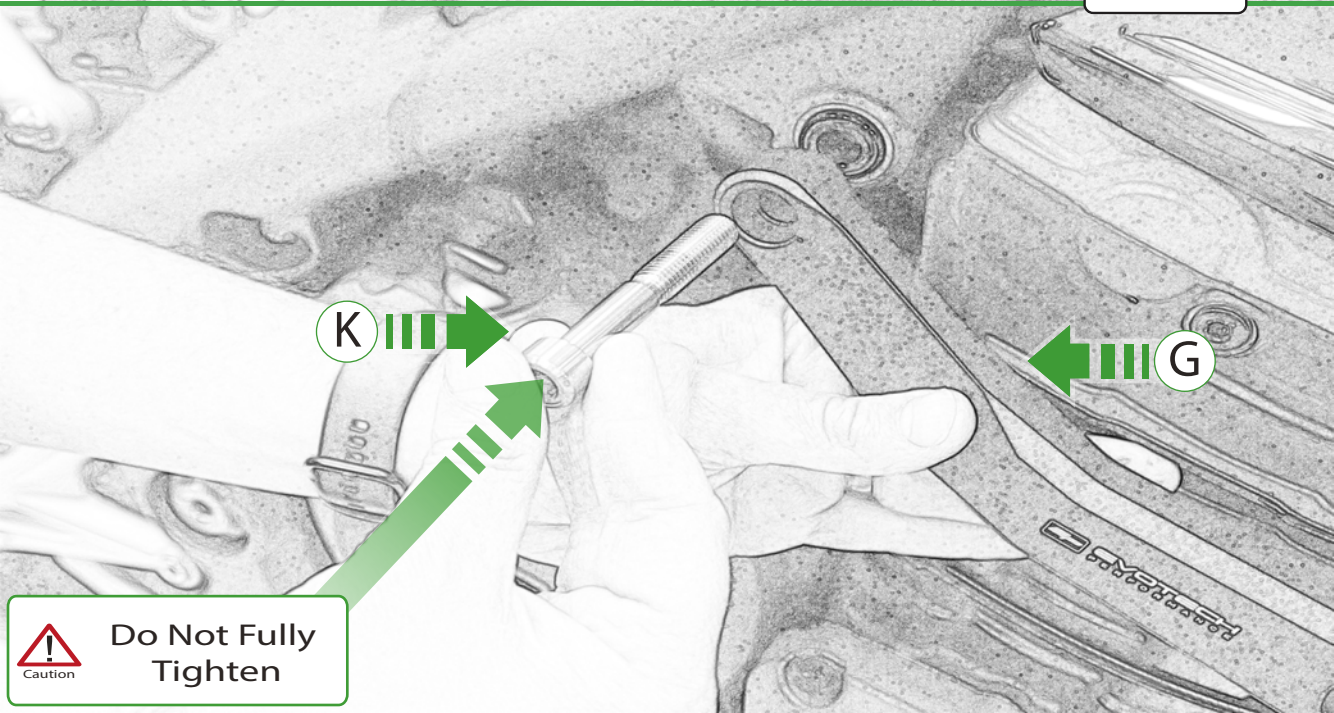


K

G




Caution

Do Not Fully Tighten

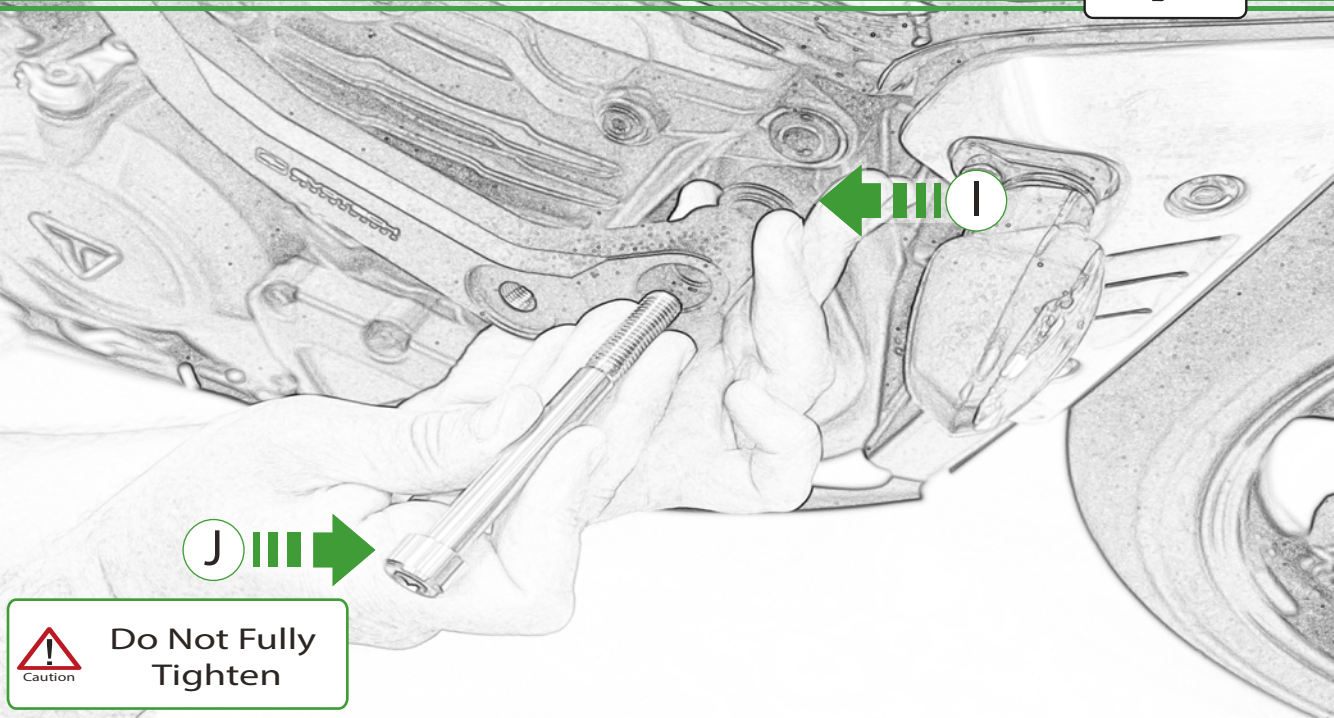


Do Not Fully Tighten

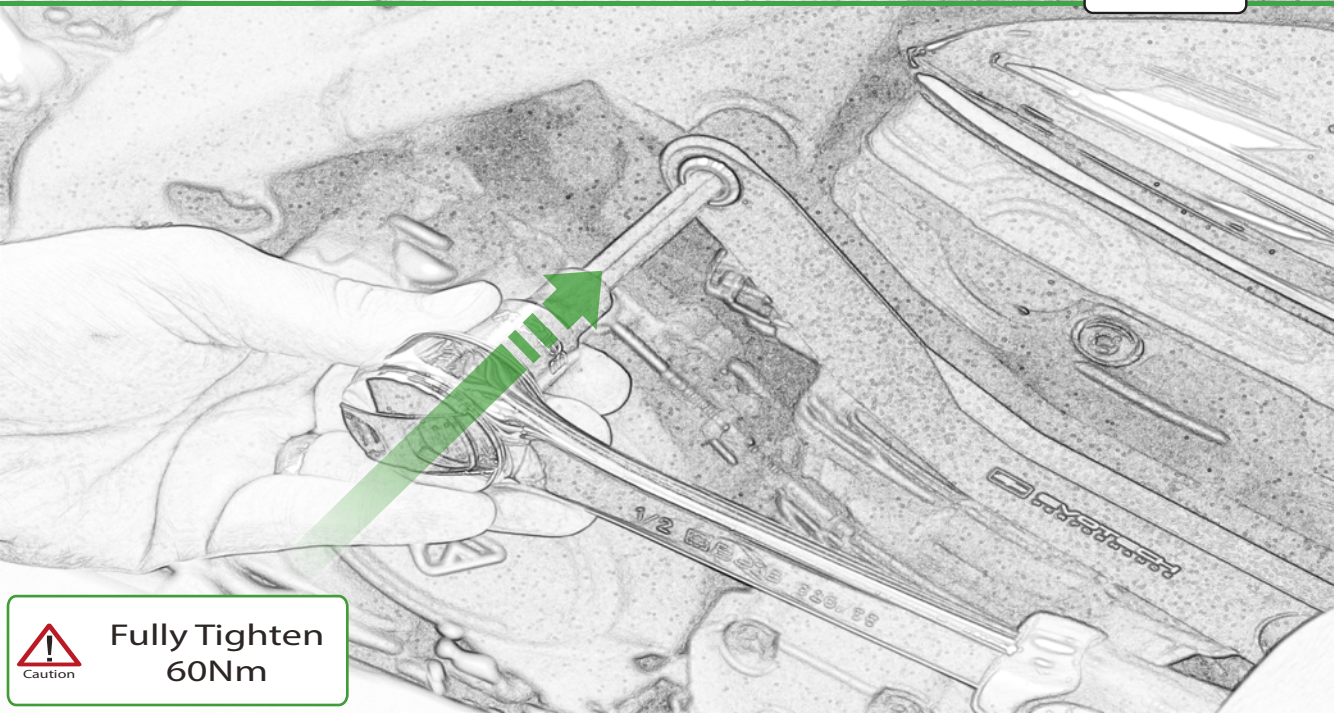

Caution

Fully Tighten  
60Nm

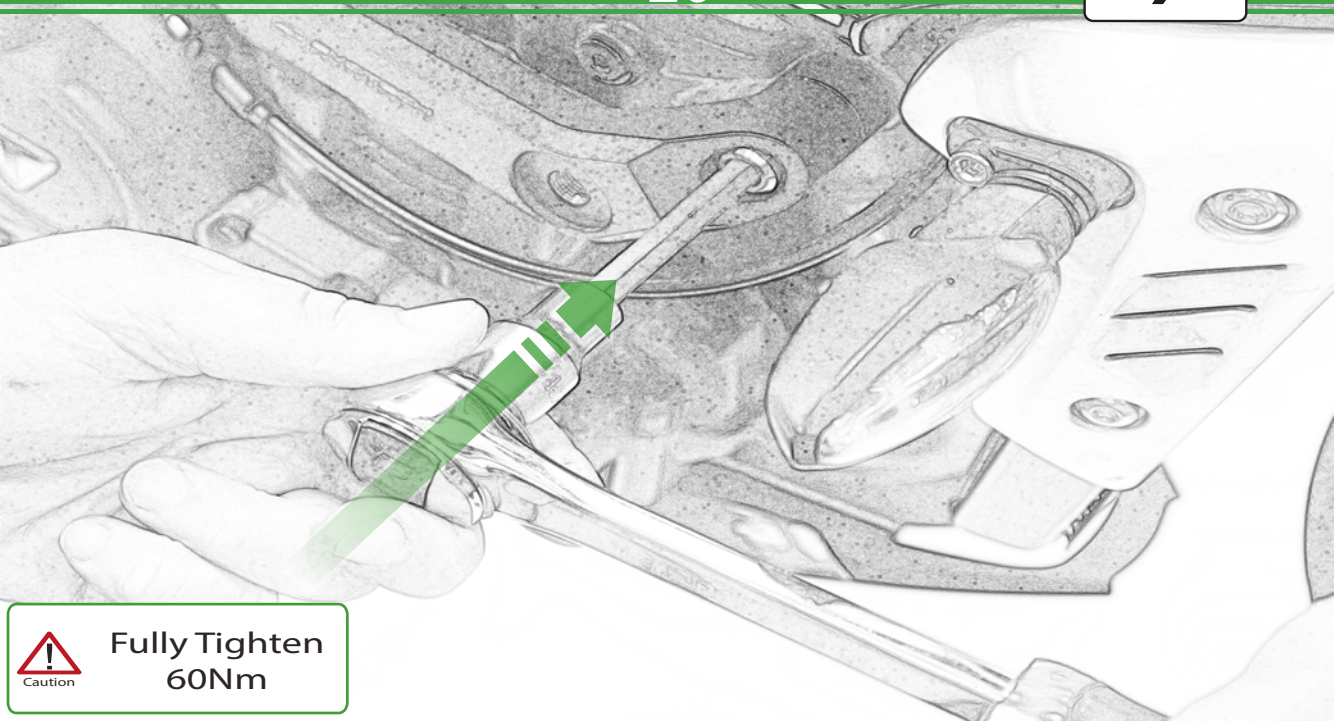


Caution


Fully Tighten  
60Nm

N


21


H

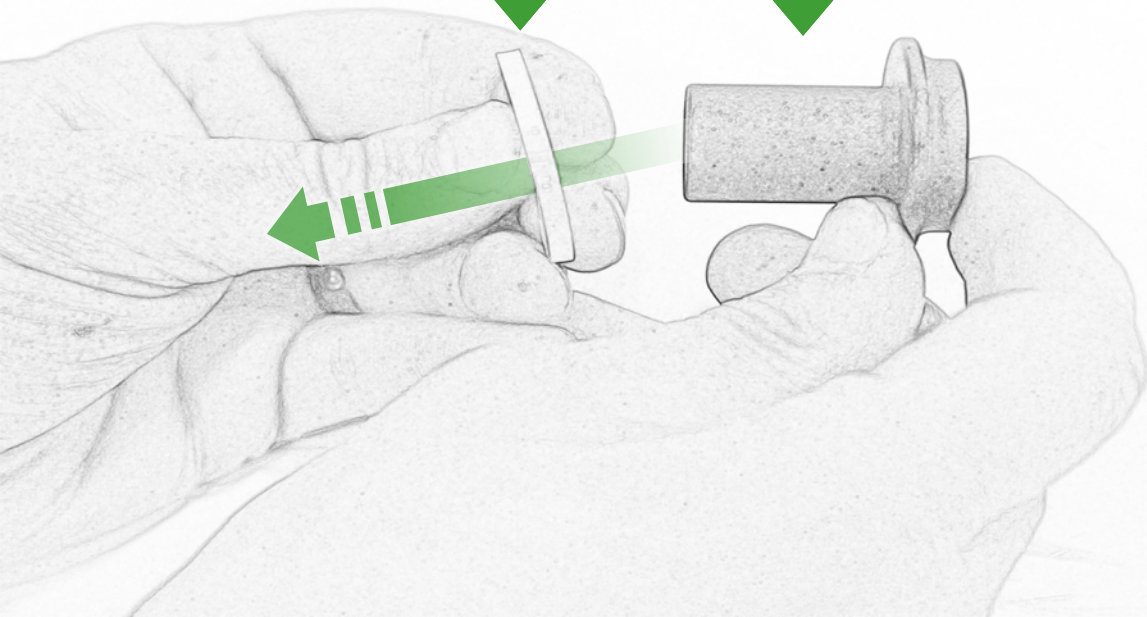


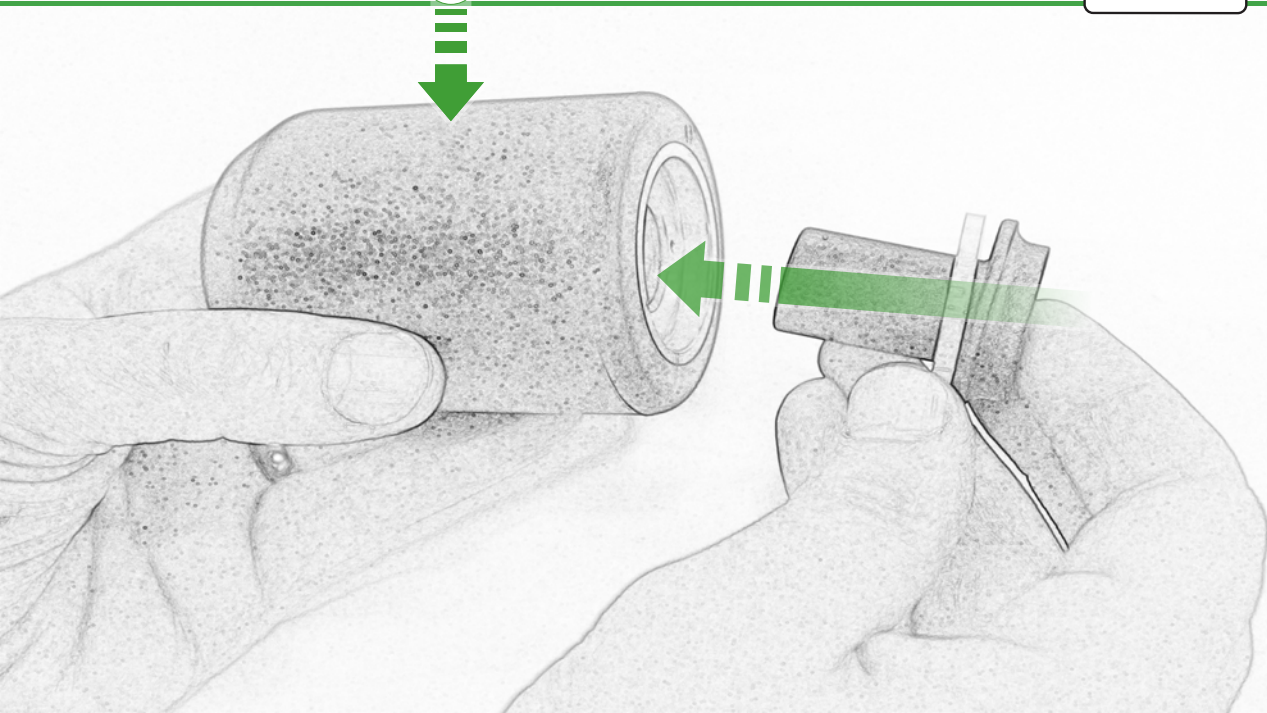




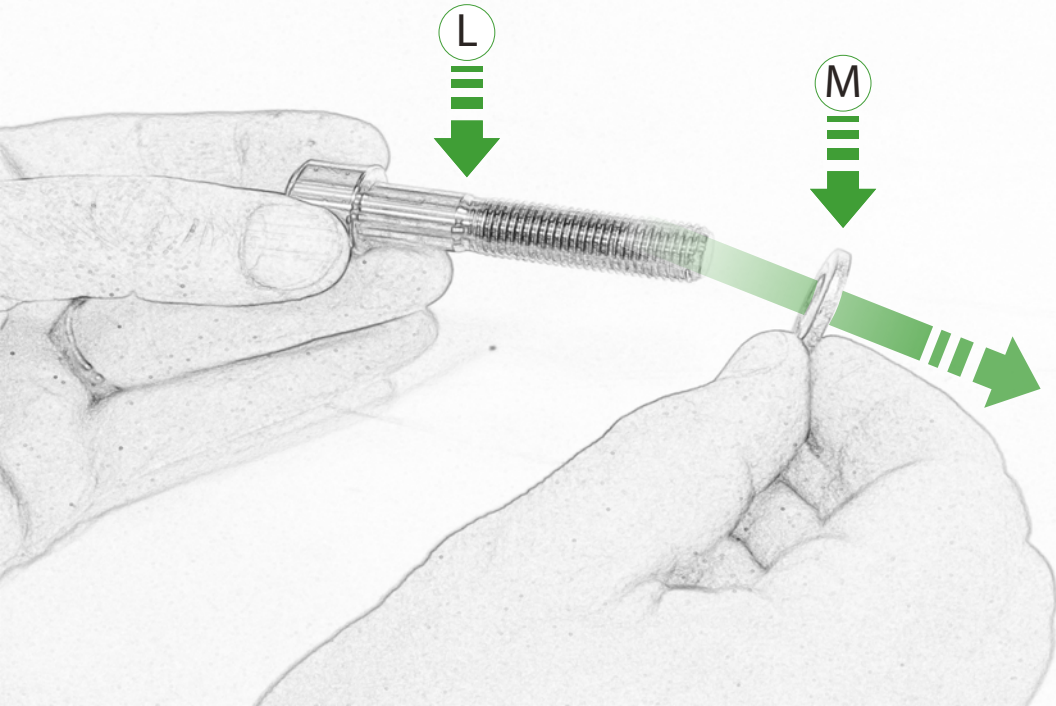

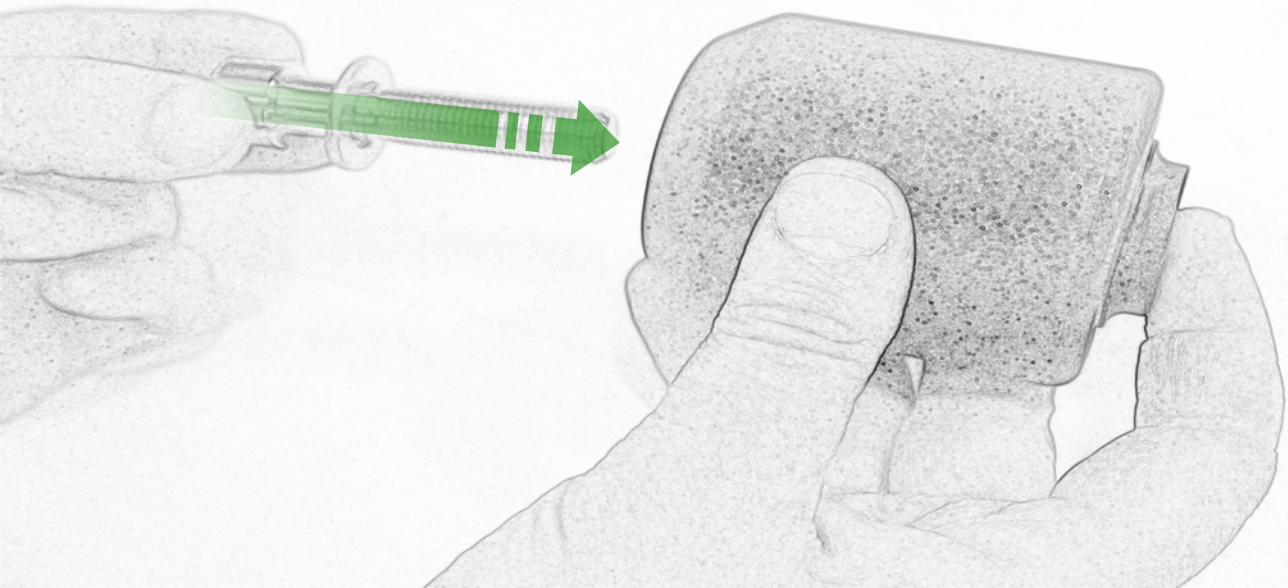

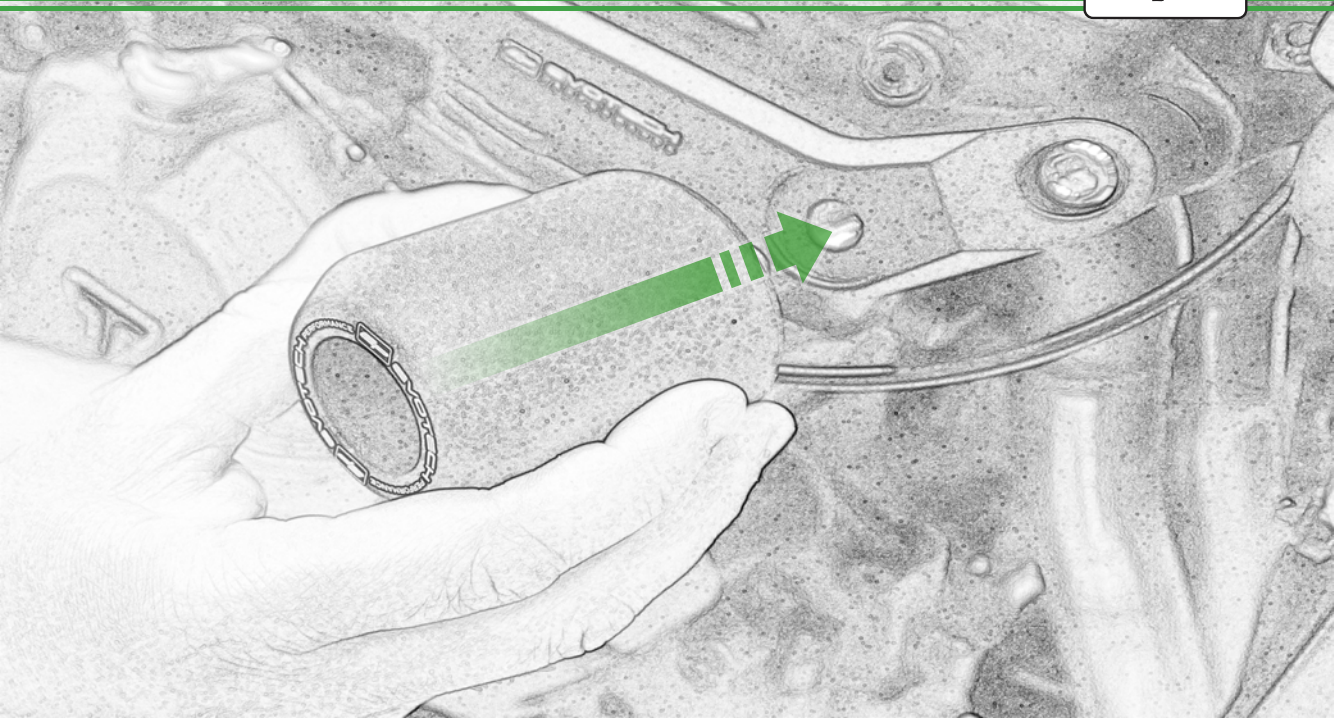

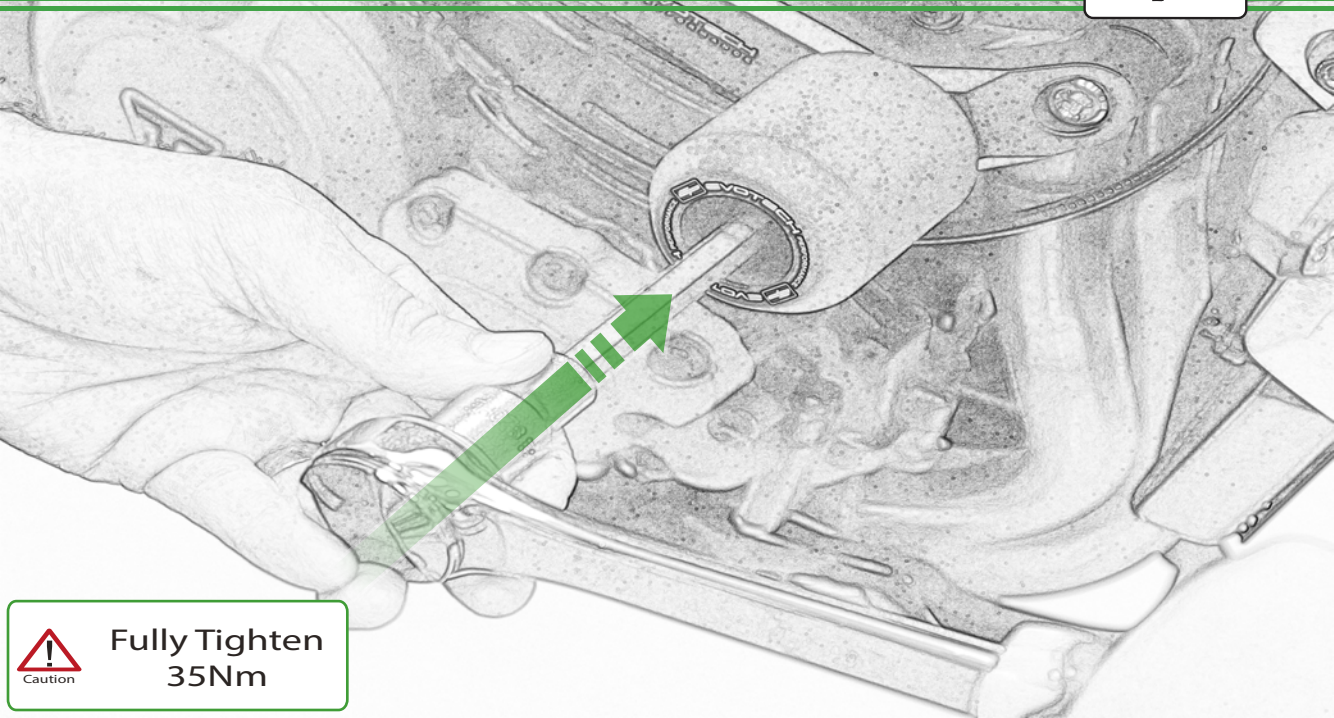

Caution

Fully Tighten  
35Nm



## ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)