

www.evotech-performance.com

Ducati Monster 950 / 939 Tail Tidy

Installation Instructions


Installation Instructions





Kit Contents PRN015548


- A 2 x Indicator Plate
- **B** 2 x Upper Indicator Clamps
- © 2 x Lower Indicator Clamps
- D 2 x M5 x 10mm Countersunk Screw
- E 2 x M5 Nyloc Nut
- F 2 x M4 x 8mm Caphead
- © 2 x Spacer
- H 4 x M5 x 12mm Black




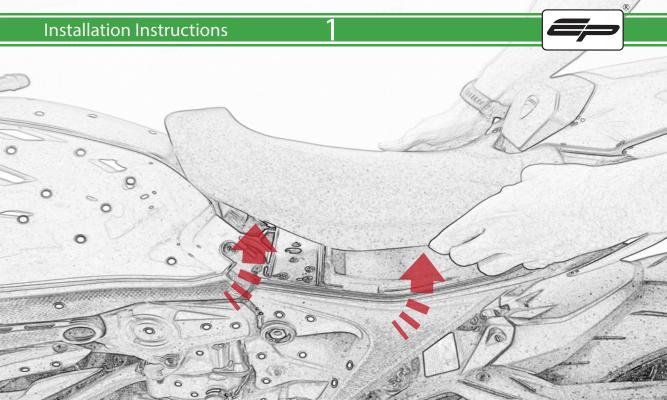

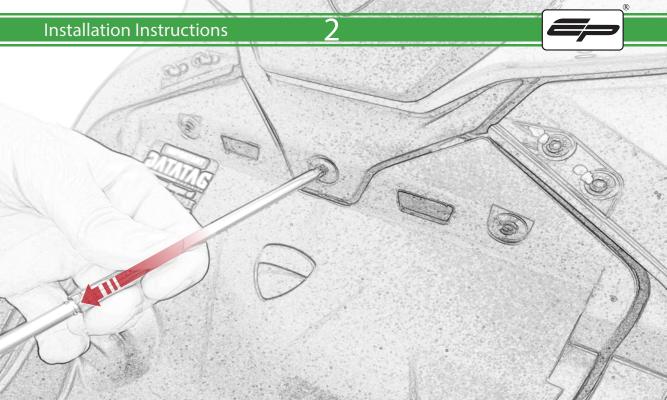


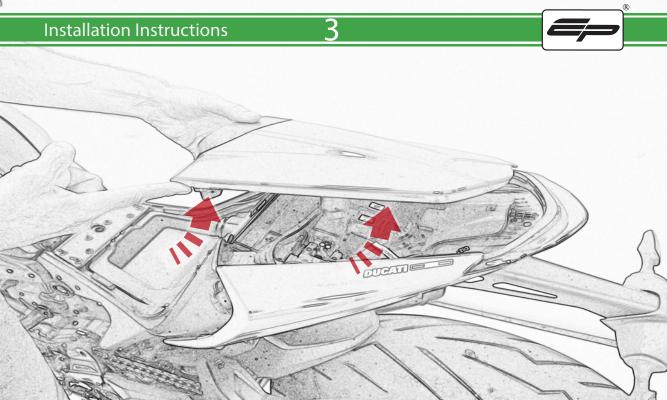


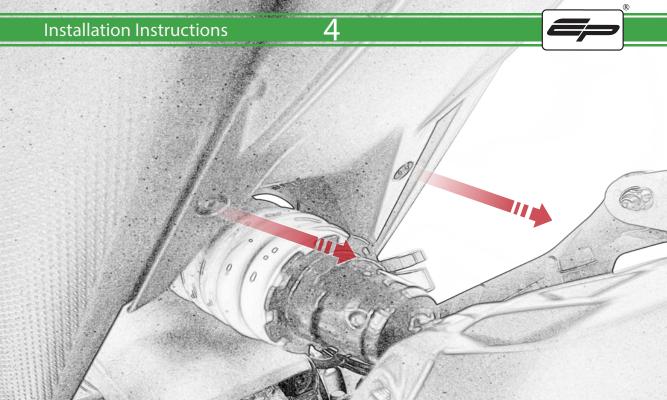


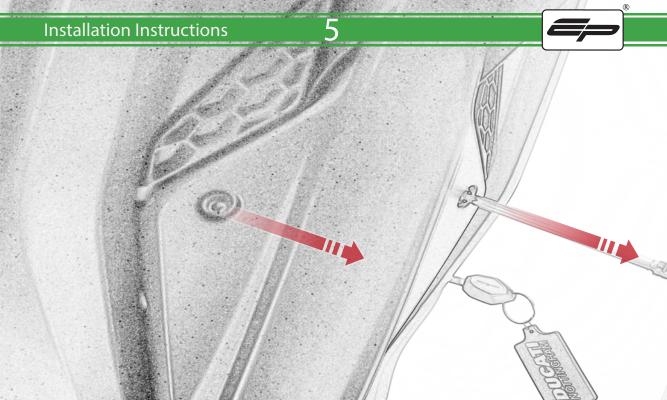





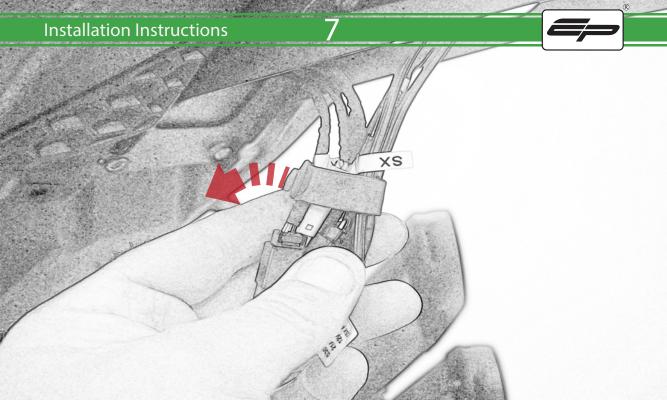


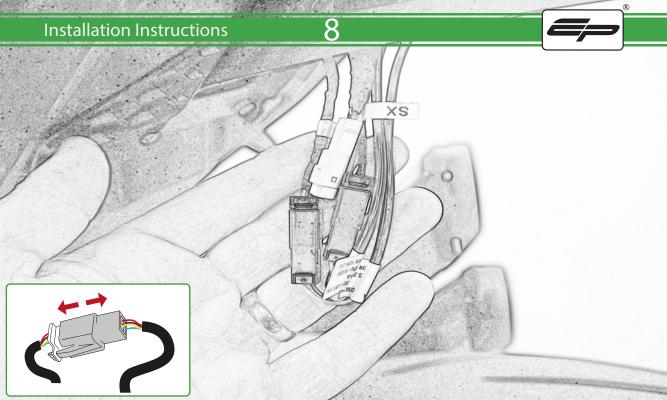


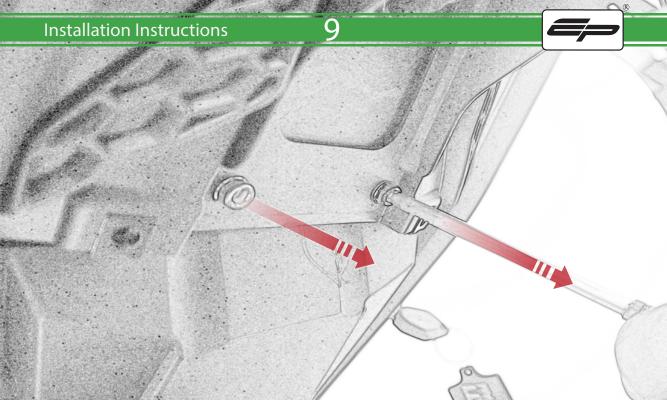


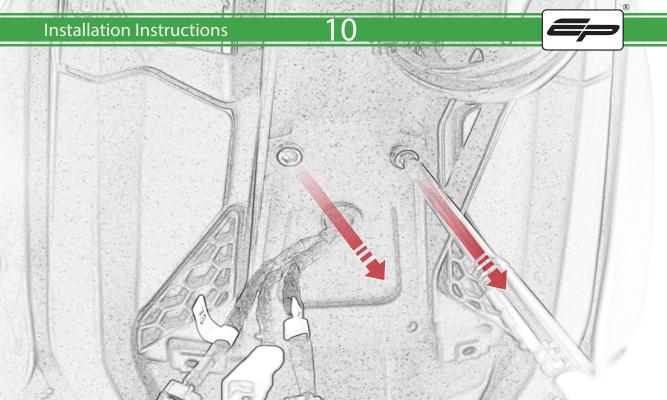


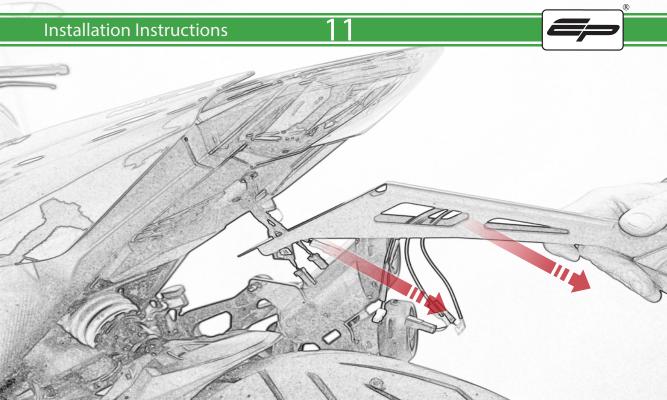


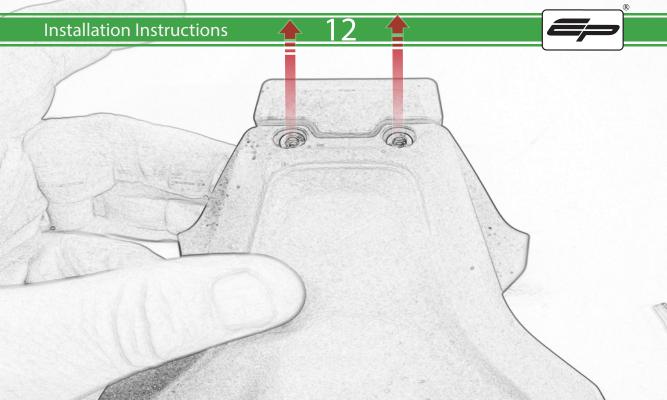


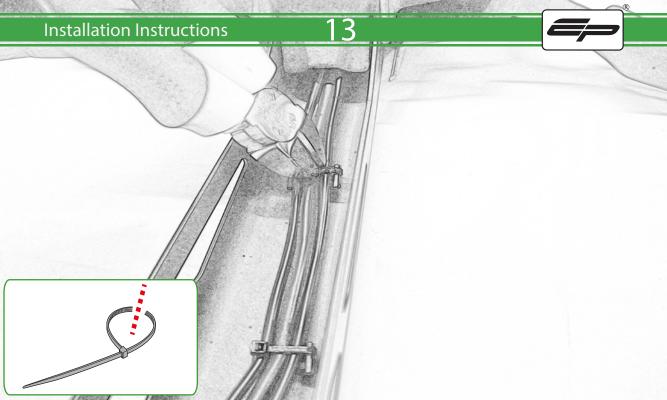


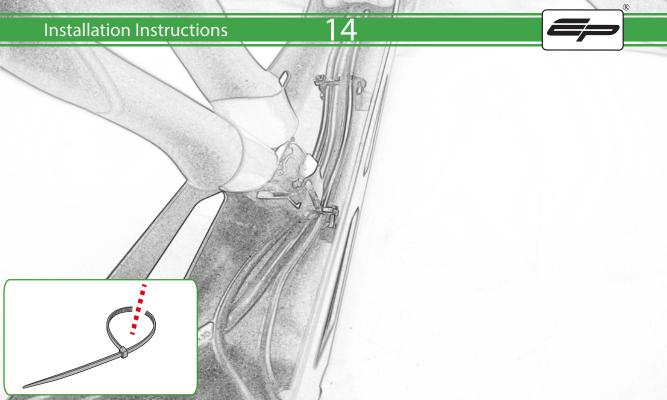


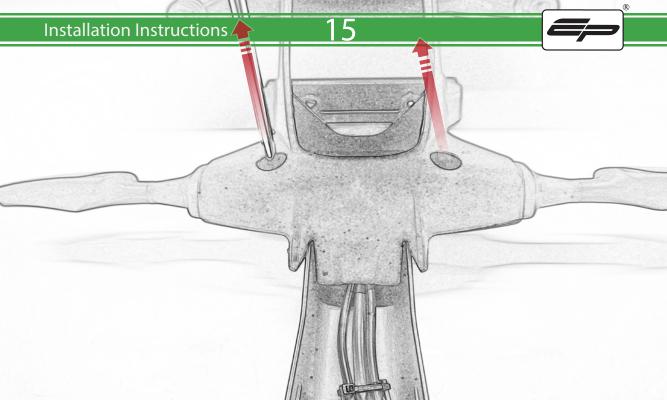


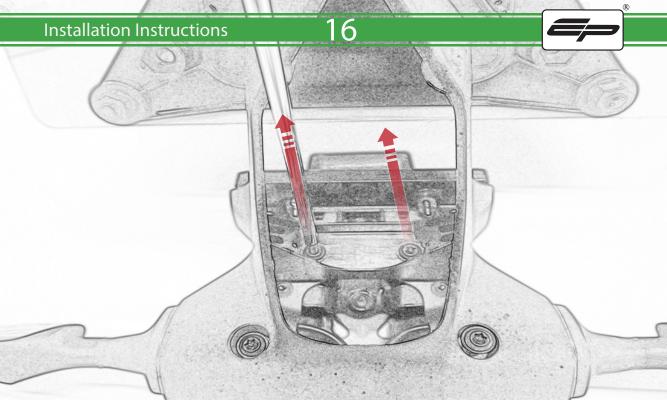


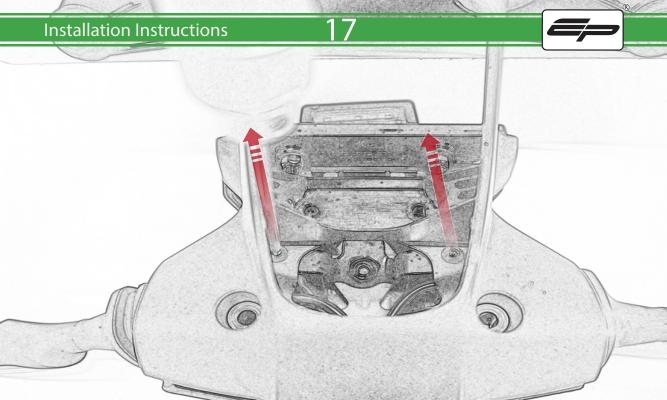

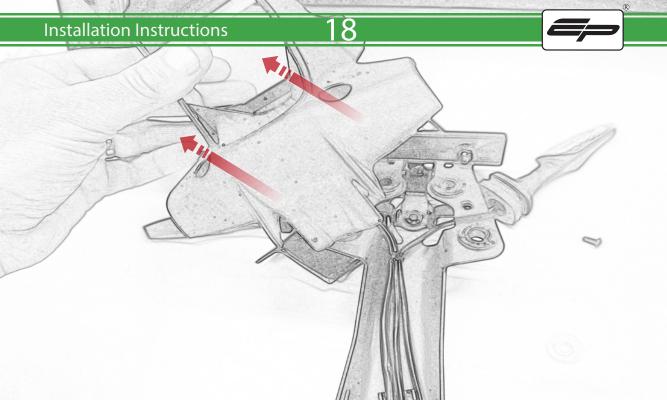


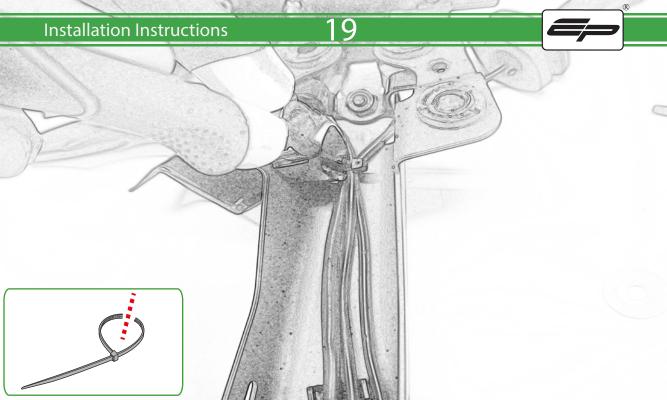


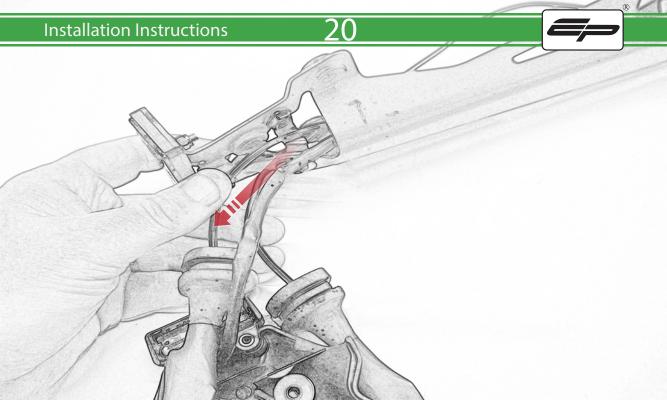

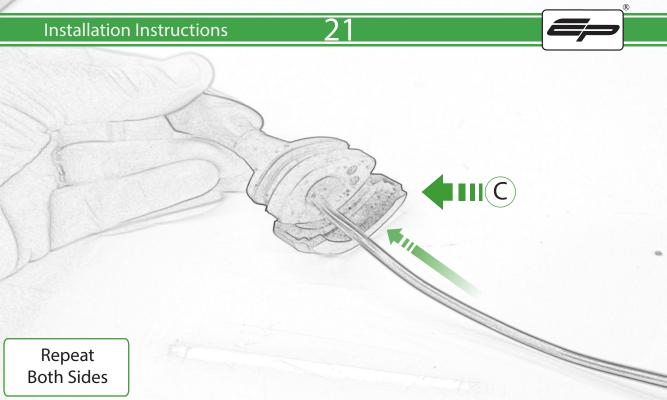



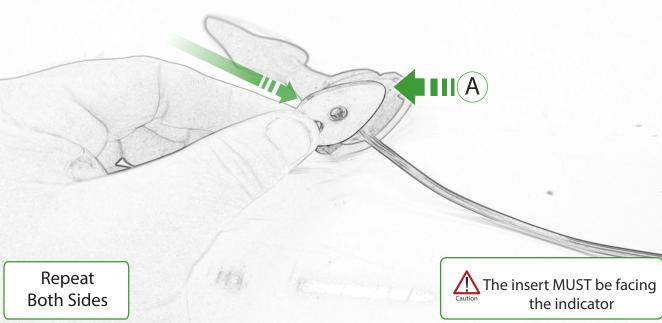

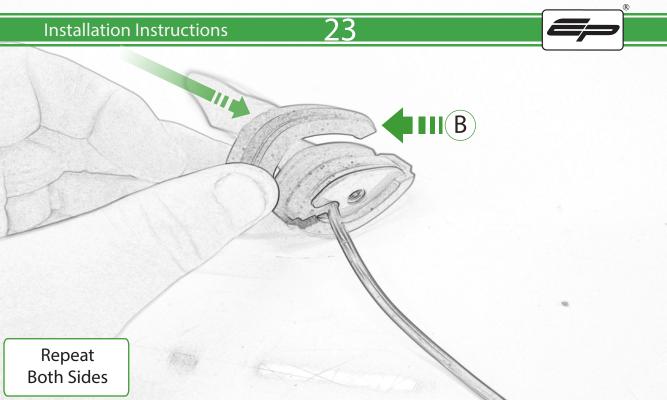
















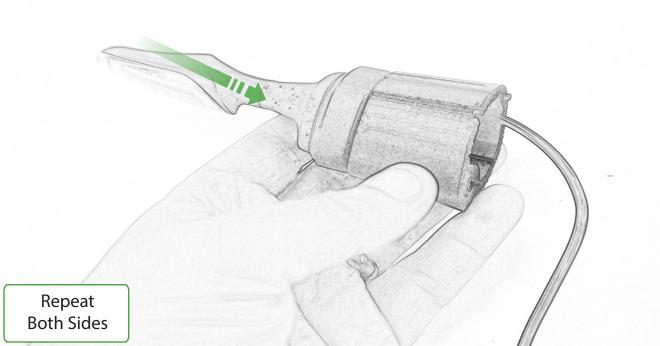

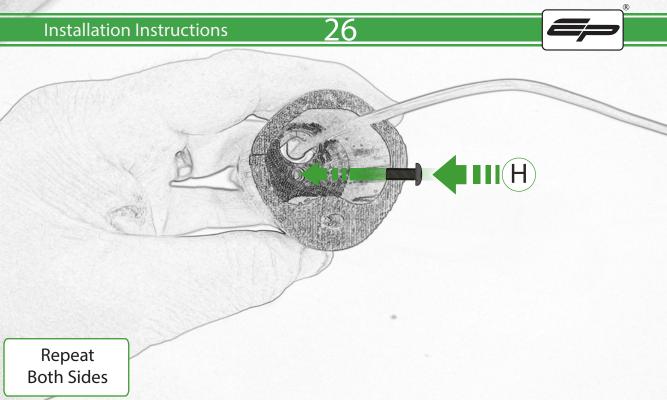


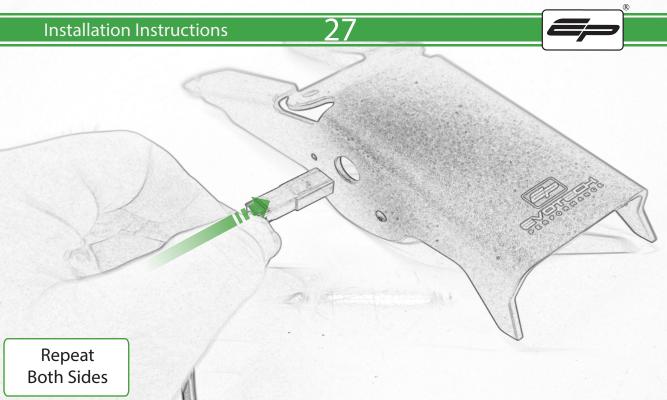


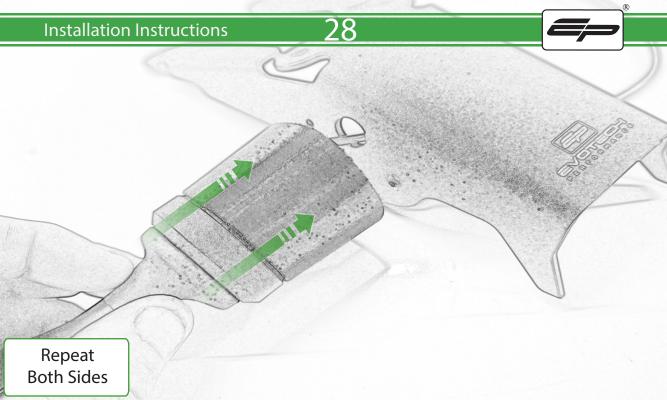

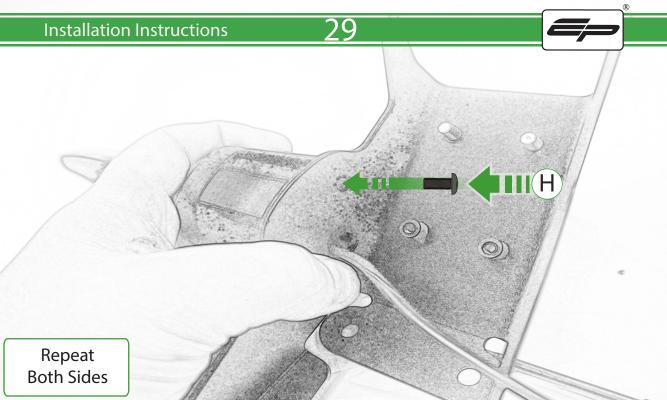




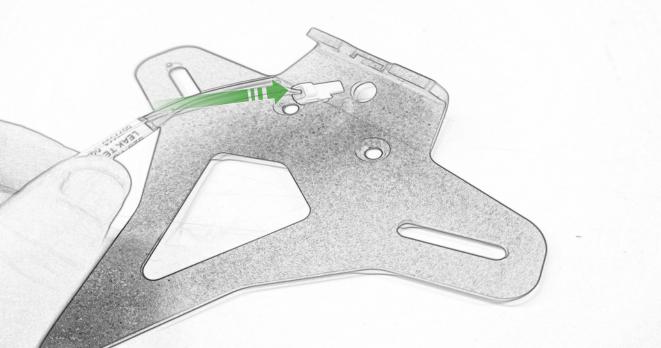


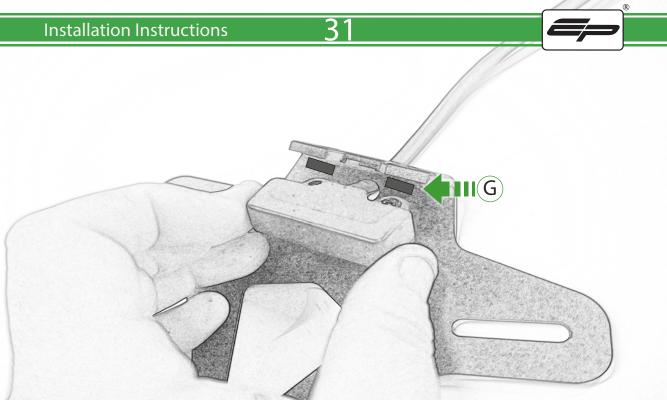



<u>32</u>




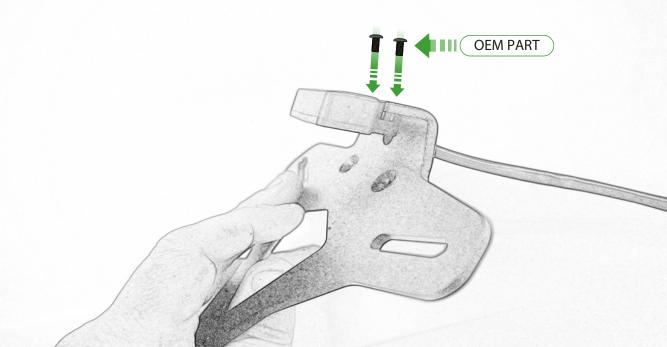


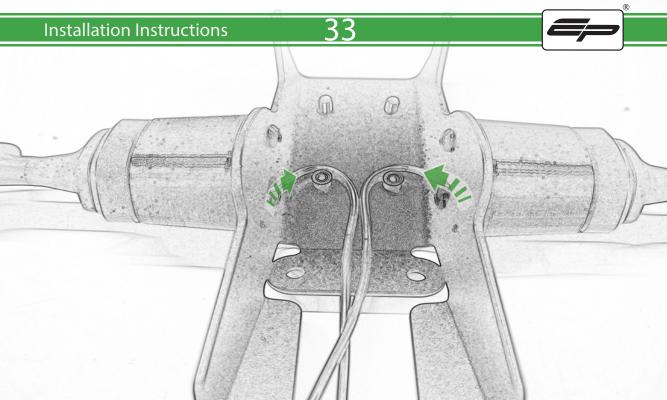


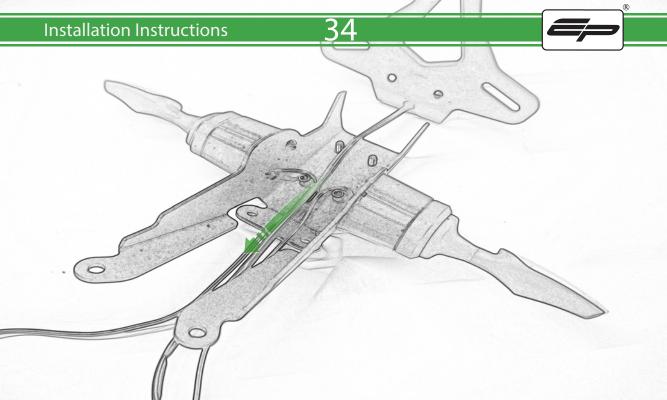

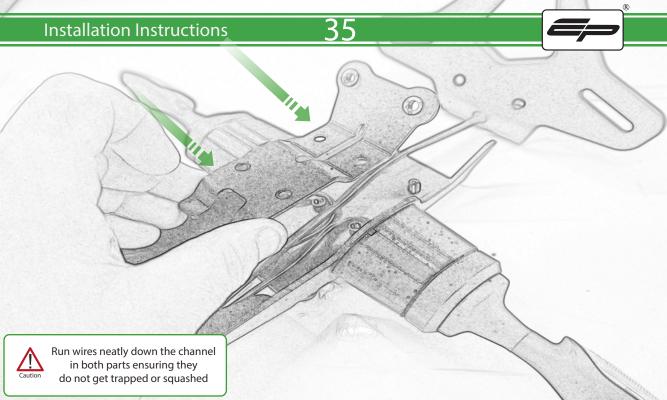

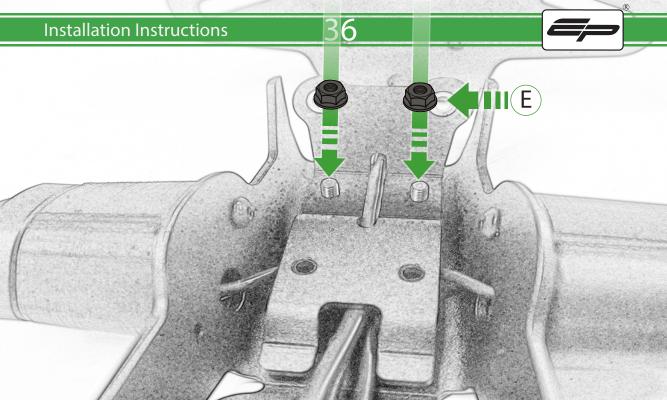


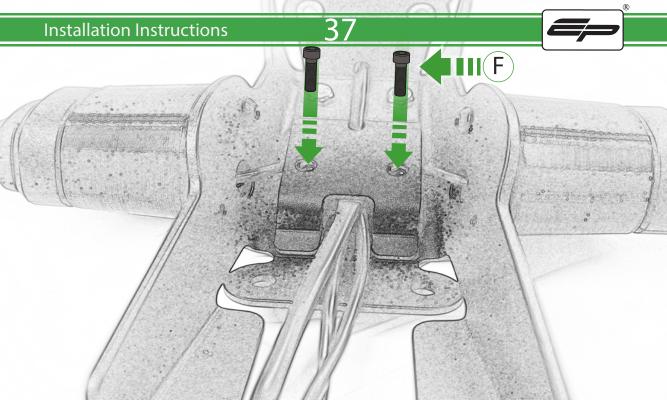


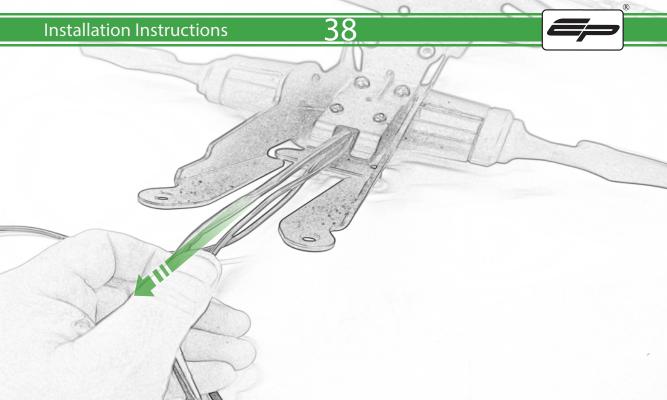








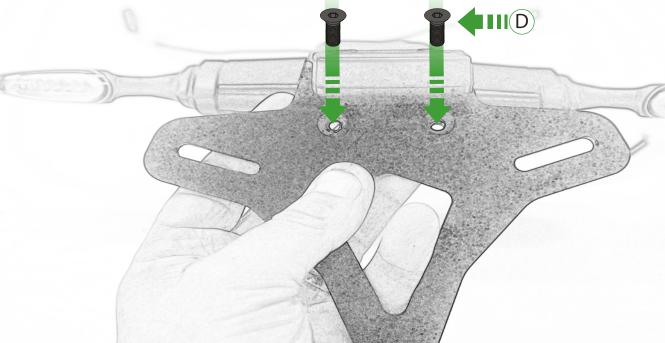


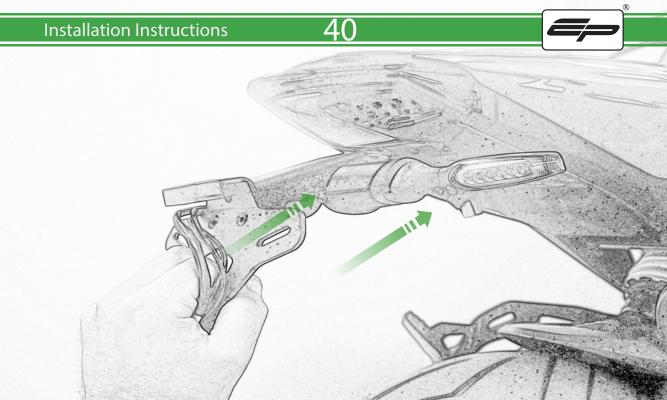


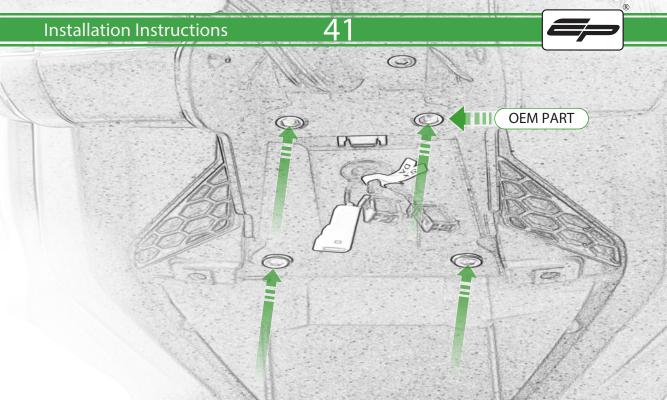


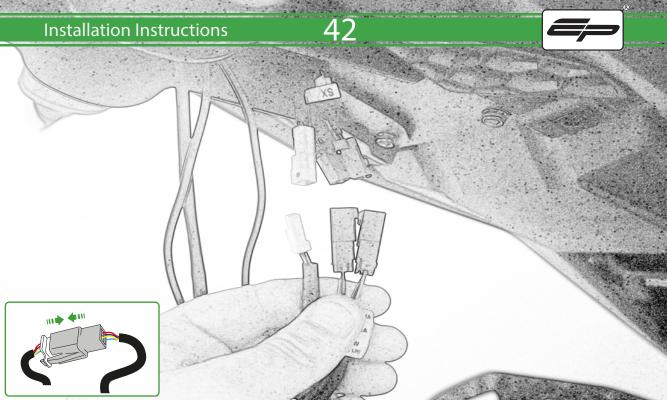


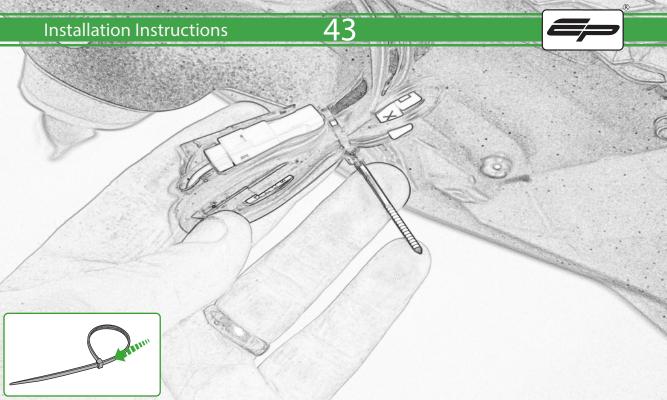

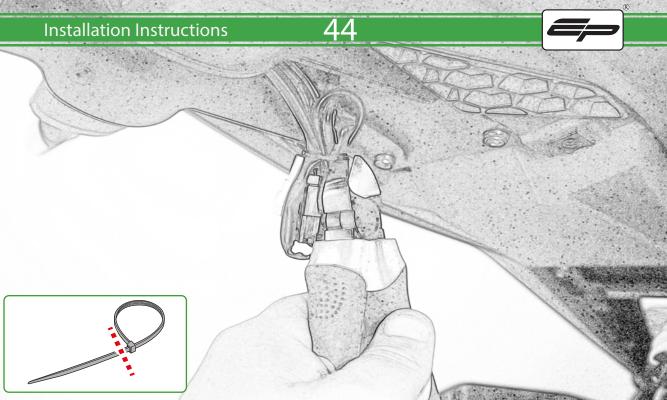


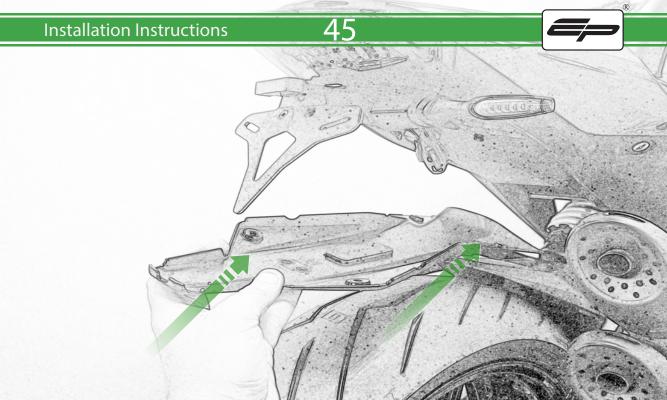

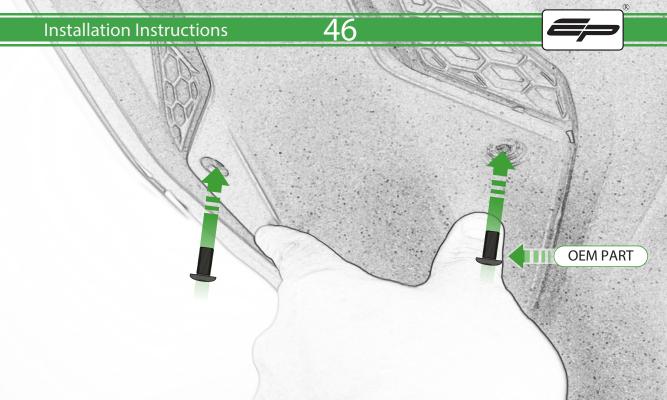

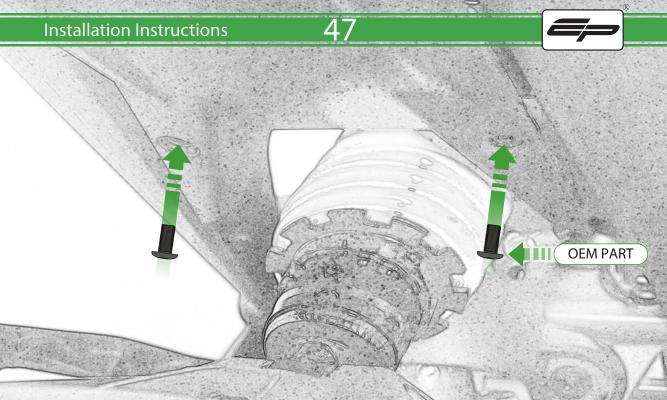











\Lambda ESSENTIAL CHECKS \Lambda




After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed. Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle. It is recommended that periodic inspections are made



to ensure that all fixings are fully tightend.


Installation Instructions



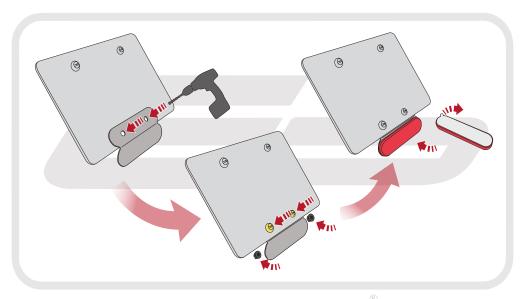





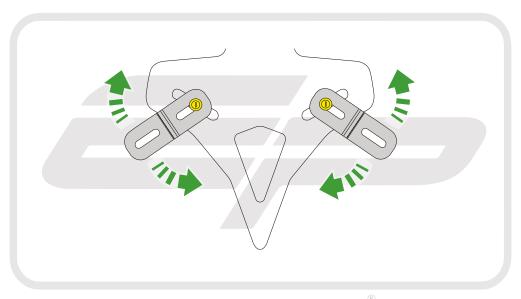





www.evotech-performance.com