





Honda CB1000R Neo Sports Cafe
Crash Protection

Installation Instructions


- Ⓐ 1 x R/H Short Spacer
- Ⓑ 1 x L/H Long Spacer
- Ⓒ 1 x M12 x 95 x 1.25 Caphead
- Ⓓ 1 x M12 x 115 x 1.25 Caphead
- Ⓔ 2 x M12 Washer
- Ⓕ 2 x Polyurethane Washer
- Ⓖ 2 x Bobbin Head

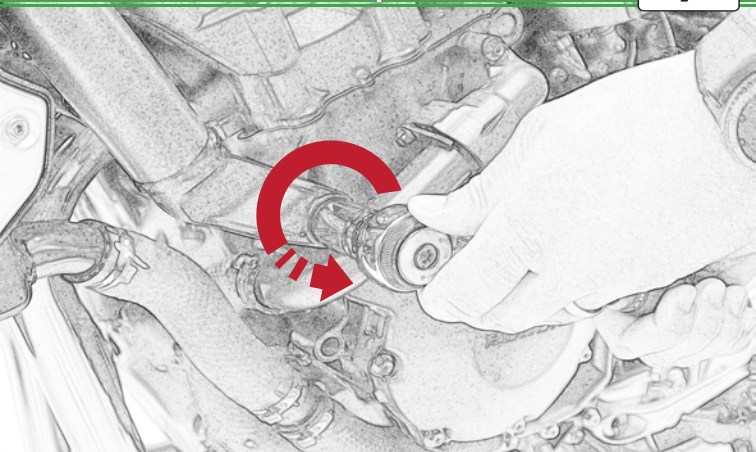

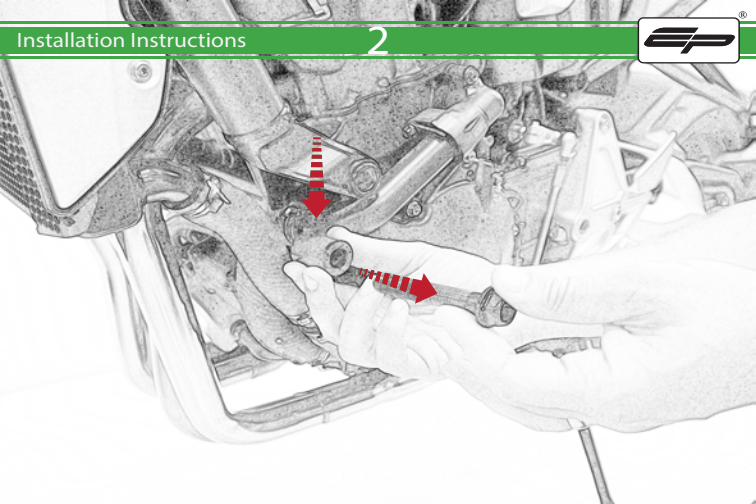


① G IIII →

① F IIII →

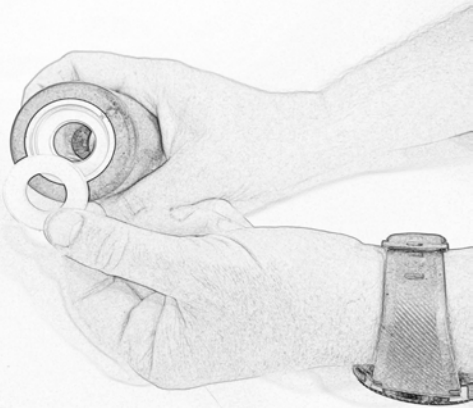





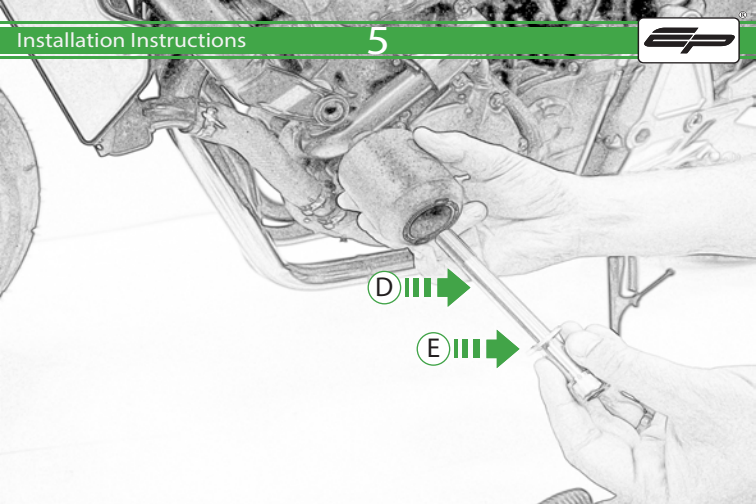




OEM PART

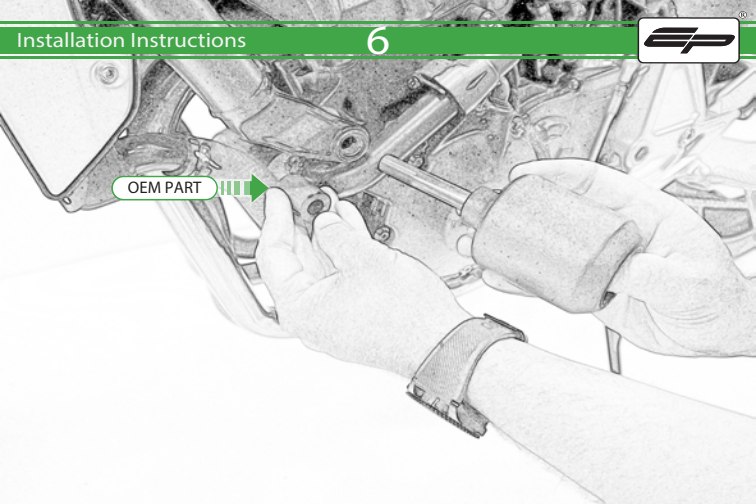


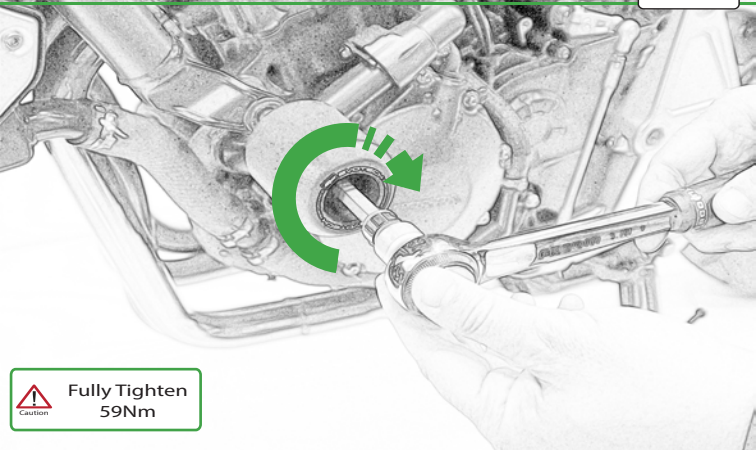



Caution


Fully Tighten
59Nm

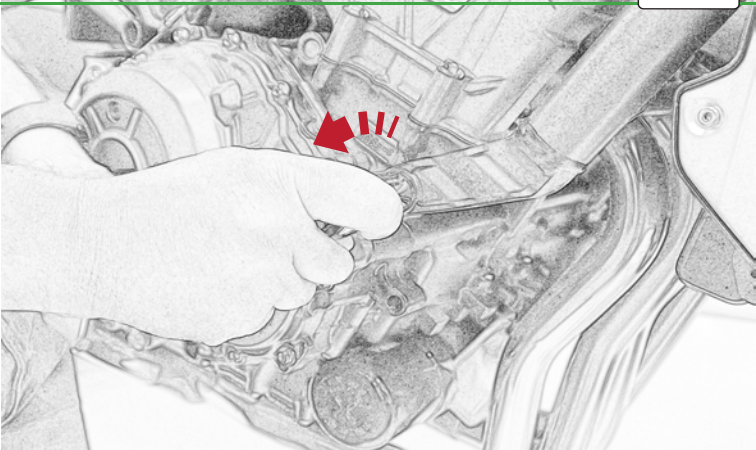


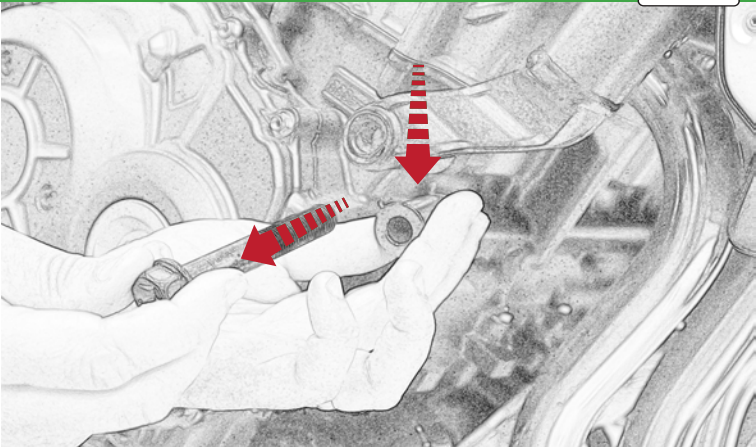


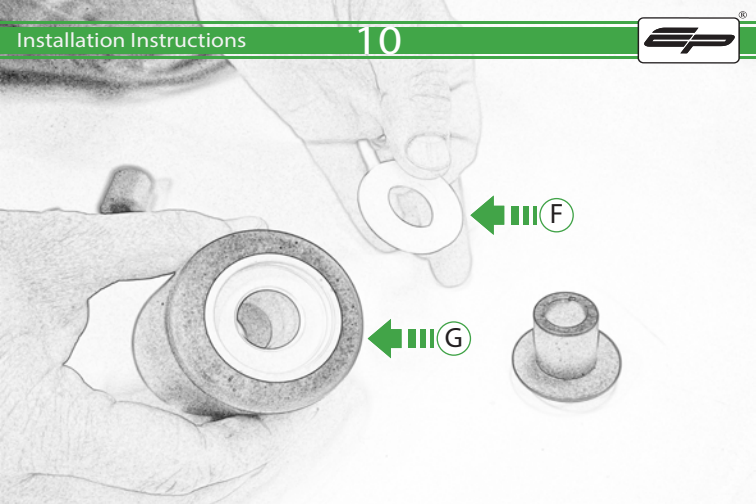

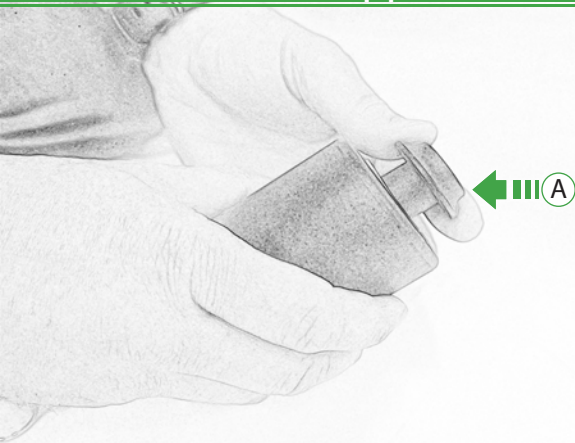

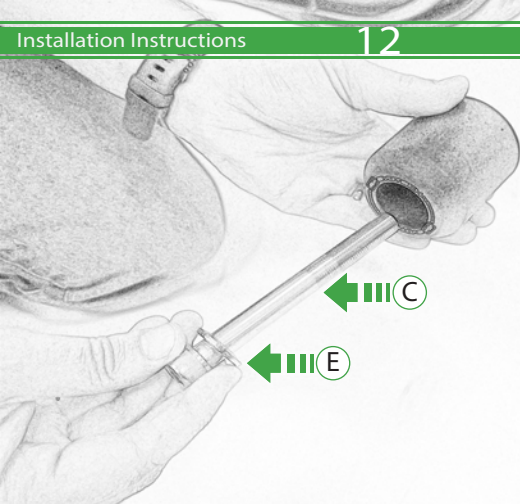

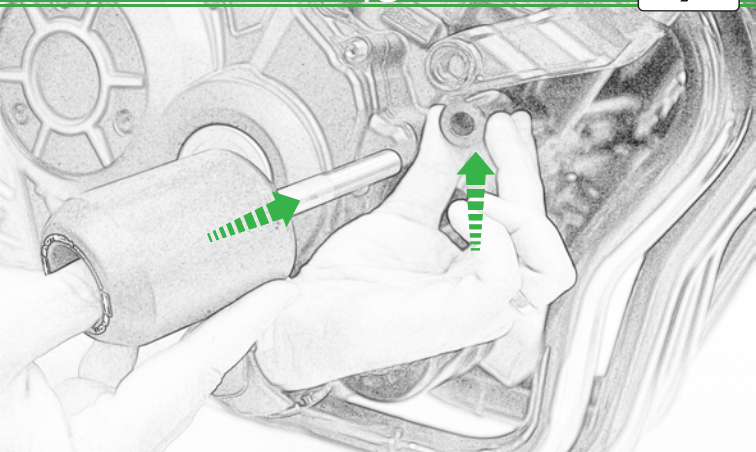

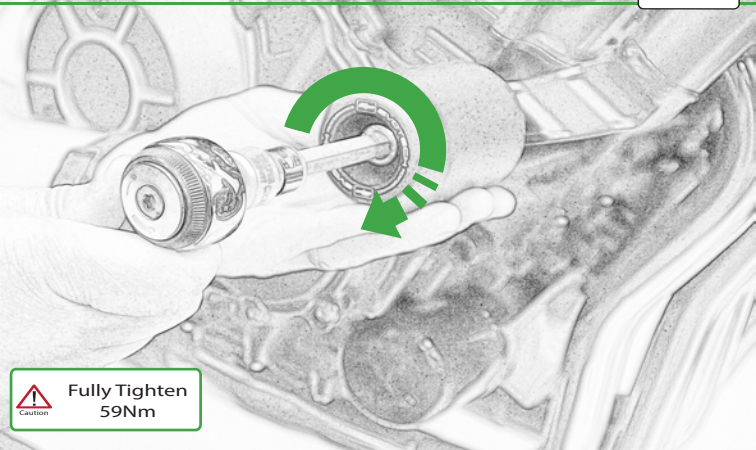

Fully Tighten
59Nm



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com