

www.evotech-performance.com
Triumph Speed Triple RR
Tom Tom Sat Nav Mount

Installation Instructions





R

2 x M4 x 5mm Black Button Head Bolts
 4 x M5 x 12mm Black Button Head Bolts

- A 1 x Main Plate
- **B** 1 x Pivot Plate
- © 1 x Sub Mounting Bracket
- D 2 x M5 x 8mm Black Button Head Bolts
- © 2 x Lobe Screw
- © 2 x Locking Washer
- © 2 x P-clips (No.1)
- H 2 x P-clips (No.2)
- 1 2 x P-clips (No.3)
- ① 2 x P-clips (No.4)
- (K) 2 x M5 Black Washer

- Sub Kit
- (AA) 1 x Pad
- BB 2 x M6 x 35 Cap Head
- CC 2 x M6 x 12mm Black Button Head

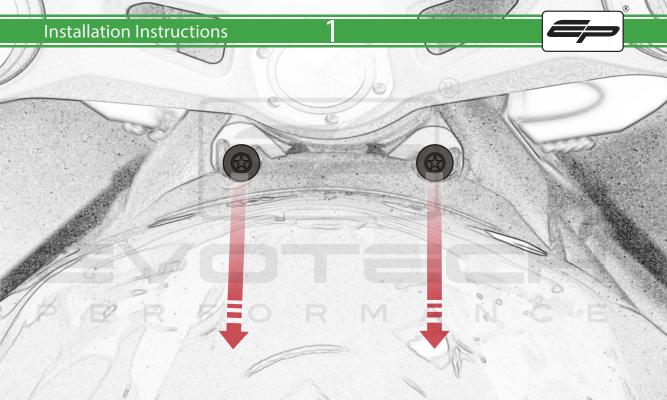


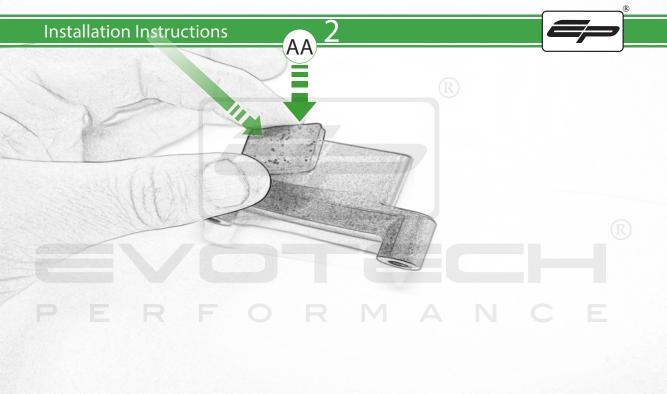



3





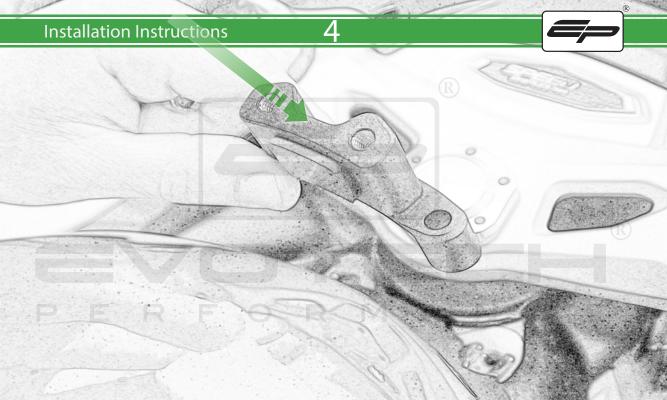

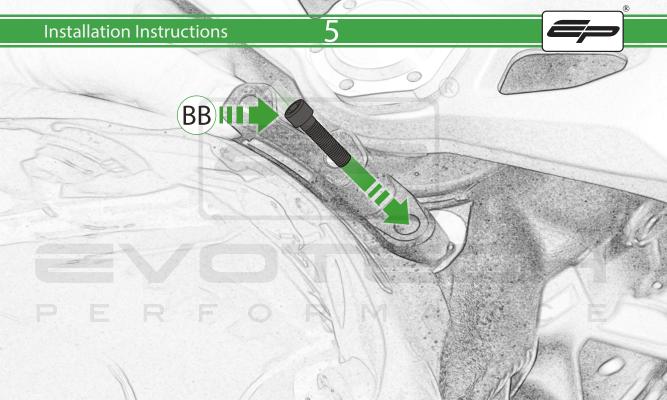

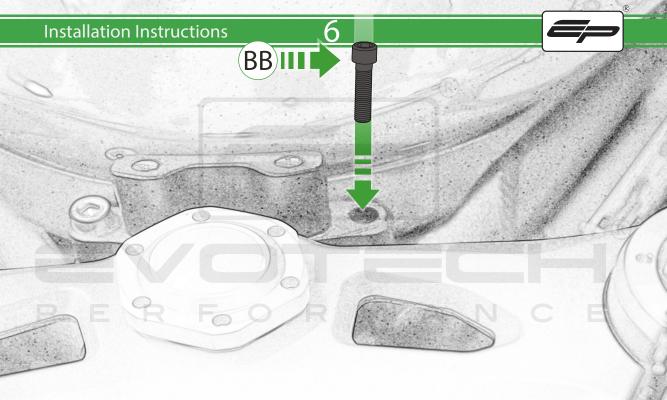












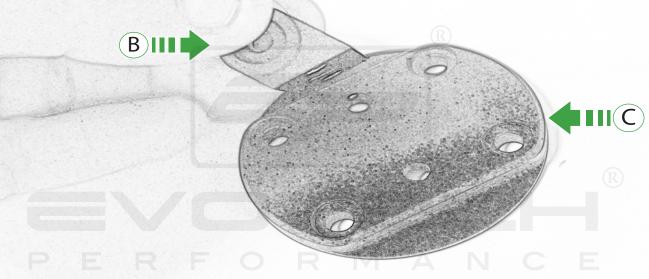


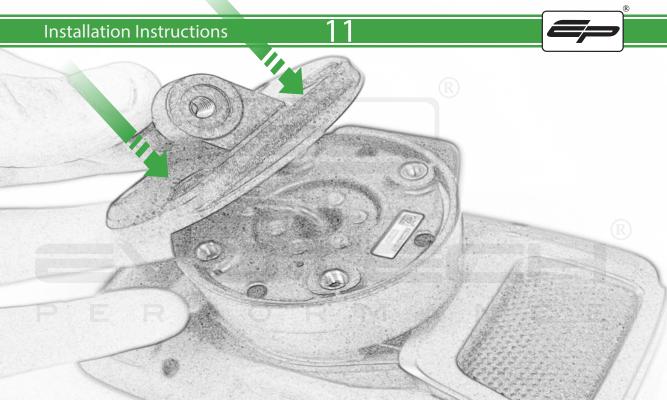


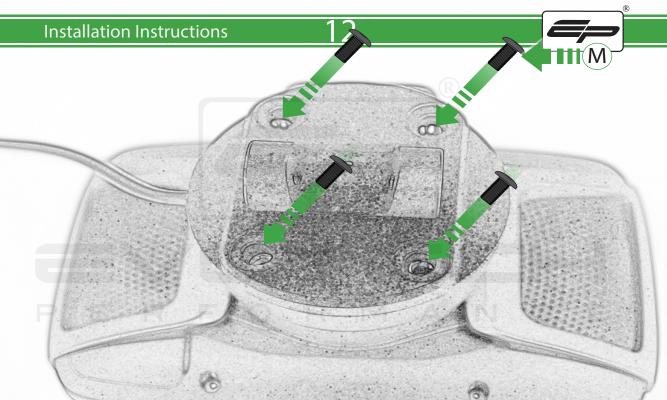






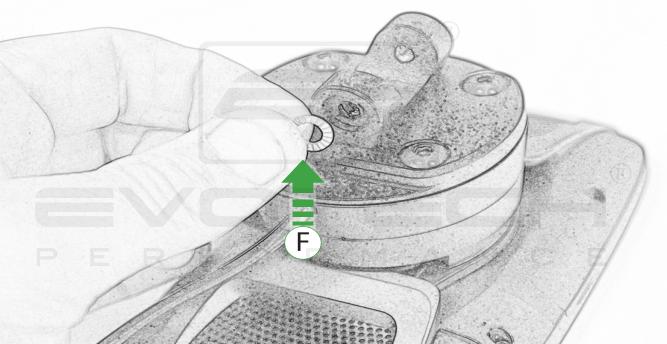

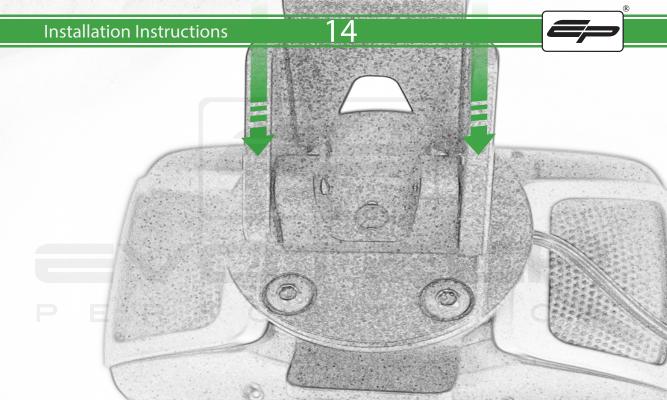

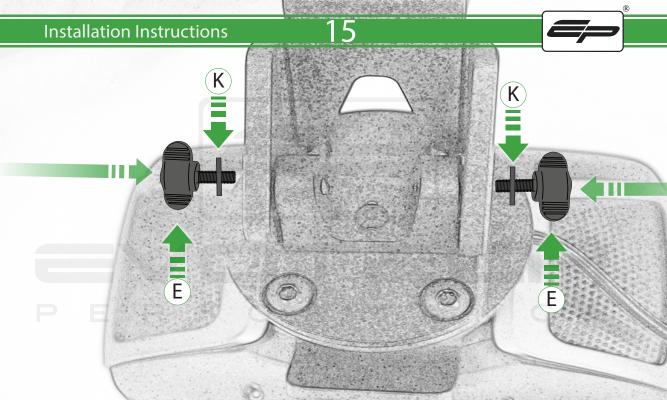





ESSENTIAL CHECKS 1



It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



www.evotech-performance.com