





www.barkbusters.net

FITTING INSTRUCTIONS for...

• Aprilia Tuareg 660 Rally (2025-on)

Preparation

Remove original handguards and bar end weight if fitted.

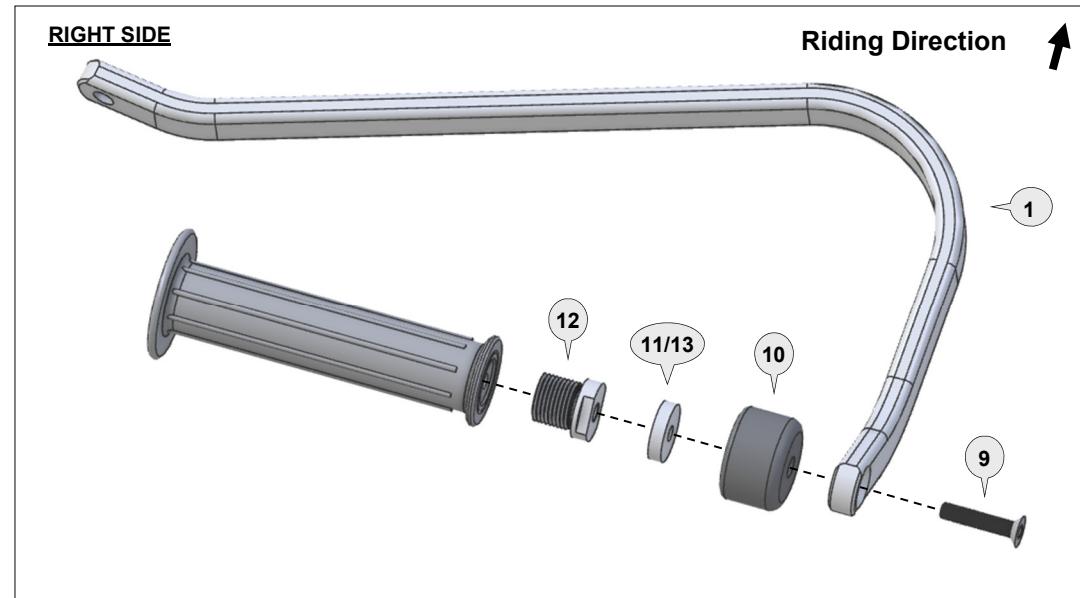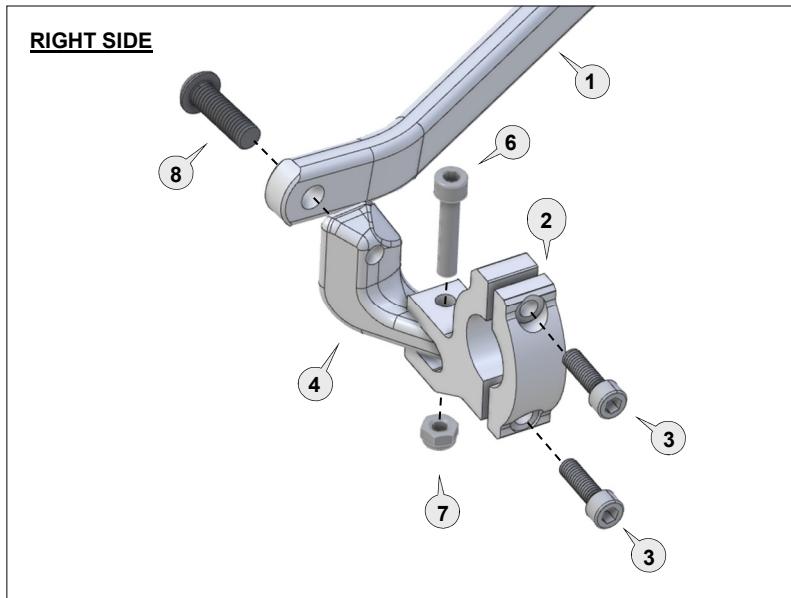

Installation for Right Side.


Repeat for Left side with applicable parts (use the clamp connector (5) for the left side).

- Loosely assemble the clamp (2) to the handlebar as per diagram.
- Attach the handguard backbone (1) with applicable parts to the handlebar end and also to the clamp connector (4).
- Make sure to use the 5mm spacer (11) on the throttle side, and the 7mm spacer (13) on the clutch side.
- Position backbone so it is horizontal when viewed from the side.
- Tighten all bolts in the following order: (9), (8), (3s, evenly) then (6).

Important: Use the specified torque setting over page.


INS-BHG-147-00-NP

Bar Side View

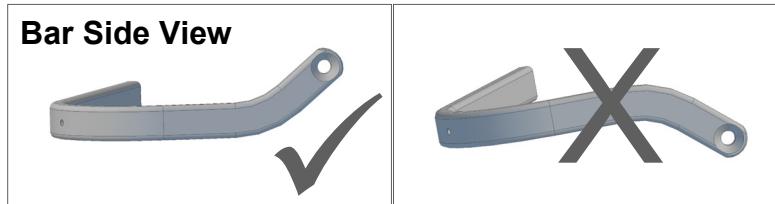

Email: info@barkbusters.net

@BARKBUSTERSHANDGUARDS

1 Aluminium Bar 	2 Multi Fit Clamp 22mm 	3 Socket Head Bolt 20mm 	4 Connector LEFT 	5 Connector RIGHT 	6 Socket Head Bolt 30mm 	7 Nylock Nut 6mm 	8 Flat Head Bolt 25mm 
PN: BAR-V-058 Pcs. Left/Right Pair	PN: MFC-22 Pcs. 2	PN: M6X20SHCSZP Pcs. 4	PN: CP8-L Pcs. 1	PN: CP8-R Pcs. 1	PN: M6X30SHCSZP Pcs. 2	PN: M6LN Pcs. 2	PN: M8X25FHCSZP Pcs. 2

9 Flat Head Bolt 40mm 	10 Bar End Weight 	11 5mm Spacer 	12 Bar End Fitting 	13 7mm Spacer 
PN: M8X40FHCSZP Pcs. 2	PN: BEC2 Pcs. 2	PN: SP05-20-10 Pcs. 1	PN: BESF4 Pcs. 2	PN: SP07-20-8 Pcs. 1

Personalise Your Protection
Guard options sold separately



JET-003

VPS-003



STM-003



BCF-003

Recommended Torque Settings	
M6	10 Nm (7.4 lbf ft)
M8	28 Nm (20.7 lbf ft)

CAUTION:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician. Rideworx accepts no liability for damages caused by improper mounting. All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specified in the table. After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

WARNING:

It is important there is a working clearance (approx 3mm) between the throttle grip end and the handguard to ensure a free closing throttle. Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly. Check periodically that all bolts are tight. Please note that all Rideworx test fitment are done on stock motorcycles with factory standard handle bar, windscreens, etc. and in their original positions.

Disclaimer:

A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.



Email: info@barkbusters.net

